

[Manuals.plus](#) /

› [KHOI1971 KHOI71](#) /

› KHOI1971 Wall Charger AC Adapter Power Compatible with Frozen 2 Sing & Ride Quad Ride on KT1515TG KT1515 KIDTRAX 6V-Volt Battery

KHOI1971 KHOI71 KHOI1971 CUSTOM MADE

KHOI1971 Wall Charger AC Adapter Instruction Manual

For Frozen 2 Sing & Ride Quad Ride-on Models KT1515TG & KT1515 (6V-Volt Battery)

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your KHOI1971 Wall Charger AC Adapter. This charger is specifically designed for use with the Frozen 2 Sing & Ride Quad Ride-on models KT1515TG and KT1515, which utilize a 6V-Volt battery. Please read this manual thoroughly before first use to ensure proper operation and to prevent damage to the charger or your device.



Image: The KH011971 Wall Charger AC Adapter, showing the main unit with specifications, the power cord, and the distinctive grey battery connector.

IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Use this charger only with the specified Frozen 2 Sing & Ride Quad Ride-on models (KT1515TG, KT1515) that have a **GREY BATTERY PLUG**. Using it with incompatible devices or battery plugs (e.g., black battery plugs) may cause damage or fire.

- Do not expose the charger to rain or moisture.
- Do not operate the charger if it has been damaged in any way.
- Unplug the charger from the wall outlet when not in use.
- Keep out of reach of children.
- This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

COMPATIBILITY AND IDENTIFICATION

It is critical to verify the compatibility of your ride-on toy's battery plug before using this charger. This charger is **ONLY** compatible with the Frozen 2 Sing & Ride Quad Ride-on models KT1515TG and KT1515 that feature a **GREY BATTERY PLUG**. There are versions of this ride-on toy with different battery plug types (e.g., black plugs) that are **NOT** compatible with this charger.

**This charger is for
GREY BATTERY PLUG
NOT for BLACK battery plug
model DO NOT TRY
on any other model
IF NOT SURE send question
and PICTURE of your
battery PLUG
There are two version of this
ride on with different
BATTERY plug SEE PICTURE
FOR COMPATIBLE MODEL#**

Image: A visual warning emphasizing that this charger is exclusively for models with a GREY battery plug, and explicitly states it is NOT for black battery plug models.

**100% FULLY TEST
TO WORKS WITH
YOUR DEVICE
(THIS IS FOR
THE CHARGER
ONLY)**



KHOI1971

Image: A close-up view of the grey battery plug connector, showing its distinct color and shape for identification.

If you are unsure about your ride-on's battery plug type, please consult the ride-on's original manual or contact the manufacturer with a picture of your battery plug for verification.

SETUP

1. **Unpack:** Carefully remove the charger from its packaging. Inspect it for any visible damage.
2. **Locate Battery Port:** On your Frozen 2 Sing & Ride Quad, locate the battery charging port. Ensure it matches the grey plug of the charger.
3. **Connect Charger to Battery:** Firmly insert the grey battery plug of the charger into the ride-on's battery charging port. Ensure a secure connection.
4. **Connect to Power Outlet:** Plug the charger's AC adapter into a standard wall outlet (100-240V).



Image: The Frozen 2 Sing & Ride Quad Ride-on toy, illustrating the device this charger is designed for.

OPERATING INSTRUCTIONS

Once the charger is connected to both the ride-on's battery and a power outlet, the charging process will begin automatically. The charger does not feature an indicator light to show charging status. Therefore, it is important to follow the recommended charging times provided in your ride-on toy's original manual.

- **Initial Charge:** For first-time use or after extended storage, a full initial charge is recommended. Refer to your ride-on's manual for specific initial charging duration.
- **Recharge Time:** Typical recharge times for a depleted 6V battery can range from 8 to 12 hours. Avoid overcharging.
- **Disconnecting:** Once charging is complete, first unplug the charger from the wall outlet, then disconnect the grey plug from the ride-on's battery port.

Note: This charger is designed to provide a consistent charge. The absence of an indicator light means you must rely on the ride-on's battery life or the manufacturer's recommended charging schedule.

MAINTENANCE

- **Cleaning:** Disconnect the charger from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures. Keep the cord neatly coiled.
- **Inspection:** Periodically inspect the charger's cord and plug for any signs of damage, such as fraying, cuts, or bent prongs. Do not use if damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Charger not charging the ride-on.	Charger not properly plugged into wall outlet. Charger not properly connected to ride-on's battery port. Incompatible battery plug (e.g., black plug instead of grey). Wall outlet is not active. Charger or ride-on battery is faulty.	Ensure charger is securely plugged into a working wall outlet. Verify the grey plug is fully inserted into the ride-on's battery port. Confirm your ride-on has a GREY BATTERY PLUG . This charger is not for black plugs. Test the wall outlet with another device. If issues persist after checking connections and compatibility, the charger or battery may require replacement.
Ride-on battery not holding a charge.	Battery is old or worn out. Battery was not charged for the recommended duration.	Consult the ride-on's manual for battery replacement information. Ensure the battery is charged for the full recommended time (e.g., 8-12 hours).

SPECIFICATIONS

- **Model Number:** KHOI1971 CUSTOM MADE
- **Input Voltage:** 100-240 Volts
- **Amperage:** 1 Amps
- **Wattage:** 240 watts
- **Connectivity Technology:** Plug
- **Connector Type:** Barrel Connector (Grey Plug)
- **Compatible Devices:** KT1515TG, KT1515 Kidtrax Frozen 2 Sing & Ride Quad Ride-on 6V-Volt Battery (with Grey Plug)
- **Item Weight:** 8 ounces
- **Included Components:** Wall Charger

WARRANTY AND SUPPORT

For information regarding warranty, returns, or technical support, please contact the seller directly through the platform where the product was purchased. The manufacturer is KHOI1971 ® CUSTOM MADE.
Seller: [KHOI1971](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B088Q2K1Y7>

More documents and user manuals: <https://manuals.plus/>