

JHY DESIGN 9280-S2

JHY DESIGN Wood Grain Cordless Table Lamp User Manual

Model: 9280-S2

1. INTRODUCTION

Thank you for purchasing the JHY DESIGN Set of 2 Wood Grain Cordless Table Lamps. These lamps are designed to provide a warm, ambient light with an Edison-style bulb, perfect for enhancing the atmosphere of any living space, indoors or outdoors. Their cordless design and built-in timer offer convenience and versatility.

Package Contents

- 2 x Wood Grain Cordless Table Lamps
- 2 x Edison Style LED Bulbs (pre-installed)
- User Manual

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This product is intended for indoor use. While suitable for patio use, avoid direct exposure to rain or excessive moisture.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always insert batteries correctly with regard to polarity (+ and -).
- Remove batteries from the lamp if it will not be used for an extended period.
- Keep batteries out of reach of children.
- Do not attempt to modify or disassemble the lamp. There are no user-serviceable parts inside.
- The LED bulb is integrated and designed for long-term use. Do not attempt to replace the bulb unless specifically instructed by the manufacturer.

- Clean the lamp with a soft, dry cloth only. Do not use abrasive cleaners or solvents.

3. SETUP GUIDE

Battery Installation

Each lamp requires 2 x AAA batteries (not included) for operation.

1. Carefully turn the lamp upside down to access the battery compartment located at the base.
2. Open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image: The base of the lamp with the battery compartment open, showing the insertion of AAA batteries.

Video: A demonstration of how to install the batteries into the base of the JHY DESIGN Wood Grain Cordless Table Lamp.

4. OPERATING INSTRUCTIONS

Turning On/Off

Each lamp features a push-button switch located at the base. Press the switch once to turn the lamp ON. Press it again to turn the lamp OFF.

6-Hour Timer Function

The lamp includes a convenient 6-hour timer function. When the lamp is turned ON, the timer automatically activates. The lamp will remain lit for 6 hours and then automatically turn OFF for 18 hours, repeating this cycle daily. To reset the timer or change the ON cycle, simply turn the lamp OFF and then ON again at your desired start time.



Image: Visual representation of the lamp's 6-hour ON / 18-hour OFF timer function.

Placement and Ambiance

These cordless lamps are highly versatile and can be placed in various locations to create a cozy and romantic atmosphere. Consider placing them in:

- Living rooms
- Bedrooms (as bedside lamps)
- Dining tables (as centerpieces)
- Patios or outdoor entertaining areas (ensure protection from direct weather)
- Bathrooms (for soft, ambient lighting)



Image: Examples of the lamps used in different home environments, including living room, bathroom, dining table, and bedroom.

5. CARE AND MAINTENANCE

- To clean the lamp, gently wipe the wood grain base and glass bulb with a soft, dry cloth. Do not use liquid cleaners or sprays directly on the lamp.
- Ensure the lamp is turned off and batteries are removed before cleaning or if storing for an extended period.
- Avoid dropping the lamp or subjecting it to strong impacts, as this may damage the glass bulb or internal components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with fresh AAA batteries.
Light is dim.	Batteries are low.	Replace with fresh AAA batteries.
Timer function is not working as expected.	Timer cycle was interrupted or started at an undesired time.	Turn the lamp OFF and then ON again to reset the 6-hour timer cycle.
Lamp flickers.	Low battery power.	Replace with fresh AAA batteries.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	JHY DESIGN
Model Number	9280-S2
Dimensions	3.35"D x 3.35"W x 6.5"H
Item Weight	1.2 Pounds (each)
Base Material	Ceramic (with wood grain finish)
Bulb Type	Edison Style LED (integrated)
Power Source	Battery Powered (2 x AAA batteries per lamp, not included)
Special Feature	6-Hour Timer, Cordless
Indoor/Outdoor Usage	Indoor (suitable for covered outdoor areas like patios)
Number of Items	2

8. WARRANTY AND CUSTOMER SUPPORT

JHY DESIGN is committed to providing excellent customer service. This product comes with a 1-MONTH trial period and LIFE-TIME customer service.

If you receive a damaged or defective product, or encounter any issues during use, please do not hesitate to contact us. We will process your inquiry immediately and work to provide a replacement or refund as appropriate. Our customer support team aims to respond to all inquiries within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official JHY DESIGN store on Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question