



[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Professional Party Tent 4x9m Green Instruction Manual

**vidaXL 48540**

# vidaXL Professional Party Tent 4x9m Green Instruction Manual

Model: 48540 | Brand: vidaXL

## 1. INTRODUCTION AND PRODUCT OVERVIEW

---

This manual provides essential information for the safe and correct assembly, operation, and maintenance of your vidaXL Professional Party Tent (Model 48540). Please read these instructions carefully before setting up and using the product. Keep this manual for future reference.

The vidaXL Professional Party Tent is designed as a portable, freestanding shelter, ideal for outdoor gatherings and events. It features a robust alloy steel frame and a durable 90 g/m<sup>2</sup> polyethylene cover, offering UV and water-resistant properties. The tent includes side panels with decorative windows and a zippered door for convenient access.



*Figure 1: Assembled vidaXL Professional Party Tent 4x9m Green. This image shows the complete tent set up in a garden, highlighting its size and design with side windows and an open entrance.*

## 2. SAFETY INFORMATION

---

### Important Safety Warnings:

- This product is designed for temporary use in fair weather conditions only.
- **DO NOT** use this party tent in adverse weather conditions such as strong winds, heavy rain, snow, or storms. Severe weather can cause structural damage and potential injury.
- This product is **NOT** suitable for use as a permanent structure or a carport.
- Ensure the tent is securely anchored to the ground at all times during use to prevent movement or collapse.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Supervise children around the tent to prevent accidents.

For additional safety details, please refer to the official safety information document: [Safety Information \(PDF\)](#).

### 3. PACKAGE CONTENTS

---

Before assembly, verify that all components are present and undamaged. The package typically includes:

- Alloy Steel Frame Components (poles, connectors)
- Polyethylene Roof Cover
- Polyethylene Side Panels with Windows
- Zippered Door Panel
- Anchoring Ropes and Stakes (may vary by package)
- Assembly Instructions (this manual)


If any parts are missing or damaged, please contact customer support before proceeding with assembly.

### 4. SETUP INSTRUCTIONS

---

Assembly of the vidaXL Professional Party Tent is straightforward. It is recommended that at least two people assist with the setup.

1. **Prepare the Area:** Choose a flat, level surface free from sharp objects. Ensure adequate space for the 4 x 9 meter footprint and surrounding anchoring.
2. **Assemble the Frame:** Connect the alloy steel poles using the provided connectors. Follow the diagram in the separate assembly sheet (if included) or refer to the general structure. Ensure all connections are secure.

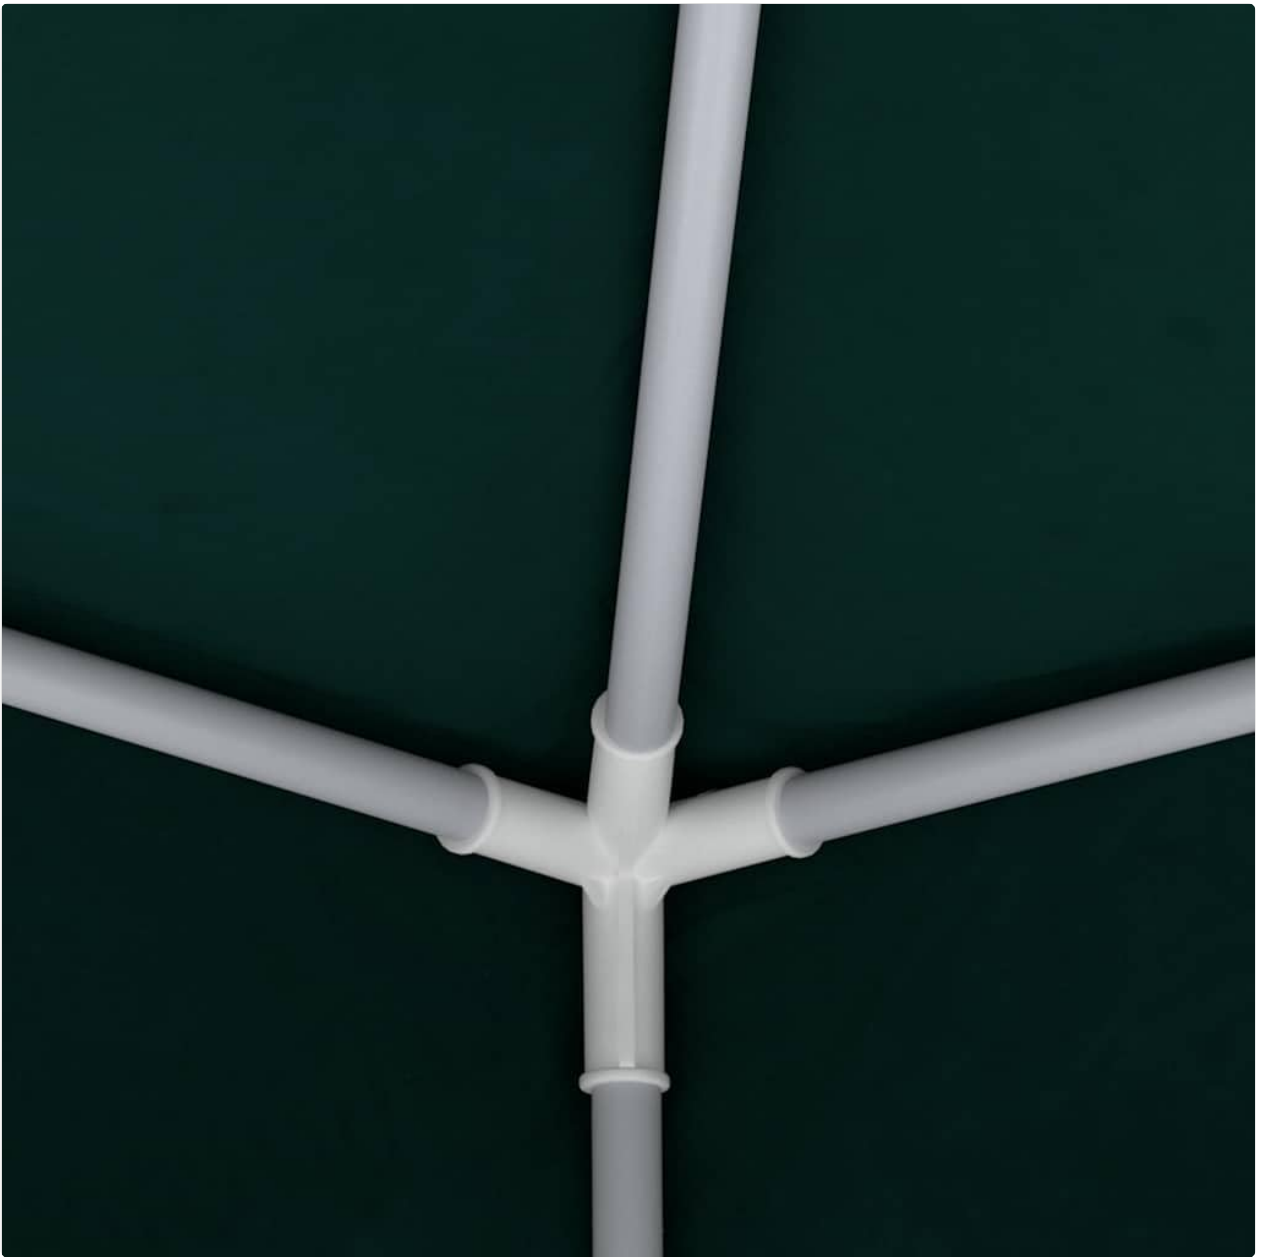

*Figure 2: Detail of a frame connector. This image illustrates how the alloy steel poles connect to form the tent's structure.*

- 3. Attach the Roof Cover:** Carefully drape the polyethylene roof cover over the assembled frame. Ensure it is centered and evenly distributed. Secure the cover to the frame as per the design (e.g., ties, Velcro straps).
- 4. Install Side Panels:** Attach the side panels to the frame. The tent features panels with decorative windows. Position the zippered door panel at your desired entrance point.



*Figure 3: Party tent with side panels. This image shows the tent with all side panels attached, including those with windows.*



*Figure 4: Detail of the zippered door. This image highlights the zipper mechanism for the tent's entrance.*

5. **Secure the Tent:** Use the provided ropes and stakes to firmly anchor the tent to the ground. This is crucial for stability, even in light breezes. Ensure all anchor points are taut.

## 5. OPERATING INSTRUCTIONS

---

The vidaXL Professional Party Tent is designed for temporary outdoor use to provide shade and shelter during events and gatherings.

- **Entry and Exit:** Use the zippered door panel for easy entry and exit. Ensure the zipper is operated smoothly to prevent damage.
- **Ventilation:** The side panels can be partially opened or removed (if designed for removal) to allow for air circulation.
- **Weather Monitoring:** Continuously monitor weather conditions. If strong winds, heavy rain, or other severe weather is forecast or begins, immediately evacuate the tent and disassemble it to prevent damage and ensure safety.

## 6. MAINTENANCE

---

Proper maintenance will extend the lifespan of your party tent.

- **Cleaning:** Clean the polyethylene fabric with a mild soap solution and water. Avoid harsh chemicals or abrasive cleaners, which can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the alloy steel frame for any signs of rust or damage. Clean any dirt or debris from the frame.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Before each use, inspect all poles, connectors, fabric, ropes, and stakes for wear, damage, or corrosion. Replace any damaged parts immediately.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent feels unstable or sways in light wind.	Insufficient anchoring; loose frame connections.	Ensure all ropes are taut and stakes are firmly in the ground. Double-check all frame connections for tightness. <i>Remember: Not for use in strong winds.</i>
Water leakage.	Improper roof cover installation; fabric damage.	Verify the roof cover is correctly positioned and taut. Inspect fabric for tears or holes and repair if necessary. The tent is water-resistant, not fully waterproof in heavy rain.
Zipper difficulty.	Zipper track obstructed; fabric caught.	Clear any obstructions from the zipper path. Gently pull the fabric away from the zipper teeth. Apply a silicone-based lubricant if needed.
Poles do not fit together.	Incorrect pole orientation; debris in connector.	Ensure poles are aligned correctly. Check connectors for debris and clear if found. Do not force connections.

## 8. SPECIFICATIONS

Feature	Detail
<b>Model Number</b>	48540
<b>Dimensions (L x W x H)</b>	4 x 9 x 2.75 meters (157.5 x 354.3 x 108.3 inches)
<b>Color</b>	Green
<b>Roof/Wall Material</b>	90 g/m <sup>2</sup> PE (100% Polyethylene)
<b>Frame Material</b>	Alloy Steel
<b>Item Weight</b>	21 Kilograms
<b>Floor Area</b>	36 Square Meters
<b>UV Protection</b>	Yes
<b>Water Resistance Level</b>	Water-resistant

Feature	Detail
Closure Type	Zipper
Recommended Use	Outdoor Parties

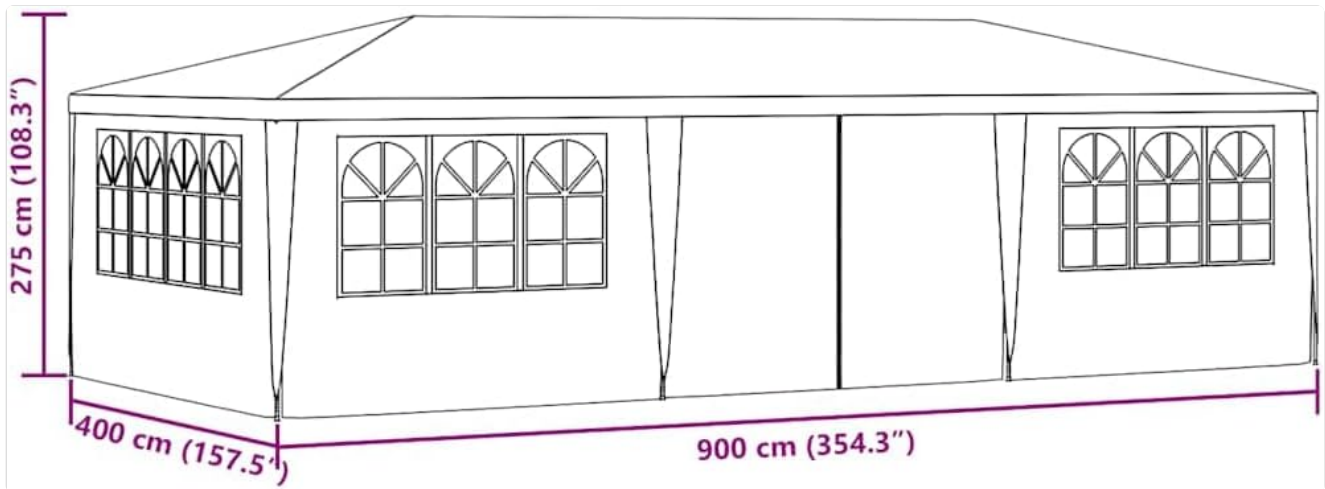


Figure 5: Tent dimensions diagram. This image provides a visual representation of the tent's length, width, and height measurements.

## 9. WARRANTY INFORMATION

---

Specific warranty details for the vidaXL Professional Party Tent (Model 48540) may vary by region and retailer. Please retain your proof of purchase and contact the retailer from whom you purchased the product for information regarding warranty coverage and claims.

## 10. CUSTOMER SUPPORT

---

If you encounter any issues or have questions not covered in this manual, please contact the retailer or vidaXL customer service for assistance. Have your model number (48540) and purchase details ready when contacting support. You can visit the vidaXL store for more information: [vidaXL Store on Amazon.se](https://www.amazon.com/vidaXL).