

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Guub](#) /
- › [Guub D153VG-CM03 Locker/Cabinet Electronic Lock User Manual](#)

Guub D153VG-CM03

Guub D153VG-CM03 Electronic Lock User Manual

Model: D153VG-CM03 | Brand: Guub

1. PRODUCT OVERVIEW

The Guub D153VG-CM03 is a retrofittable electronic lock designed for lockers and cabinets. It operates in public mode, allowing access via a user-defined passcode. This surface-mounted lock features a cam lock structure and does not include an auto-lock function. It is powered by a single CR2032 (3V) battery, providing an estimated battery life of approximately one year with 20 uses per day. The outdoor unit is designed in a vertical orientation.

Key Features:

- **Mode:** Public
- **Unlock Method:** Passcode
- **Structure:** Surface-mounted, Cam lock
- **Auto-lock:** None
- **Battery:** CR2032 (3V)





Figure 1: Front view of the Guub D153VG-CM03 Electronic Lock, showing the keypad and handle.

2. SAFETY INFORMATION

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in product damage, property damage, or personal injury.

- Do not expose the lock to extreme temperatures, direct sunlight, or excessive moisture.
- Use only the specified battery type (CR2032). Incorrect battery types may cause damage or malfunction.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not attempt to disassemble or modify the lock. This will void the warranty and may cause damage.
- Ensure the installation surface is stable and secure to prevent the lock from falling or becoming loose.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Guub D153VG-CM03 Electronic Lock Unit
- Instruction Manual
- Installation Manual
- Mounting Parts (screws, strike plate, etc.)
- CR2032 (3V) Battery

4. SETUP AND INSTALLATION

The D153VG-CM03 is designed for surface-mounted installation on lockers or cabinets. The primary installation step involves securely attaching the strike plate to the cabinet frame to enable the locking mechanism.

Installation Steps:

1. **Prepare the Surface:** Ensure the locker or cabinet door and frame are clean, dry, and free of obstructions.
2. **Position the Lock Unit:** Place the main electronic lock unit on the desired position on the cabinet door. Mark the drilling points for the mounting screws and the spindle hole.
3. **Drill Holes:** Carefully drill the marked holes. Refer to the detailed installation manual for precise measurements and drill bit sizes.
4. **Mount the Lock Unit:** Secure the main lock unit to the cabinet door using the provided mounting screws.
5. **Install the Strike Plate:** Align the strike plate with the lock's cam mechanism on the cabinet frame. Mark the drilling points for the strike plate screws.
6. **Secure the Strike Plate:** Drill the holes for the strike plate and secure it firmly with the provided screws. Ensure the strike plate is positioned so that the cam lock engages smoothly when the door is closed.
7. **Insert Battery:** Open the battery compartment (usually on the back or inside the unit) and insert the CR2032 battery, observing the correct polarity (+/-).
8. **Test Operation:** Close the cabinet door and test the lock's functionality by entering a default or initial passcode (refer to the operating section) to ensure it locks and unlocks correctly.

CM03(ストライクを取り付けて、ロックする) 例)木製ロッカー

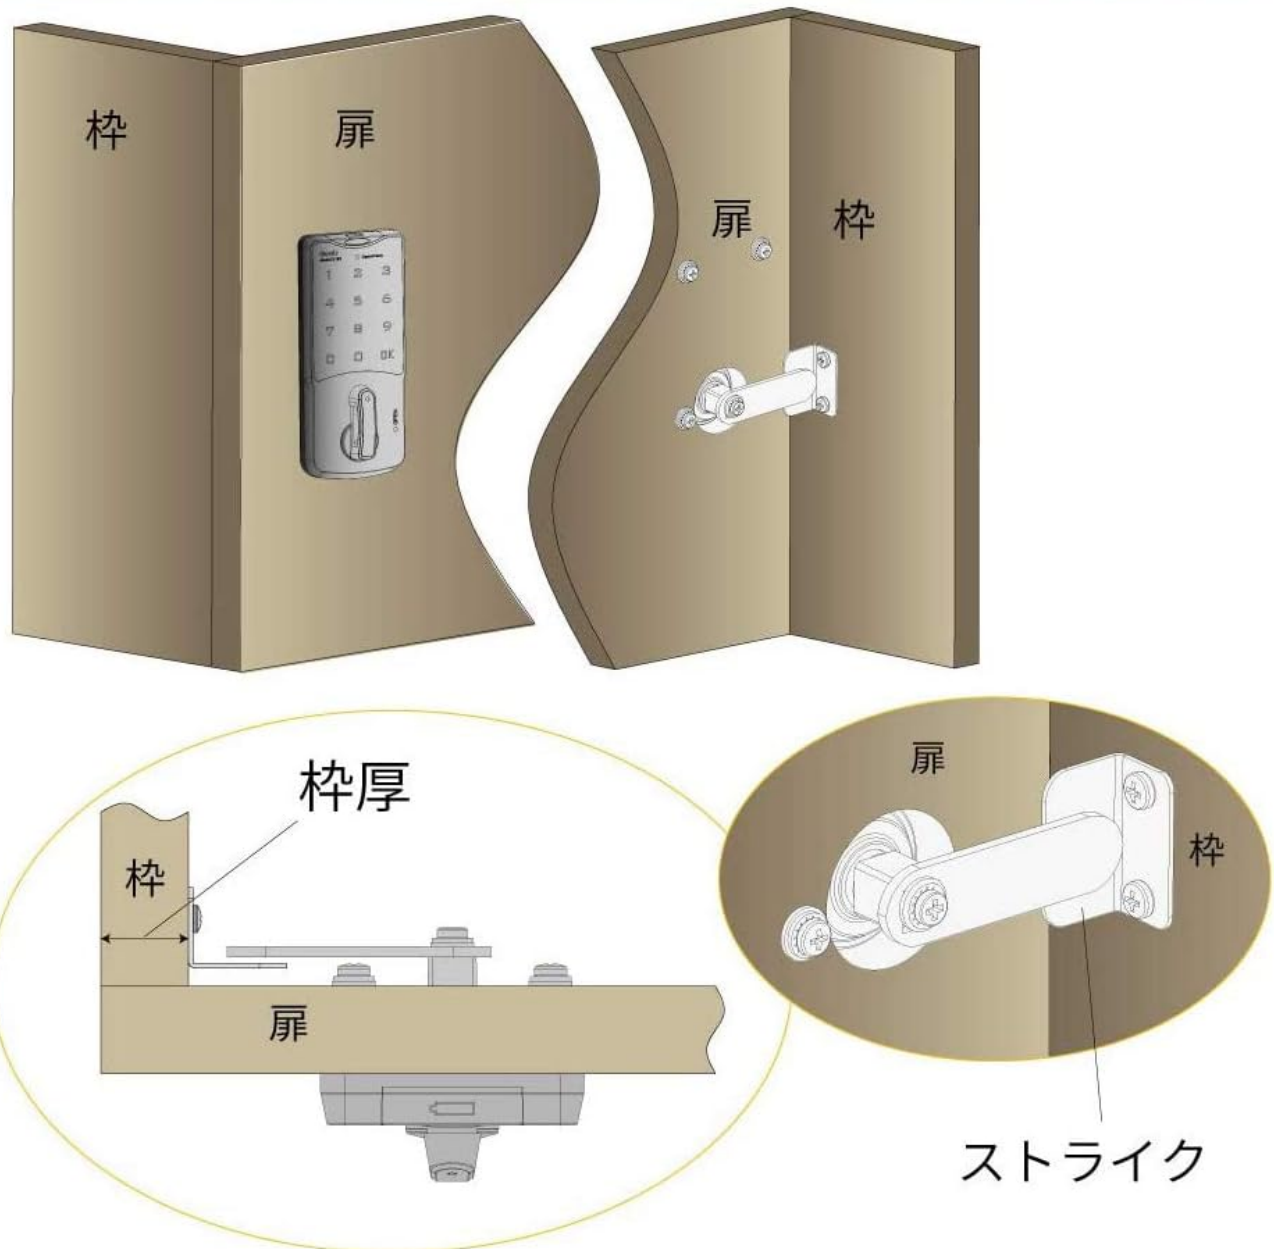


Figure 2: Diagram illustrating the installation of the electronic lock and the strike plate on a wooden locker/cabinet.

5. OPERATING INSTRUCTIONS

The Guub D153VG-CM03 operates in Public Mode, meaning users can set a temporary passcode for each use.

5.1. Initial Setup / Administrator Passcode

Upon first use or after a factory reset, the lock may have a default administrator passcode. Refer to the specific installation manual for this default code. The administrator passcode is used to set or change user passcodes and manage lock settings.

5.2. Locking the Cabinet/Locker

1. Close the cabinet/locker door securely.
2. Enter your desired 4-8 digit passcode on the keypad.
3. Press the "OK" button. The lock will engage, and you will hear a confirmation sound.

Note: In Public Mode, the passcode entered to lock the unit becomes the unlock code for that specific use.

5.3. Unlocking the Cabinet/Locker

1. Enter the passcode that was used to lock the unit.
2. Press the "OK" button. The lock will disengage, and you can open the door.

Note: After unlocking, the previously set passcode is cleared, and the lock is ready for a new user to set a new passcode.

5.4. Changing Administrator Passcode (if applicable)

Refer to your specific installation manual for detailed instructions on how to change the administrator passcode. This typically involves entering the current administrator passcode, followed by a specific command and then the new administrator passcode.

6. MAINTENANCE

6.1. Battery Replacement

The lock is powered by one CR2032 (3V) battery. The estimated battery life is approximately 1 year with 20 uses per day. When the battery is low, the lock may emit a warning sound or light indicator. Replace the battery promptly to ensure continuous operation.

1. Locate the battery compartment, typically on the rear side of the lock unit.
2. Open the battery compartment cover.
3. Remove the old CR2032 battery.
4. Insert a new CR2032 (3V) battery, ensuring correct polarity (+/-).
5. Close the battery compartment cover securely.
6. Test the lock's operation after battery replacement.

6.2. Cleaning

Clean the lock's surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the electronic components or the finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lock does not respond to keypad input.	Dead or low battery.	Replace the CR2032 battery.
Lock does not unlock with correct passcode.	Incorrect passcode entered; temporary glitch.	Re-enter the passcode carefully. If issue persists, remove and reinsert battery to reset (if applicable, check manual for specific reset procedure).
Lock makes unusual sounds or behaves erratically.	Low battery; internal malfunction.	Replace battery. If problem continues, contact customer support.

Problem	Possible Cause	Solution
Lock does not engage when door is closed.	Strike plate misalignment; obstruction.	Check strike plate alignment and adjust if necessary. Ensure no objects are blocking the cam mechanism.

8. SPECIFICATIONS

Brand	Guub
Model Number	D153VG-CM03
Product Dimensions (L x W x H)	11 x 55 x 124 mm (0.43 x 2.17 x 4.88 inches)
Product Weight	300 g (0.66 lbs)
Color	Silver
Battery Type	CR2032 (3V) Manganese Dioxide Lithium
Battery Life (Estimated)	Approx. 1 year (20 uses/day)
Unlock Method	Passcode
Mode	Public
Structure	Surface-mounted, Cam lock
Auto-lock	None

9. WARRANTY AND SUPPORT

This product comes with a warranty. The maximum warranty period is 1 year, subject to the provisions outlined in the warranty card included with your product.

For technical support, troubleshooting assistance, or warranty claims, please refer to the contact information provided in your product's packaging or the official Guub website. Please have your model number (D153VG-CM03) and purchase details ready when contacting support.