

[Manuals.plus](#) /

› [Toozezy](#) /

› Toozezy 2L Pet Water Fountain Instruction Manual (Model 602024623403)

Toozezy 602024623403

Toozezy 2L Pet Water Fountain Instruction Manual

Model: 602024623403

1. INTRODUCTION

Thank you for choosing the Toozezy 2L Pet Water Fountain. This manual provides essential information for the proper setup, operation, and maintenance of your new pet water fountain. Please read these instructions carefully before use to ensure optimal performance and the safety of your pet.



Image 1: Toozey 2L Pet Water Fountain with accessories.

2. PRODUCT FEATURES

- **2-Liter Capacity:** Provides ample water for cats and small to medium-sized dogs.
- **Water Level Window:** Allows easy monitoring of water levels without opening the fountain.
- **Triple Filtration System:** Includes activated carbon, ion exchange resin, and non-woven fabric to filter hair, residue, chlorine, and heavy metals, while softening water.
- **Quiet Operation:** Designed to operate below 30dB for a peaceful environment.
- **Multiple Flow Modes:** Offers four distinct water flow designs (Flower Waterfall, Bubbling Waterfall, Gentle Fountain) to cater to different pet preferences.
- **LED Light Pump:** Features a low-consumption, ultra-silent pump with an LED light and switch for visibility and convenience.
- **Easy to Assemble and Clean:** Simple design for straightforward setup and maintenance.

4 WATER FLOW DESIGNS



Flower Waterfall



Bubbling Waterfall



Bubbling Waterfall



Gentle Fountain

Image 2: Illustration of the four distinct water flow modes.

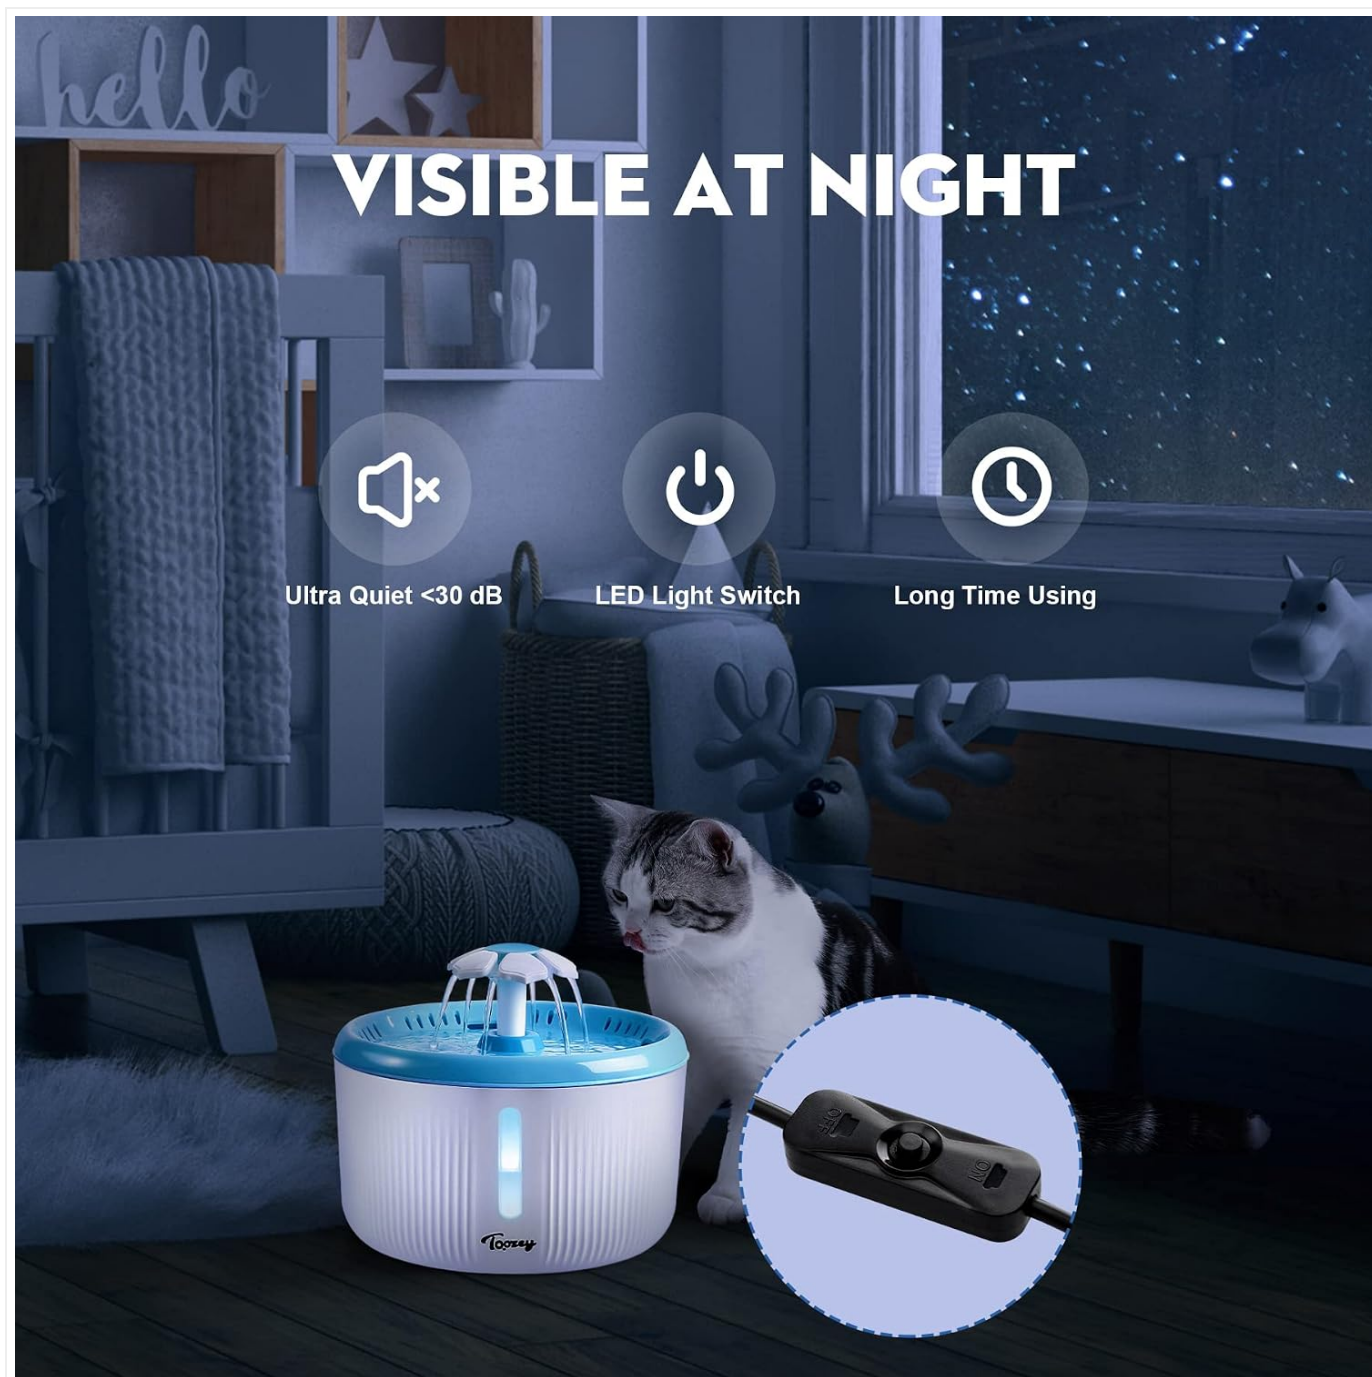


Image 3: The pet fountain's visibility at night with its LED light and quiet operation.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present and undamaged:

- 1 x Tooze Pet Water Fountain (Bowl, Top Lid, Bottom Lid)
- 1 x LED Pump with Switch
- 1 x USB Adapter
- 3 x Replacement Filters
- 1 x Sponge
- 1 x Cleaning Brush Kit (2 brushes)
- 1 x User Manual

PACKAGE DETAIL



Image 4: Detailed view of all items included in the package.

4. SETUP INSTRUCTIONS

Follow these steps to assemble your Toozeey Pet Water Fountain:

1. **Clean Components:** Before first use, thoroughly clean all parts of the fountain (except the pump and adapter) with water and mild soap. Rinse well.
2. **Install Pump:** Place the LED pump into the designated slot at the bottom of the fountain bowl. Ensure the power cord is routed through the groove.
3. **Insert Sponge:** Place the sponge filter over the pump intake.
4. **Add Water:** Fill the fountain bowl with clean water up to the MAX line indicated by the water level window.

5. **Place Filter:** Position one of the replacement filters into the filter tray (bottom lid).
6. **Assemble Lids:** Place the bottom lid (with the filter) onto the fountain bowl, ensuring it sits securely. Then, place the top lid onto the bottom lid.
7. **Attach Flower Spout:** Insert the flower spout or desired water flow accessory into the center of the top lid.
8. **Connect Power:** Connect the USB cable from the pump to the USB adapter, then plug the adapter into a power outlet.



Image 5: Visual guide for fountain assembly.

Video 1: Toozey Pet Fountain setup and installation guide. This video demonstrates the step-by-step process of assembling the fountain, including pump placement, filter installation, and adding water.

5. OPERATING INSTRUCTIONS

Once assembled and plugged in, the fountain will begin circulating water. The LED light on the pump can be turned on or off using the switch on the power cord.

5.1 Water Flow Modes

The Toozey Pet Water Fountain offers various water flow options to encourage your pet to drink more. You can change the mode by adjusting the flower spout or removing it entirely:

- **Flower Waterfall:** Water flows gently from the petals of the flower spout.
- **Bubbling Waterfall:** A more vigorous flow, often appealing to pets who enjoy playing with water.
- **Gentle Fountain:** Achieved by removing the flower spout, providing a calm, bubbling surface.

5.2 Water Level Monitoring

The transparent water level window on the front of the fountain allows you to easily see when the water needs refilling. Always ensure the water level is above the minimum mark to prevent the pump from running dry, which can damage it.

6. MAINTENANCE

Regular cleaning and filter replacement are crucial for maintaining water quality and extending the life of your fountain.

6.1 Daily Maintenance

- Check the water level and refill as needed.
- Wipe down any visible debris or pet hair from the surface.

6.2 Weekly Cleaning

Perform a thorough cleaning once a week:

1. Unplug the fountain from the power outlet.
2. Disassemble all parts: top lid, bottom lid, filter, sponge, and pump.
3. Clean the fountain bowl and lids with water and mild soap. Use the provided cleaning brushes to reach all crevices.
4. Clean the pump: Remove the pump cover and impeller. Clean the impeller and the pump housing with the small brush. Rinse thoroughly.
5. Rinse the sponge filter.
6. Reassemble all parts and refill with fresh water.

Your browser does not support the video tag.

Video 2: Toozey Pet Fountain cleaning and pump installation guide. This video demonstrates how to disassemble, clean, and reassemble the pump and other fountain components.

6.3 Filter Replacement

Replace the filter every 2-4 weeks, or more frequently if you have multiple pets or notice reduced water flow/quality. Always rinse the new filter thoroughly under running water before placing it in the fountain.

TRIPLE FILTRATION SYSTEM



Image 6: Explanation of the triple filtration system.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No water flow or weak flow	• Low water level • Pump clogged with debris/hair • Filter needs cleaning/replacement • Pump impeller dirty or stuck	• Refill water to MAX line. • Clean the pump and impeller (refer to Maintenance section). • Clean or replace the filter. • Ensure pump is properly assembled.
Fountain is noisy	• Low water level • Pump not properly seated • Debris in pump	• Refill water. • Ensure pump is securely placed in its slot. • Clean the pump and impeller.
Water tastes or smells bad	• Filter needs replacement • Fountain needs thorough cleaning	• Replace the filter. • Perform a weekly cleaning.

8. SPECIFICATIONS

Feature	Detail
Brand	Toozey
Model Number	602024623403
Capacity	2 Liters
Material	Resin
Item Dimensions (LxWxH)	8.46 x 8.15 x 5.2 inches
Item Weight	1.32 pounds (600 Grams)
Power Source	Corded Electric
Noise Level	Ultra Silent (<30 dB)

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official Toozey website. Keep your purchase receipt for warranty claims.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question