



Manuals.plus /

- › EasyAcc /
- › EasyAcc Handheld Fan 5000mAh (Model FSZD1-21) Instruction Manual

EasyAcc FSZD1-21

EasyAcc Handheld Fan 5000mAh (Model FSZD1-21) Instruction Manual

Your guide to operating and maintaining your EasyAcc portable fan.

1. INTRODUCTION

Thank you for choosing the EasyAcc Handheld Fan. This portable fan is designed to provide personal cooling with its powerful airflow, long-lasting battery, and versatile design. This manual provides essential information for the safe and efficient use of your fan.



Image 1: The EasyAcc Handheld Fan shown in both handheld and folded desk fan configurations.

2. PRODUCT OVERVIEW

The EasyAcc Handheld Fan features a robust design with user-friendly functionalities:

- **5000mAh Rechargeable Battery:** Provides extended operation for up to 20 hours on the lowest speed setting.
- **4 Adjustable Speeds:** Offers versatile cooling options from a gentle breeze to a powerful airflow.
- **One-Touch Power Off:** Allows for quick shutdown by pressing and holding the power button for 3 seconds.
- **Foldable Design:** Enables use as a handheld fan or a stable desk fan.
- **Low Battery Alert:** LED indicators provide timely reminders for charging.
- **Washable Fan Guard:** Removable guard for easy cleaning and maintenance.

Product Details



Image 2: Detailed views of the fan's components, including the foldable mechanism and charging port.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the fan's battery. Connect the fan to a compatible USB power source (5V/0.5A adapter recommended) using the provided charging cable. The charging time should not exceed 4 hours.

- The LED indicator lights will flash while charging.
- Once fully charged, all LED indicator lights will remain steadily lit.



Image 3: Battery working time at different speed settings (Speed 1: 20h, Speed 2: 12h, Speed 3: 8h, Speed 4: 4h).

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn on the fan, press the power button once. It will start at Speed 1.
- To turn off the fan from any speed setting, press and hold the power button for 3 seconds.

3S Long Press to Shutdown



Image 4: Illustration of the 3-second long press for fan shutdown.

4.2 Speed Control

The fan offers 4 speed settings. Press the power button repeatedly to cycle through the speeds:

1. **Speed 1:** Gentle breeze, suitable for indoor use or napping.
2. **Speed 2:** Moderate airflow, suitable for regular indoor use.
3. **Speed 3:** Strong airflow, ideal for outdoor activities like shopping.
4. **Speed 4:** Powerful airflow, best for outdoor use such as picnics or camping.

4.3 Battery Level Indicator

The LED indicators on the fan handle display the remaining battery power:

- **All 3 lights on:** Battery is fully charged (100%).
- **2 lights on:** Approximately 60% battery remaining.
- **1 light on:** Approximately 30% battery remaining.
- **1 light flashing red:** Low battery, requires charging.

Low Battery Reminder



Image 5: Visual guide to the fan's LED battery level indicators.

4.4 Foldable Functionality

The fan's handle can be folded to convert it from a handheld device to a stable desk fan. Adjust the angle as needed for optimal airflow.

Multiple Angles Foldable Handheld Fan



Image 6: Demonstrates the fan's versatility as both a handheld and foldable desk fan.

5. MAINTENANCE

5.1 Cleaning the Fan Guard

To ensure optimal performance and prolong the lifespan of your fan, regularly clean the fan guard.

1. Turn the fan guard clockwise to unlock and remove it.
2. Clean the guard with water or a damp cloth. Ensure it is completely dry before reattaching.
3. To reattach, align the guard and turn it counter-clockwise until it locks securely in place.



Image 7: Instructions for removing and cleaning the fan guard.

6. TROUBLESHOOTING

If you encounter issues with your EasyAcc Handheld Fan, please refer to the following common solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan for at least 4 hours.
Fan stops working unexpectedly.	Low battery.	Check LED indicators for battery level and recharge if necessary.
Weak airflow.	Fan guard is dirty or speed setting is too low.	Clean the fan guard. Increase the fan speed.
Fan makes unusual noise.	Obstruction in fan blades or loose fan guard.	Turn off the fan, check for obstructions, and ensure the fan guard is securely attached.

7. SPECIFICATIONS

Feature	Detail
Brand	EasyAcc
Model Name	FSZD1-21
Color	White
Power Source	Battery Powered (5000mAh Lithium Ion)
Number of Speeds	4
Working Hours	4-20 hours (depending on speed)
Product Dimensions	4.33"D x 9.25"W x 1.49"H
Item Weight	7.9 ounces (224 Grams)
Voltage	5 Volts
Wattage	5 watts
Control Method	Touch (Push and Hold)
Special Feature	Lightweight, Rechargeable, Foldable

8. SAFETY INFORMATION

Please observe the following safety guidelines to prevent damage to the product and ensure user safety:

- The charging time must be within 4 hours. Avoid overcharging.
- Use an adapter and charging cable that meet the standard of 5V/0.5A.
- Do not operate the fan if the charging standards are not met, as this may lead to product damage or safety hazards.
- Keep the fan away from water and excessive moisture.
- Do not disassemble or attempt to repair the fan yourself. Contact customer support for assistance.
- Keep out of reach of small children.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the EasyAcc official website or contact their customer service directly. Please retain your proof of purchase for any warranty claims.

For further assistance, you may visit the [EasyAcc Store on Amazon](#).