

VIGOROAD PA01

VIGOROAD Safe Sound Personal Alarm User Manual

Model: PA01
Brand: VIGOROAD

1. INTRODUCTION

The VIGOROAD Safe Sound Personal Alarm is a compact and highly effective personal security device designed to provide immediate assistance and deter potential threats. Emitting a powerful 130 dB siren, it is engineered to disorient attackers and draw attention to your situation, offering a crucial window for escape. Additionally, it features an integrated LED light for enhanced visibility in low-light conditions.

This alarm is an ideal companion for individuals of all ages, including women, men, children, and the elderly, providing an added layer of safety during daily activities such as walking, hiking, or commuting.



Video 1: An overview of the VIGOROAD Safe Sound Personal Alarm, demonstrating its features and ease of use. This video highlights the alarm's loud sound and integrated LED light, as well as its compact and portable design.

2. KEY FEATURES

- **130 dB Emergency Alarm:** Produces an extremely loud sound to effectively disorient attackers and alert bystanders to your distress.
- **Integrated LED Light:** A bright LED flashlight is included for use in dark environments, helping to locate keys, illuminate paths, or signal for help.
- **Easy Activation:** Simply pull the contact pin to activate the alarm instantly. Reinsert the pin to deactivate.
- **Compact & Portable Design:** Small and lightweight, designed to be easily carried on keychains, belts, purses, bags, or backpacks.
- **Durable Construction:** Made from environmental and durable ABS materials for resistance to falls.
- **Reusable:** The alarm can be used repeatedly by reinserting the pin after activation.

130 Decibel super sound Alarm

Calls for help & Maximizes Attention



130
DECIBEL ALARM

Effectively scare attackers in danger and
seek people around for help

Image 1: The 130 dB alarm is designed to effectively scare attackers and draw attention.

Safety LED Flashlight

Use in low light conditions

TO USE THE FLASH
LIGHTPRESS AND HOLD
THE BOTTON

Wide Angle



Image 2: The integrated LED flashlight provides illumination for various low-light situations.

3. SETUP

Your VIGOROAD Safe Sound Personal Alarm comes pre-installed with 3 LR44 batteries, ready for immediate use. No complex setup or charging is required before first use.

1. **Unpack:** Carefully remove the personal alarm from its packaging.
2. **Initial Test:** It is recommended to perform a quick test of the alarm in a safe environment to familiarize yourself with its sound and operation. Pull the contact pin to activate, and reinsert it to stop the alarm.
3. **Attachment:** Attach the alarm to your desired location using the integrated keychain clip. Common attachment points include keychains, belt loops, purses, backpacks, or even shoelaces for children.

Simple to use & Highest Quality

Adopted environmental and durable ABS materials resistance to fall

To activate alarm Simply remove the Hand strap pin

130
DECIBEL ALARM



Image 3: The alarm is simple to use; just pull the hand strap pin to activate.

4. OPERATION

4.1 Activating the Alarm

- To activate the 130 dB siren, firmly pull the contact pin located on the side of the alarm away from the main unit. The alarm will sound immediately.
- The loud noise is designed to startle and disorient an aggressor, providing you with an opportunity to escape or call for help.

4.2 Using the LED Light

- To turn on the LED light, locate the small button on the side of the alarm (opposite the contact pin) and press and hold it.
- Release the button to turn off the LED light.
- The LED light is useful for navigating dark areas, finding items in your bag, or as a signaling tool.

4.3 Deactivating the Alarm

- To stop the alarm, simply reinsert the contact pin back into the alarm unit. Ensure the pin is fully seated to prevent accidental re-activation.

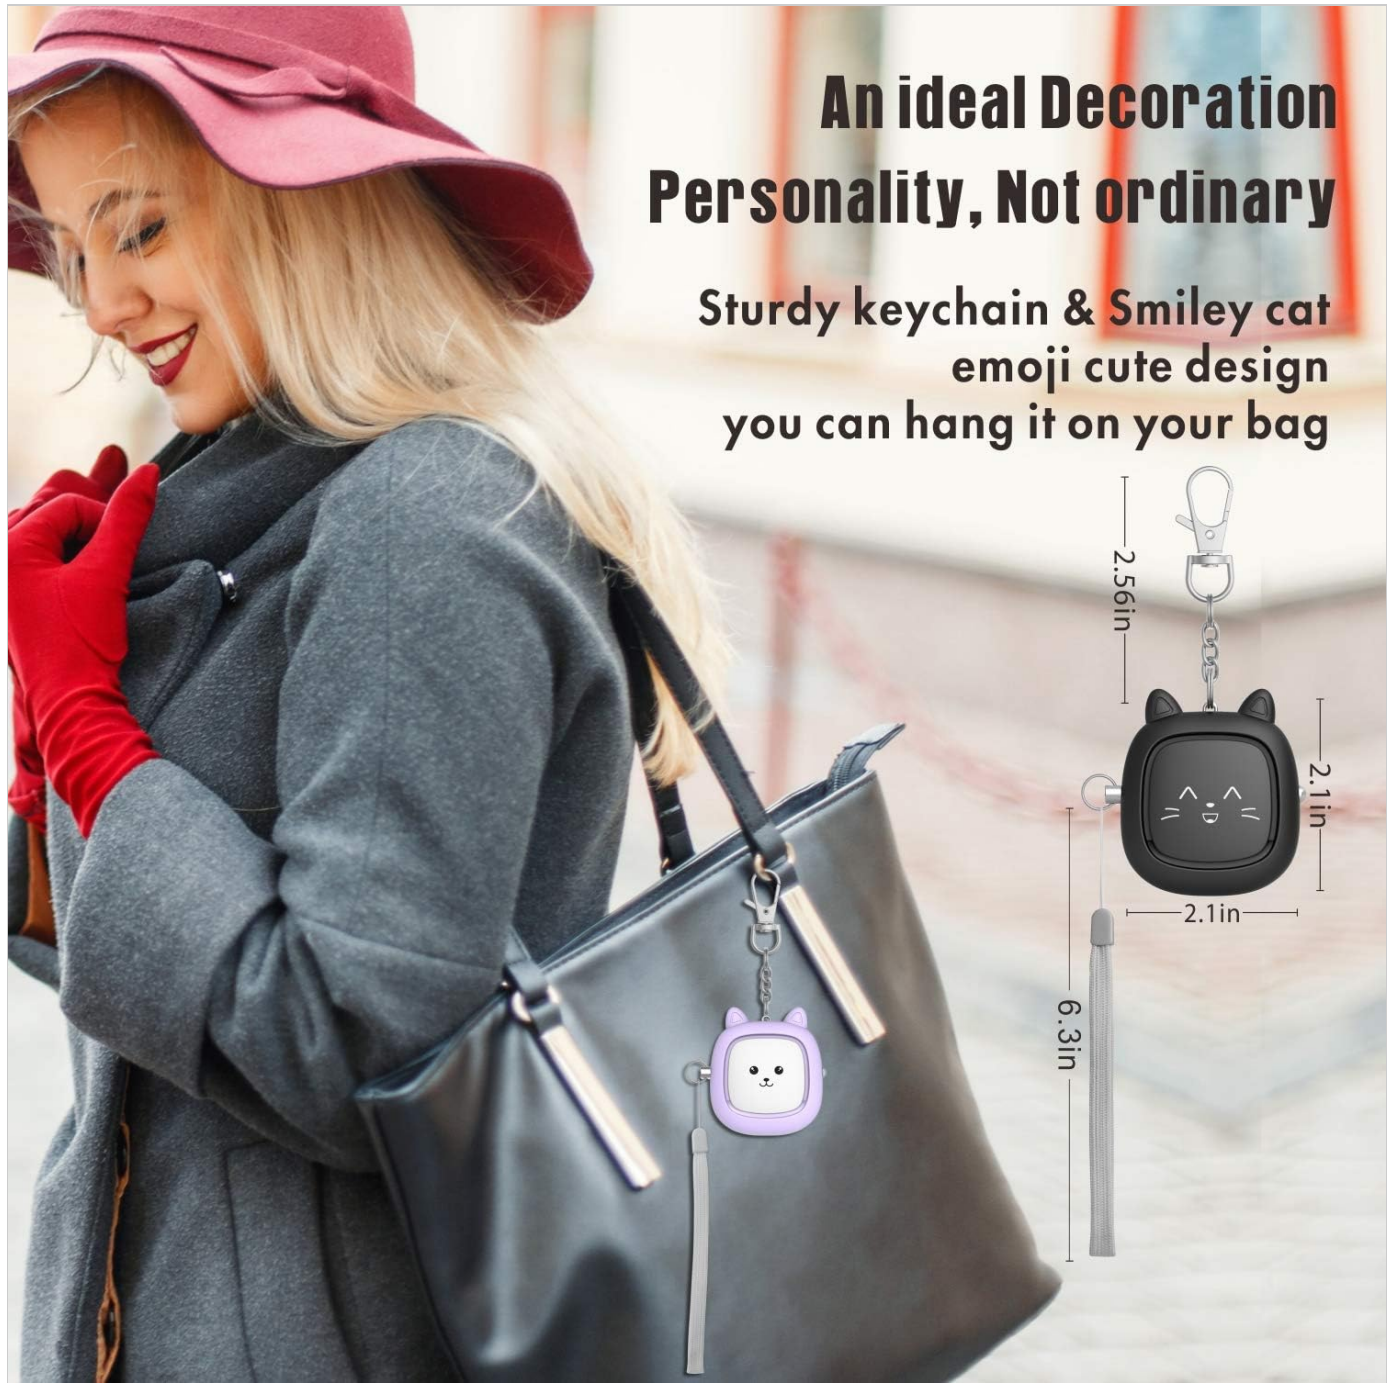


Image 4: The compact design allows for easy attachment to bags and other personal items.



Image 5: The personal alarm is available in multiple colors and can be shared with family and friends.

5. MAINTENANCE

5.1 Battery Replacement

The VIGOROAD Safe Sound Personal Alarm is powered by 3 LR44 alkaline batteries. When the alarm sound weakens or the LED light dims, it is time to replace the batteries.

- Locate the small screws on the back of the alarm unit.
- Using a small screwdriver, carefully remove the screws and open the battery compartment.
- Remove the old LR44 batteries and insert new ones, ensuring correct polarity (+/-).
- Close the battery compartment and secure it with the screws.
- Test the alarm and LED light after replacement to ensure proper function.

5.2 Cleaning

Wipe the alarm unit with a soft, dry cloth to remove dust or dirt. Do not use abrasive cleaners or immerse the device in water.

6. TROUBLESHOOTING


Problem	Possible Cause	Solution
Alarm is not sounding or is very faint.	Contact pin not fully pulled out; Low batteries.	Ensure pin is completely removed; Replace LR44 batteries.
LED light is dim or not working.	Low batteries; Button not pressed correctly.	Replace LR44 batteries; Press and hold the LED button firmly.
Alarm activates accidentally.	Contact pin is loose or partially pulled.	Ensure the contact pin is fully inserted when not in use. Avoid attaching to areas where the pin might snag.

7. SPECIFICATIONS

Attribute	Detail
Model Number	PA01
Noise Level	130 dB
Control Method	Touch (Button for LED, Pull Pin for Alarm)
Power Source	Battery Powered
Battery Type	3 x LR44 Alkaline Batteries (Included)
Item Weight	3.52 ounces
Package Dimensions	6.18 x 2.64 x 0.75 inches
Manufacturer	VIGOROAD
Color	Black/Purple/Green (as per current product variant)
Country of Origin	China

Product Upgrade

New and old models are shipped randomly

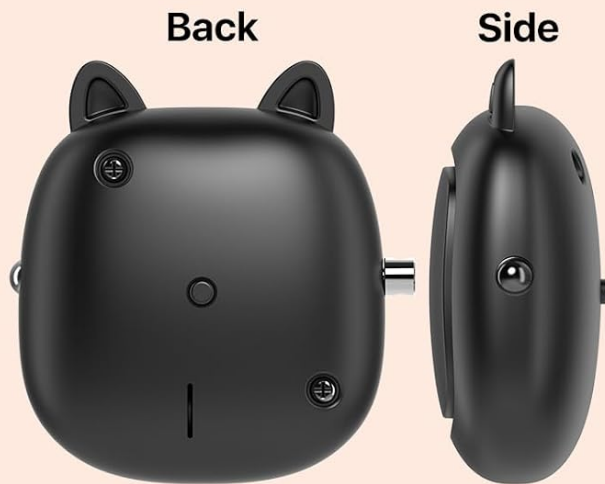

Old Type



New Type

The new personal alarm is thinner and lighter, and the upgraded flashlight button design on the back is less likely to be accidentally touched and consume power.

Image 6: Product Upgrade: New and old models may be shipped randomly. The new model is thinner and lighter, with an upgraded flashlight button design on the back to prevent accidental activation and power consumption.

8. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the purchase platform or contact VIGOROAD customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, please visit the official VIGOROAD store or contact their support team through the contact information provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question