



Manuals.plus /

› CUSIMAX /

› CUSIMAX Indoor Electric Smokeless Grill Instruction Manual

CUSIMAX GR-200A

CUSIMAX Indoor Electric Smokeless Grill

Model: GR-200A - User Instruction Manual

1. INTRODUCTION

Thank you for choosing the CUSIMAX Indoor Electric Smokeless Grill. This appliance is designed to bring the joy of grilling indoors, offering a convenient and smoke-free way to prepare your favorite grilled dishes year-round. Its advanced Turbo Smoke Extractor Technology ensures minimal smoke, making it perfect for apartments, condos, or any indoor setting. Please read this manual thoroughly before operation to ensure safe and efficient use.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the water tray is filled with water before grilling to activate the smokeless feature and collect drippings.

- Always ensure the fan is operating during grilling for optimal smoke extraction.

3. PACKAGE CONTENTS


Please check the package contents to ensure all items are present and in good condition:

- CUSIMAX Indoor Electric Smokeless Grill Main Unit
- Non-stick Removable Grill Plate (Single Plate)
- Tempered Glass Lid
- Removable Drip Tray
- Heating Element Assembly with Control Panel

4. PRODUCT OVERVIEW



Main unit with grill plate and lid.

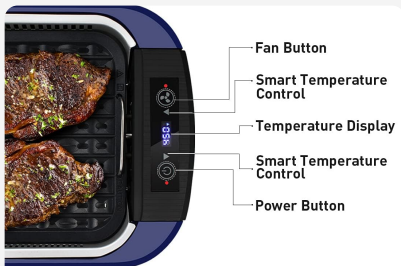

Digital control panel with temperature and fan controls.

Cook various meats without excess oil



Perforated grill plate allows excess oil to drain into the drip tray.



Product dimensions and key features.

The CUSIMAX grill features a main unit housing the heating element and drip tray, a removable non-stick grill plate for cooking, and a tempered glass lid to help retain heat and minimize splatter. The intuitive digital control panel allows for precise temperature adjustments and fan activation.

5. SETUP INSTRUCTIONS

1. Unpack all components and remove any packaging materials.
2. Place the main grill unit on a stable, flat, and heat-resistant surface.
3. Insert the removable drip tray into the base of the main unit.
4. Carefully place the heating element assembly into its designated slot above the drip tray. Ensure it is securely seated.
5. Position the non-stick grill plate on top of the heating element.
6. Fill the drip tray with approximately 2 cups of water. This is crucial for the smokeless function and to collect drippings.
7. Place the tempered glass lid on the grill plate.

Your browser does not support the video tag.

Video: CUSIMAX Indoor Grill: Colors & Features. This video demonstrates the assembly and various features of the grill, including how to set it up.

6. OPERATING INSTRUCTIONS

1. Plug the power cord into a standard 120V AC electrical outlet. The power indicator light will illuminate.
2. Press the Power Button to turn on the grill.
3. Press the Fan Button to activate the Turbo Smoke Extractor fan. The fan indicator light will turn blue.
4. Use the Temperature Control arrows (up/down) to set your desired cooking temperature, ranging from 200°F to 450°F. The LED display will show the current temperature.
5. Allow the grill to preheat until it reaches the set temperature. This may take a few minutes.
6. Once preheated, place your food directly onto the non-stick grill plate. The perforated design allows excess oil to drain, promoting healthier cooking.
7. For best results and to minimize splatter, keep the tempered glass lid on while cooking, especially for fattier foods.
8. Monitor food and adjust temperature as needed. The non-stick surface ensures easy food release.
9. After cooking, press the Power Button to turn off the grill and unplug it from the outlet. Allow the unit to cool completely before cleaning.

Your browser does not support the video tag.

Video: REVIEW | This indoor smokeless grill REALLY performs well! This video demonstrates the grill's smokeless operation and cooking performance.

Your browser does not support the video tag.

Video: Should You Buy? Cusimax Smokeless Indoor Grill. This video provides a detailed review of the grill's features, including temperature control and fan function.

Your browser does not support the video tag.

Video: Review Smokeless Grill Indoor CUSIMAX. This video showcases the grill's components and ease of use during cooking.

7. MAINTENANCE & CLEANING

Proper cleaning and maintenance will extend the life of your CUSIMAX grill.

1. Always unplug the grill and allow it to cool completely before disassembling or cleaning.
2. Remove the tempered glass lid, grill plate, and drip tray. These parts are dishwasher safe for convenient cleaning.
3. For stubborn residue, soak the grill plate and drip tray in warm, soapy water before scrubbing with a non-abrasive sponge.
4. Wipe the main unit and heating element assembly with a damp cloth. Do NOT immerse the main unit or heating element in water.
5. Ensure all parts are thoroughly dry before reassembling or storing the grill.

Your browser does not support the video tag.

Video: REVIEW | This indoor smokeless grill REALLY performs well! This video includes a demonstration of how to clean the grill's components.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; Power button not pressed.	Ensure power cord is securely plugged into a working outlet. Press the Power Button.
Excessive smoke during cooking.	Water tray is empty; Fan is off; Too much fat/oil on food.	Ensure water tray is filled. Turn on the fan. Trim excess fat from food.
Food sticking to the grill plate.	Grill not preheated sufficiently; Plate not properly seasoned (first use).	Allow grill to fully preheat. For first use, lightly coat the plate with cooking oil.
Temperature not reaching desired level.	Incorrect temperature setting; Grill plate not properly seated.	Verify temperature setting. Ensure grill plate and heating element are correctly assembled.

9. SPECIFICATIONS

- **Model Name:** Indoor Grill Electric Grill CUSIMAX Smokeless Grill Portable Korean BBQ Grill with Turbo Smoke Extractor Technology, Non-stick Removable Grill Plate, Tempered Glass Lid, Great for Party(Single Plate)
- **Model Number:** GR-200A
- **Brand:** CUSIMAX

- **Color:** Blue
- **Product Dimensions:** 19.7"D x 13.19"W x 19.7"H
- **Item Weight:** 14.8 Pounds
- **Material:** Stainless Steel, Glass
- **Special Features:** Removable Plate, Smokeless, Non-Stick Surface
- **Fuel Type:** Electric
- **Voltage:** 120 Volts (AC)
- **Wattage:** 1500 watts
- **Cooking Surface Area:** 135 Square Inches
- **Number of Power Levels:** 3

10. WARRANTY & SUPPORT

CUSIMAX offers free lifetime customer service and a 180-day worry-free return policy for this product. All our products are supported by our professional technical engineers. If you encounter any issues or have questions regarding your grill, please do not hesitate to contact CUSIMAX customer service for prompt assistance. For further support, please visit the official CUSIMAX store or contact their customer service department directly.