

NKF RMT-15

NKF RMT-15 Remote Control User Manual for Westinghouse TVs

Model: RMT-15

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your NKF RMT-15 remote control. This remote is designed as a replacement for various Westinghouse TV models, offering full functionality without complex programming.

SETUP

1. Battery Installation

The RMT-15 remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the RMT-15 remote control with the battery cover removed, illustrating the correct placement of AAA batteries.

2. Initial Setup (Code Setting / Automatic Search)

The RMT-15 remote control is designed to work with compatible Westinghouse TVs without requiring complex programming. However, if the remote does not function immediately, you may need to perform a simple setup procedure. The following video demonstrates common setup methods for universal remotes, which are applicable to the RMT-15.

Your browser does not support the video tag.

Video: A demonstration of how to set up a universal remote control, including code setting and automatic search functions.
This video is provided by the seller to assist with initial remote configuration.

Code Setting Method:

1. Simultaneously press and hold both the **Power** button and the **Mute** button on the remote. The LED indicator light will illuminate continuously.
2. Refer to the code list (if provided with your remote or available online) for your TV brand. Enter the corresponding 3-digit code using the number buttons.
3. After entering the code, the LED indicator light will turn off, indicating that the setup process is complete. Test the remote's functions.

Automatic Search Method:

1. Ensure your TV is turned on.
2. Simultaneously press and hold both the **Power** button and the **Mute** button on the remote. The LED indicator light will illuminate continuously.
3. Aim the remote control at the TV. Press the **Mute** button again to initiate an automatic search.
4. Observe the TV screen for the appearance of the volume symbol. Once it appears, immediately press the **Power** button to save the setting and exit the automatic mode.

OPERATING INSTRUCTIONS

The NKF RMT-15 remote control provides standard functions for your Westinghouse TV. Familiarize yourself with the button layout:



Image: Front view of the RMT-15 remote control, displaying all functional buttons.

- **Power Button** (●): Turns the TV on or off.
- **Mute Button** (●): Mutes or unmutes the TV audio.
- **Number Buttons (0-9)**: Directly select channels.
- **CH+/CH-**: Changes channels up or down.
- **VOL+/VOL-**: Adjusts the volume up or down.
- **SOURCE/INPUT**: Selects the input source (e.g., HDMI, AV).
- **MENU**: Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus.

- **OK Button:** Confirms selections in menus.
- **EXIT:** Exits the current menu or function.
- **DISPLAY/INFO:** Shows current channel information.
- **SLEEP:** Sets a sleep timer for the TV.
- Additional buttons for specific functions (e.g., F.MODE, S.MODE, MTS, FREEZE, CH.LIST, AUTO, ASPECT, CC, V-CHIP, ADD/ERASE, FAV) are available for compatible TV models.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote's response becomes sluggish or the LED indicator light fails to illuminate. Always replace both batteries with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners, aerosols, or harsh chemicals, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote is pointed directly at the TV.
- **Specific buttons not working:**
 - Some advanced functions may not be supported by all TV models.
 - If basic functions like volume or channel are not working, try re-performing the setup procedure (Code Setting or Automatic Search).
- **LED indicator not lighting up:**
 - This usually indicates dead or incorrectly installed batteries. Replace them.

SPECIFICATIONS

Feature	Specification
Product Dimensions	7 x 1.97 x 0.79 inches
Item Weight	3.2 ounces
Batteries Required	2 AAA batteries (not included)
Compatible Devices	Television (various Westinghouse models)
Connectivity Technology	Infrared

Special Feature	No Programming Required (for most compatible models)
-----------------	--

SUPPORT

If you encounter any issues with your NKF RMT-15 remote control that are not resolved by the troubleshooting steps, please contact the seller for assistance. We are committed to providing support and resolving any problems you may experience with the item.