

[Manuals.plus](#) /

› [Mixpresso](#) /

› Mixpresso Single Serve Coffee Brewer Instruction Manual

Mixpresso DCM-KC-BLK

Mixpresso Single Serve Coffee Brewer

Model: DCM-KC-BLK

Your guide to perfect coffee, every time.

INTRODUCTION

Thank you for choosing the Mixpresso Single Serve Coffee Brewer. This versatile coffee maker is designed for convenience, allowing you to brew your favorite coffee using either K-Cup pods or ground coffee. With its compact design and multiple brew sizes, it's perfect for any home or office. Please read this manual carefully before operation to ensure safe and optimal performance.

Key features include:

- 2-in-1 Brewing Function: Compatible with K-Cup pods and ground coffee.
- Powerful 1000W heating for quick brewing.
- 30 oz removable water tank for easy refilling.
- 5 Brew Sizes: 6 oz, 8 oz, 10 oz, 12 oz, 14 oz.
- Adjustable drip tray to accommodate various cup and travel mug sizes (up to 7.2 inches).
- Auto shut-off function for safety and energy saving.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Mixpresso coffee brewer:



Figure 1: Overview of Mixpresso Coffee Brewer with labeled components.

This image highlights the key components:

Basket Filter, Capsule Container Holder, Anti-drip Nozzle, 3 Level Mounting Slots, Easy Clean Removable Drip Tray, Clear And Bright Indicator, Multiple Brew Sizes, and Easy View Removable Water Tank.

Included Accessories:

- **Basket Filter:** For brewing ground coffee.
- **Capsule Container Holder:** For K-Cup compatible pods.
- **Removable Drip Tray:** Catches drips and adjusts for different cup heights.
- **Removable Water Tank (30 oz):** Easy to fill and clean.

SETUP GUIDE

1. **Unpack and Clean:** Remove all packaging materials. Wash the removable water tank, drip tray, basket filter, and capsule container holder with warm, soapy water. Rinse thoroughly and dry.
2. **Place the Brewer:** Position the coffee brewer on a flat, stable surface near an electrical outlet.
3. **Fill Water Tank:** Remove the 30 oz water tank from the back of the unit. Fill it with fresh, cold water up to the desired level (max 30 oz). Replace the tank securely onto the brewer.
4. **Initial Rinse Cycle:** Before first use, perform a rinse cycle without coffee. Place a large mug on the drip tray. Close the lid (without a pod or ground coffee). Select the largest brew size (14 oz) and press the K-Cup or Ground button to start. Discard the hot water. This cleans the internal components.



Figure 2: Visual guide for initial setup and brewing steps.

This image illustrates the basic steps: 1. Fill the water tank, 2. Choose your favorite coffee plan (K-Cup or Ground), 3. Press the button, 4. Enjoy your daily coffee.

OPERATING INSTRUCTIONS

Brewing with K-Cup Pods:

1. Ensure the water tank is filled.
2. Lift the brewer handle to open the lid.
3. Insert a K-Cup pod into the capsule container holder.
4. Lower the handle firmly until it clicks, piercing the pod.
5. Place your mug on the drip tray. Adjust the drip tray height if using a travel mug.
6. Press the "SIZE" button to cycle through the available brew sizes (6 oz, 8 oz, 10 oz, 12 oz, 14 oz) until your desired size is illuminated.
7. Press the "K-CUP" button to begin brewing. The light will flash during brewing and turn solid when complete.
8. Once brewing is complete, carefully lift the handle to remove the used K-Cup pod and discard.

Brewing with Ground Coffee:

1. Ensure the water tank is filled.
2. Lift the brewer handle to open the lid.
3. Insert the basket filter into the capsule container holder.
4. Add your desired amount of ground coffee (typically 1-2 tablespoons per 6 oz) into the basket filter. Do not overfill.
5. Lower the handle firmly until it clicks.
6. Place your mug on the drip tray. Adjust the drip tray height if needed.
7. Press the "SIZE" button to select your desired brew size.
8. Press the "GROUND" button to begin brewing. The light will flash during brewing and turn solid when complete.
9. Once brewing is complete, carefully lift the handle to remove the used basket filter and discard grounds.



Figure 3: The Mixpresso Coffee Brewer illustrating two ways to brew: Ground Coffee and K-Cup compatible.

This image visually explains the two brewing methods available with the Mixpresso brewer, highlighting the reusable filter for ground coffee and the adapter for K-Cup pods.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee brewer.

- Daily Cleaning:** After each use, remove and empty the drip tray. Wipe it clean with a damp cloth. Remove and rinse the capsule container holder and basket filter.
- Water Tank Cleaning:** Periodically clean the removable water tank with warm, soapy water. Rinse thoroughly. For best results, allow it to air dry completely to prevent slime buildup.
- Exterior Cleaning:** Wipe the exterior of the brewer with a damp, soft cloth. Do not use abrasive cleaners or immerse the unit in water.
- Descaling (Monthly or as needed):** Over time, mineral deposits can build up. To descale, fill the water tank with a mixture of one part white vinegar and two parts water. Place a large mug on the drip tray. Run several brew cycles until the tank is empty. Then, run several cycles with fresh, clean water to rinse thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Brewer not turning on.	Not plugged in; power outage.	Ensure unit is securely plugged into a working outlet. Check circuit breaker.

Problem	Possible Cause	Solution
Coffee not brewing or only dispensing water.	K-Cup not properly pierced; basket filter clogged; no coffee in filter.	Ensure K-Cup is firmly pressed down. Clean basket filter. Add ground coffee.
Water leaking from unit.	Water tank not seated correctly; K-Cup not properly sealed.	Ensure water tank is 100% re-attached perfectly. For K-Cups, ensure the lid is pressed down twice to ensure a good seal.
Lights blinking three times then shuts off.	Possible internal malfunction or error state.	Try flushing the system by pressing both the K-Cup and Ground buttons simultaneously (refer to manual for specific flush instructions if available). If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Mixpresso
Model Name	2 In 1 coffee machine (DCM-KC-BLK)
Color	Black
Product Dimensions	6"D x 10"W x 15"H
Item Weight	4.2 pounds
Special Feature	Removable Tank, Permanent Filter
Coffee Maker Type	Drip Coffee Machine
Filter Type	Reusable
Voltage	110 Volts
Coffee Input Type	Ground, Pods
Operation Mode	Fully Automatic

WARRANTY AND SUPPORT

Mixpresso offers protection plans for your coffee brewer. For detailed information regarding warranty coverage or to purchase an extended protection plan, please refer to the product's purchase page or contact Mixpresso customer

support directly.

Typical protection plans available:

- 3-Year Protection Plan
- 4-Year Protection Plan

For further assistance or technical support, please visit the official Mixpresso website or contact their customer service team.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question