

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Home Chef Smart Pro Multicooker CY625 User Manual

Tefal CY625

Tefal Home Chef Smart Pro Multicooker CY625 User Manual

Model: CY625

INTRODUCTION

Welcome to the user manual for your new Tefal Home Chef Smart Pro Multicooker, model CY625. This appliance is designed to simplify your cooking process with its versatile functions, including pressure cooking, slow cooking, steaming, and more. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do

not fill the unit over 1/2 full.

- Always check the pressure release valve for clogging before use.
- Do not open the pressure cooker until the unit has cooled and internal pressure has been released.
- The appliance is equipped with 18 safety features for optimal safety during use.

PRODUCT OVERVIEW

The Tefal Home Chef Smart Pro Multicooker CY625 is a versatile kitchen appliance designed for various cooking methods. It features a spherical pot and Opti-Taste technology for enhanced flavor.



Front view of the Tefal Home Chef Smart Pro Multicooker CY625, showcasing its sleek black and silver design with the control panel visible.



Close-up view of the control panel and lid of the Tefal Home Chef Smart Pro Multicooker CY625, showing various program buttons and the digital display.

Key Features:

- **19 Pre-set Programs:** For various cooking needs, including rice, congee, meats, soups, sous-vide, and abalone.
- **3 Special Functions:** Adjust cooking time, pressure, and temperature.
- **Opti-Taste Technology:** Enhances natural flavors through an electrical pressure valve and spherical pot design.
- **4.8L Capacity:** Suitable for family meals.
- **Automatic Keep-Warm Function:** Up to 24 hours.
- **Pre-set Timer:** Up to 24 hours.
- **18 Safety Features:** Ensures maximum security during operation.
- **Easy to Clean:** Dishwasher-safe removable parts.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the inner pot, sealing gasket, and any accessories (measuring cup, rice spatula, soup spoon, steam basket) with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the multicooker on a stable, flat, heat-resistant surface, away from direct heat sources and moisture. Ensure adequate ventilation around the unit.
4. **Assemble:**
 - Insert the inner pot into the main unit. Ensure it sits correctly.
 - Check that the sealing gasket is properly installed inside the lid.
 - Ensure the pressure release valve is clear and correctly positioned.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The display will illuminate.

OPERATING INSTRUCTIONS

Basic Operation:

1. **Add Ingredients:** Place your ingredients and liquids into the inner pot. Do not exceed the MAX fill line (2/3 full for most foods, 1/2 full for expanding foods like rice).
2. **Close Lid:** Place the lid on the multicooker and turn it clockwise until it locks into place. Ensure the pressure release valve is set to the "Sealing" position for pressure cooking.
3. **Select Program:** Use the control panel to select your desired pre-set program (e.g., Rice, Soup, Meat, Stew). The display will show the default cooking time and pressure level.
4. **Adjust Settings (Optional):** For programs that allow it, use the '+' and '-' buttons to adjust cooking time, pressure, or temperature.
5. **Start Cooking:** Press the "Start" button. The multicooker will begin preheating. Once pressure is reached (for pressure cooking programs), the cooking timer will begin counting down.
6. **End of Cooking:** Once cooking is complete, the appliance will beep and automatically switch to the "Keep Warm" function (if enabled).
7. **Release Pressure:**
 - **Natural Release:** Allow the pressure to release naturally. This is recommended for foamy foods or large cuts of meat. The float valve will drop on its own.
 - **Quick Release:** Carefully turn the pressure release valve to the "Venting" position. Steam will rapidly escape. Keep hands and face away from the steam. Only use for foods that do not foam.
8. **Open Lid:** Once the float valve has dropped and all pressure is released, turn the lid counter-clockwise and lift it carefully away from you to avoid residual steam.

Using Special Functions:

- **Delayed Start:** Set a timer for cooking to begin at a later time (up to 24 hours).
- **Keep Warm:** Automatically maintains food temperature after cooking. Can be manually activated.
- **My Recipes:** Save up to three of your favorite customized cooking programs for quick access.



The Tefal Home Chef Smart Pro Multicooker highlighting Opti-Taste Technology for enhanced flavor, with prepared meals shown alongside.

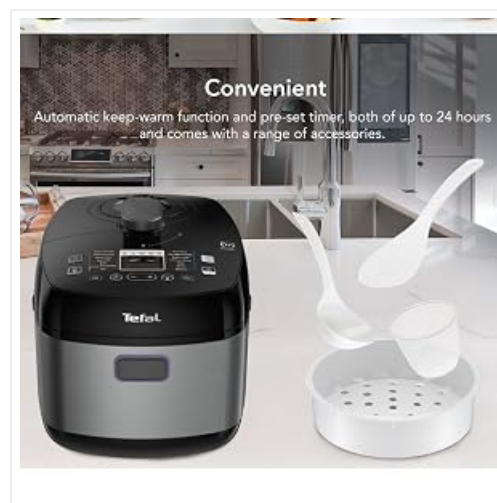


Image illustrating the 19 pre-set programs and 3 special functions, along with the 18 safety features of the Tefal Home Chef Smart Pro Multicooker.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your multicooker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The inner pot is non-stick and dishwasher-safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
3. **Lid:** Remove the sealing gasket and wash it with warm, soapy water. Clean the lid, including the pressure release valve and float valve, ensuring no food particles are lodged. The lid components are generally dishwasher-safe, but refer to the specific product manual for confirmation.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other

liquid.

5. **Condensation Collector:** Empty and clean the condensation collector regularly.
6. **Accessories:** All included accessories (measuring cup, rice spatula, soup spoon, steam basket) are dishwasher-safe.
7. **Storage:** Ensure all parts are clean and dry before storing the multicooker. Store in a dry place.



The Tefal Home Chef Smart Pro Multicooker shown with its included accessories: measuring cup, rice spatula, soup spoon, and steam basket, highlighting its convenient and easy-to-clean design.

TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Pressure not building up.	Lid not properly closed; sealing gasket not installed correctly; pressure release valve in "Sealing" position.	Ensure the lid is fully locked. Check the sealing gasket for proper placement. Turn the pressure release valve to the "Sealing" position. Ensure sufficient liquid is in the pot.
Steam leaking from lid.	Sealing gasket dirty or damaged; lid not properly closed.	Clean or replace the sealing gasket. Ensure the lid is securely closed and locked.
Food is undercooked.	Insufficient cooking time; incorrect program selected.	Increase cooking time for the selected program or choose a more appropriate program. Ensure proper liquid levels.
Error code displayed.	Specific internal malfunction.	Refer to the full product manual for specific error code meanings. Unplug the unit, wait a few minutes, and plug it back in. If the error persists, contact customer service.

SPECIFICATIONS

- **Brand:** Tefal
- **Model:** CY625

- **Capacity:** 5 Liters (4.8L usable)
- **Power Source:** Electric
- **Material:** Ceramic (inner pot)
- **Color:** Black
- **Product Dimensions:** 42.8D x 48.6W x 33.3H cm
- **Item Weight:** 5.5 Kilograms
- **Special Features:** Dishwasher Safe (removable parts), Keep Warm Setting
- **Control Method:** Touch
- **Operation Mode:** Automatic
- **Number of Programs:** 19 pre-set programs + 3 special functions

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Tefal website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Manufacturer: Groupe SEB

Online Support: www.tefal.com

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B088THKJ7F>

More documents and user manuals: <https://manuals.plus/>