

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tefal](#) /
- › [Tefal Delirice Pro Compact RK8001 Rice Cooker Instruction Manual](#)

Tefal RK8001

Tefal Delirice Pro Compact RK8001 Rice Cooker Instruction Manual

Model: RK8001

INTRODUCTION

Welcome to the user manual for your new Tefal Delirice Pro Compact RK8001 Rice Cooker. This appliance is designed to provide perfect cooking results for various rice types and other dishes, thanks to its advanced Induction Heating technology and spherical cooking pot. Please read these instructions carefully before using your appliance and keep them for future reference.



The Tefal Delirice Pro Compact RK8001 Rice Cooker, ready to serve perfectly cooked rice.

PRODUCT FEATURES

- **Induction Heating Technology:** Ensures precise temperature control and 360° heating for evenly cooked grains.

- **Spherical Cooking Pot:** A durable 6-layer, 3mm thick inner pot designed for optimum heat circulation and fluffy rice texture.
- **7 Cooking Programs:** Dedicated programs for various rice types and cooking needs.
- **1L Capacity:** Suitable for preparing up to 5 cups of rice.
- **800W Power:** Efficient heating for quick and consistent results.
- **Non-Stick Coating:** For easy serving and cleaning.
- **Keep Warm Function:** Automatically keeps rice warm for 30 minutes up to 12 hours after cooking.



Included components: Rice cooker unit, spherical inner pot, measuring cup, and rice spatula.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Before first use, wash the inner pot, measuring cup, and rice spatula with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the rice cooker with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, and heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Ensure the power cord is securely plugged into the rice cooker and then into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Rinse Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add to Pot:** Place the rinsed rice into the spherical inner pot.
4. **Add Water:** Add the appropriate amount of water according to the markings inside the inner pot or your preferred rice-to-water ratio. For example, for white rice, typically 1 cup of rice to 1.5-2 cups of water.
5. **Place Pot:** Ensure the outer surface of the inner pot is dry, then place it into the rice cooker housing. Close the lid securely.
6. **Select Program:** Plug in the appliance. Select the desired cooking program using the control panel. The display will show the selected program.
7. **Start Cooking:** Press the Start button to begin the cooking cycle. The indicator light will illuminate.
8. **Keep Warm:** Once cooking is complete, the appliance will automatically switch to the "Keep Warm" mode. This function can keep rice warm for up to 12 hours.
9. **Serve:** Use the provided rice spatula to serve the cooked rice. Avoid using metal utensils to protect the non-stick coating.

Using Specific Programs

Your Tefal Delirice Pro Compact RK8001 offers 7 dedicated cooking programs. Refer to the control panel for specific program icons and select the one that best suits your dish. These programs are optimized for different types of rice (e.g., white rice, brown rice) and other preparations.



The control panel features 7 dedicated rice cooking programs for versatile meal preparation.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your rice cooker.

- **Inner Pot and Accessories:** Hand wash the removable inner pot, measuring cup, and rice spatula with warm soapy water. Avoid using abrasive materials or harsh chemicals that could damage the non-stick coating. Do not soak the inner pot for extended periods.
- **Exterior:** Wipe the exterior of the rice cooker with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Inner Lid:** The inner lid is removable for thorough cleaning. Follow the instructions in the manual for safe removal and reattachment.
- **Vent:** Ensure the steam vent is clear of any food debris to maintain proper function.
- **Storage:** Store the rice cooker in a dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Check if the power cord is securely plugged into both the appliance and the electrical outlet.
 - Ensure the electrical outlet is functioning correctly by testing it with another appliance.
- **Rice is undercooked or overcooked:**
 - Verify the correct rice-to-water ratio for the type of rice being cooked.
 - Ensure the inner pot is properly seated in the cooker and the lid is closed.
 - Make sure the correct cooking program was selected.
- **Rice sticks to the bottom of the pot:**
 - Ensure the non-stick coating is not damaged.
 - Add a small amount of cooking oil to the pot before adding rice and water.

- Do not use metal utensils.
- **Steam escaping excessively from the lid:**
 - Check if the lid is properly closed and sealed.
 - Ensure the steam vent is not blocked.

If the problem persists, please contact Tefal customer support for assistance.

SPECIFICATIONS

Brand	Tefal
Model Number	RK8001
Capacity	1 Liter (approx. 5 cups)
Wattage	800 watts
Technology	Induction Heating, Fuzzy Logic
Inner Pot	Spherical, 6-layer, 3mm thick, Non-Stick Ceramic
Cooking Programs	7 dedicated programs
Keep Warm Function	30 minutes to 12 hours
Product Dimensions	31.2 x 25.2 x 20.4 cm
Item Weight	3.56 kg



Rear view of the rice cooker, displaying the power cord connection and product information label.

WARRANTY AND SUPPORT

Your Tefal Delirice Pro Compact RK8001 Rice Cooker comes with a standard brand warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or any inquiries regarding your appliance, please contact Tefal customer service. Contact information can typically be found on the official Tefal website or in your product documentation.