

Braun 8330s

Braun Series 8 8330s Electric Shaver User Manual

Model: 8330s

1. INTRODUCTION



Image: The Braun Series 8 8330s electric shaver alongside its product box.

This manual provides detailed instructions for the safe and effective use of your Braun Series 8 8330s electric shaver. Please read all instructions carefully before using the appliance and retain this manual for future reference. The Braun Series 8 8330s is designed to deliver a precise and comfortable shave for men, featuring advanced Sonic Technology and suitability for both wet and dry shaving. This shaver is engineered in Germany and designed for long-term durability.

Box Contents

- Braun Series 8 8330s Electric Shaver
- Fabric Travel Case
- Smart Plug (Charger)
- Cleaning Brush
- User Manual (this document)

- Guarantee Information



Image: The Braun Series 8 8330s shaver, its fabric travel case, smart plug charger, and cleaning brush.

2. SAFETY INFORMATION

Important: Please read and follow all safety instructions to prevent injury or damage to the appliance.

- This appliance is suitable for cleaning under running tap water.
- Do not use the appliance with a damaged foil or cord.
- Keep the appliance dry when not in use.
- Do not open the appliance.
- This appliance contains batteries that are not replaceable.
- Caution: Risk of cuts or skin irritation. Clean regularly to prevent bacterial growth. Avoid using near water or while charging.

3. SETUP AND CHARGING

Initial Charging

1. Ensure the shaver is switched off.
2. Connect the smart plug to the shaver and then to a power outlet.
3. The Pro display will indicate charging status. A full charge takes approximately 1 hour and provides up to 60 minutes of cordless shaving.
4. For first use, charge the shaver completely.



Advanced battery

Our most advanced Li-Ion battery now lasts 20% longer. One charge – one month of shaving.

Image: The shaver's advanced Li-ion battery provides up to 60 minutes of shaving on a single charge.

4. OPERATING INSTRUCTIONS

Shaving

- Press the On/Off button to start the shaver.
- Hold the shaver at a right angle (90°) to your skin.
- Stretch your skin and shave against the direction of hair growth.
- Apply gentle, even pressure.

Wet and Dry Shaving

The Braun Series 8 8330s is designed for both dry shaving and wet shaving with foam or gel. For a refreshing skin feeling, you may use it in the shower.



100% waterproof

Clean your Series 8 easily under water. Shave with foam or gel for a refreshing skin feeling.

Image: The shaver is 100% waterproof, allowing for easy cleaning under running water and use with foam or gel.

Using the Precision Trimmer

To trim sideburns, mustaches, or define beard lines:

1. Slide the precision trimmer upwards.
2. Use the trimmer to shape and define as desired.
3. Slide the trimmer back down when finished.



Integrated precision trimmer

The integrated skin-friendly precision trimmer easily tackles difficult areas, like under your nose or sideburns.

Image: The integrated precision trimmer is used for difficult areas like under the nose or sideburns.

5. MAINTENANCE AND CLEANING

Daily Cleaning

1. After each shave, switch off the shaver.
2. Rinse the shaver head under hot running tap water until all residue is removed.
3. You may use a small amount of liquid soap for thorough cleaning.
4. Shake off excess water and let the shaver air dry.

Thorough Cleaning (Weekly)

1. Remove the shaver foil and cutter block.
2. Tap out any trapped hair.
3. Use the provided cleaning brush to clean the inner parts of the shaver head. Do not use the brush on the foil itself, as this can damage it.
4. Rinse all parts under running water.
5. Allow parts to dry completely before reassembling.

Replacing Shaver Parts

For optimal performance, it is recommended to replace the shaver head (foil and cutter block) every 18 months. Replacement parts can be purchased from authorized Braun retailers or the official Braun website.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 5 minutes, or fully charge for 1 hour.
Poor shaving performance.	Shaver head is worn or dirty.	Clean the shaver head thoroughly. Consider replacing the shaver head if it's older than 18 months.
Shaver pulls hair.	Shaver head is worn or hair is too long.	Ensure hair is trimmed short before shaving. Replace shaver head if necessary.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Shave against hair growth with gentle pressure. Use wet shaving with foam/gel. Allow skin to adapt.

7. SPECIFICATIONS

- Model:** 8330s
- Brand:** Braun
- Type:** Electric Foil Shaver
- Power Source:** Battery Powered (1 Lithium Ion battery included)
- Special Features:** Rechargeable, Wet & Dry Use, Sonic Technology, Integrated Precision Trimmer
- Battery Life:** Up to 60 minutes (1 hour charge time)
- Item Model Number:** 8330s
- UPC:** 069055882559
- Manufacturer:** Procter & Gamble

8. WARRANTY AND SUPPORT

Your Braun Series 8 8330s electric shaver comes with a manufacturer's guarantee. Please refer to the included guarantee information for details on coverage and duration. For technical support, replacement parts, or further assistance, please visit the official Braun website or contact their customer service department.

Online Support: www.braun.com

© 2023 Braun. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question