

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TOSHIBA](#) /

› [Toshiba TY-ASC65 Portable Bluetooth Speaker User Manual](#)

TOSHIBA TY-ASC65

Toshiba TY-ASC65 Portable Bluetooth Speaker User Manual

Model: TY-ASC65

1. INTRODUCTION

Thank you for purchasing the Toshiba TY-ASC65 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure proper functionality and to maximize your listening experience.

2. PRODUCT OVERVIEW

The Toshiba TY-ASC65 is a versatile portable sound system designed for various environments, from outdoor gatherings to karaoke nights. It features powerful audio output, multiple connectivity options, and dynamic LED lighting.





Figure 2.1: Front view of the Toshiba TY-ASC65 Portable Bluetooth Speaker, showcasing its dual speakers and vibrant LED light strips.



Figure 2.2: Detailed view of the top control panel, including power switch, USB ports, microphone inputs, volume controls, and function buttons.

3. SETUP

3.1. Charging the Battery

The TY-ASC65 is equipped with a built-in 12 Volt 4Ah rechargeable battery. Before initial use, fully charge the speaker for optimal performance.

1. Connect the power adapter to the speaker's power input port.
2. Plug the power adapter into a standard electrical outlet.
3. The charge indicator light on the control panel will illuminate, typically red during charging and turning blue or off when fully charged.
4. Allow sufficient time for a full charge (refer to specifications for estimated charging time).

3.2. Powering On/Off

Locate the power switch on the top control panel.

- To power on: Slide the switch to the **ON** position. The display will light up.
- To power off: Slide the switch to the **OFF** position. The display and lights will turn off.

4. OPERATION

4.1. Bluetooth Pairing

Connect your wireless device to the speaker via Bluetooth.

1. Ensure the speaker is powered on and in Bluetooth mode. The display will show "bt" and the Bluetooth indicator light will flash.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "TY-ASC65" from the list of devices.
4. Once paired, the Bluetooth indicator light on the speaker will become solid, and a confirmation tone may sound.

4.2. FM Stereo Radio

Enjoy your favorite radio stations with the built-in FM tuner.

1. Press the **FUNCTION/O** button to switch to FM radio mode. The display will show the frequency.
2. Extend the wire antenna for better reception.
3. Press the **PLAY/AUTO** button to automatically scan and save available FM stations.
4. Use the **PREV/TUN-** and **NEXT/TUN+** buttons to navigate between saved stations or manually tune.

4.3. USB Playback

Play music directly from a USB flash drive.

1. Insert a USB flash drive containing MP3 audio files into the USB input port (5V=200mA).
2. The speaker will automatically switch to USB mode and begin playback. If not, press the **FUNCTION/O** button to select USB mode.
3. Use the **PLAY/PAUSE**, **PREV**, and **NEXT** buttons to control playback.

4.4. Microphone Usage (Karaoke)

Connect microphones for karaoke or public address.

- Plug up to two microphones into the **MIC 1** and **MIC 2** input jacks.
- Adjust the microphone volume using the **MIC VOL** knob.
- Use the **ECHO** knob to add an echo effect to the microphone audio.

4.5. LED Lights

Control the colorful LED lights that flash to the beat of the music.

- Press the **LIGHT** button to cycle through different light modes or turn the lights off.

4.6. Bass and EQ Adjustment

Customize your audio output.

- Press the **BASS** button to toggle the bass boost feature on or off.
- Press the **EQ** button to cycle through preset equalizer modes (e.g., Pop, Rock, Jazz, Classic, Flat).

5. MAINTENANCE

Proper care ensures the longevity of your Toshiba TY-ASC65 speaker.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If storing for an extended period, charge the battery periodically (e.g., every 3 months) to maintain its health.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water or excessive moisture.

6. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted; Power switch is off.	Charge the battery; Ensure the power switch is in the ON position.
No sound from speaker.	Volume too low; Incorrect input mode; Device not paired (Bluetooth).	Increase volume; Select correct input mode (Bluetooth, FM, USB, AUX); Re-pair Bluetooth device.
Bluetooth device cannot pair.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth mode and indicator is flashing; Move device closer; Avoid sources of interference.
Poor FM radio reception.	Antenna not extended; Weak signal.	Fully extend the wire antenna; Try repositioning the speaker.
USB playback not working.	USB drive not formatted correctly; Incompatible file types; USB drive faulty.	Ensure USB drive is FAT32 formatted; Use MP3 files; Try a different USB drive.

7. SPECIFICATIONS

- **Model Name:** TY-ASC65
- **Brand:** TOSHIBA
- **Speaker Type:** Outdoor
- **Connectivity Technology:** Bluetooth, USB
- **Wireless Communication Technology:** Bluetooth
- **Speaker Maximum Output Power:** 60 Watts
- **Audio Output Mode:** Stereo
- **Power Source:** Battery Powered
- **Battery Type:** 12V Rechargeable
- **Battery Capacity:** 4 Amp Hours
- **Input Voltage:** 12 Volts
- **Product Dimensions:** 13"D x 26"W x 12"H
- **Item Weight:** 20.1 pounds

- **Special Features:** Stereo pairing, FM Radio, Colorful LED Lights, Microphone Inputs
- **Included Components:** Speaker
- **Is Waterproof:** No

8. WARRANTY INFORMATION

This product comes with a full warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the warranty card included in the product packaging or contact Toshiba customer support.

9. SUPPORT

For further assistance, technical support, or service inquiries, please visit the official Toshiba website or contact their customer service department. Keep your purchase receipt and product model number (TY-ASC65) handy when seeking support.