

Midea HS-338FWEDS

Midea HS-338FWEDS 260 Liter Upright Freezer Instruction Manual

Model: HS-338FWEDS

1. INTRODUCTION

Thank you for choosing the Midea HS-338FWEDS 260 Liter Upright Freezer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions thoroughly before using the freezer and retain them for future reference.

This upright freezer features a 260-liter capacity, a single door design, and a No Frost system for convenient food preservation.

2. SAFETY INFORMATION

Important Safety Instructions:

- Read all instructions before using the appliance.
- Ensure the power supply voltage matches the rating label on the appliance.
- Do not damage the refrigerant circuit. If damaged, avoid open flames and ventilate the room.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance before cleaning or performing maintenance.

3. PRODUCT OVERVIEW

The Midea HS-338FWEDS is a modern upright freezer designed for efficient and convenient frozen food storage. It features a sleek stainless steel door and adjustable shelves for flexible organization.



Figure 3.1: Interior view of the Midea HS-338FWEDS upright freezer with the door open, displaying multiple transparent drawers and shelves for organized storage of various frozen food items.



Figure 3.2: Front view of the Midea HS-338FWEDS upright freezer with its single door closed, showcasing the stainless steel finish and integrated handle. A smaller image of the interior is shown for reference.



Figure 3.3: Angled front view of the Midea HS-338FWEDS upright freezer, highlighting its modern design and stainless steel exterior.

4. SETUP

4.1 Unpacking

Carefully remove all packaging materials. Dispose of packaging responsibly. Check the appliance for any damage incurred during transit. If damage is found, do not plug in the appliance and contact your retailer.

4.2 Location

- Place the freezer on a firm, level surface to prevent vibrations and noise.
- Ensure adequate ventilation around the appliance. Maintain a minimum clearance of 10 cm (4 inches) from walls and other objects to allow for proper air circulation.
- Avoid placing the freezer in direct sunlight or near heat sources such as stoves, heaters, or radiators, as this will increase energy consumption.
- The appliance is designed for indoor use only.

4.3 Electrical Connection

Before plugging in the appliance, ensure that the electrical outlet is properly grounded and provides the correct voltage (220V). Do not use extension cords or ungrounded adapters. Allow the freezer to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

4.4 Initial Cleaning

Before first use, clean the interior and exterior of the freezer with a soft cloth and a mild detergent solution. Rinse with clean water and dry thoroughly.

4.5 Door Reversal (Optional)

The door of this freezer is hinged on the left. If you wish to reverse the door swing, please refer to the detailed instructions provided in the separate installation guide or contact qualified service personnel. This procedure typically requires specific tools and expertise.

5. OPERATING INSTRUCTIONS

5.1 Temperature Control

The freezer is equipped with a thermostat to control the internal temperature. Locate the temperature control dial, usually inside the freezer compartment. Turn the dial to adjust the temperature setting. A higher number typically indicates a colder temperature. Start with a medium setting and adjust as needed based on your food storage requirements and ambient temperature.

5.2 Food Storage Guidelines

- Always store food in airtight containers or freezer bags to prevent freezer burn and odor transfer.
- Do not place hot food directly into the freezer; allow it to cool down first.
- Avoid overloading the freezer, as this can hinder air circulation and reduce cooling efficiency.
- Organize food using the adjustable shelves and drawers for easy access and to maximize space.
- Label and date food items to ensure proper rotation and consumption within recommended storage times.

5.3 No Frost System

This freezer features an automatic No Frost system, which prevents the build-up of ice and frost inside the freezer compartment. This eliminates the need for manual defrosting, ensuring consistent cooling performance and easier maintenance.

6. MAINTENANCE

6.1 Cleaning the Interior

Regularly clean the interior of your freezer. Unplug the appliance before cleaning. Remove all food items and shelves. Wash the interior surfaces with a solution of mild detergent and warm water. Rinse thoroughly and dry completely before restoring power and food items.

6.2 Cleaning the Exterior

Clean the exterior surfaces with a soft cloth and mild detergent. For stainless steel surfaces, use a specialized stainless steel cleaner to maintain its finish. Wipe door seals regularly to ensure they remain clean and flexible, providing an effective seal.

6.3 Power Outage

In case of a power outage, keep the freezer door closed to maintain the internal temperature for as long as possible. Food can remain frozen for several hours depending on the ambient temperature and how full the freezer is.

6.4 Long-Term Storage

If the freezer will not be used for an extended period, unplug it, empty all contents, clean the interior thoroughly, and leave the door slightly ajar to prevent odors and mold growth.

7. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer does not operate	No power; power cord loose; circuit breaker tripped.	Check power supply; ensure cord is securely plugged in; reset circuit breaker.
Temperature is not cold enough	Temperature setting too high; door opened too frequently; excessive food load; poor ventilation.	Adjust thermostat to a colder setting; minimize door openings; reduce food load; ensure proper ventilation.
Excessive noise	Appliance not level; objects touching the back of the freezer.	Adjust leveling feet; move objects away from the freezer.
Water on floor	Drain pan overflowing; door not sealing properly.	Check and empty drain pan; inspect door seal for damage or obstruction.

If the problem persists after checking these points, please contact qualified service personnel.

8. SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Name	HS-338FWEDS
Product Type	Upright Freezer
Total Capacity	260 Liters
Fresh Food Capacity	200.2 Liters
Freezer Capacity	59.8 Liters
Color	Grey
Material	Stainless Steel (Door), Rust-resistant steel
Defrost System	Automatic (No Frost)
Voltage	220 Volts
Power Source	Corded Electric

Feature	Specification
Plug Type	Type B (North America and Japan) - <i>Please verify local compatibility.</i>
Annual Energy Consumption	290 kWh/year
Energy Efficiency Rating (BEE)	3 Stars
Number of Doors	1
Door Orientation	Left
Special Features	Adjustable Shelves
Cooling Method	Air Compressor
Product Weight	40 kg
Dimensions (Depth x Width x Height)	695 mm x 595 mm x 1855 mm

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product is eligible for a 2-year warranty provided by the manufacturer/brand from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For further details regarding warranty terms, technical assistance, or service requests, please contact the manufacturer or the seller directly. Their contact information can typically be found on the product packaging, official website, or your purchase documentation.

© 2023 Midea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question