

[Manuals.plus](#) /

> [Wahl](#) /

> Wahl Haircut and Beard Trimmer 9639-2201 User Manual

Wahl 9639-2201

Wahl Haircut and Beard Trimmer

Model: 9639-2201

INTRODUCTION

Thank you for choosing the Wahl Haircut and Beard Trimmer. This versatile grooming tool is designed to provide both the power for cutting hair and the precision for trimming facial hair. Featuring self-sharpening, detachable blades and a cord/cordless operation, it offers convenience and hygienic grooming.





Image: The Wahl Haircut and Beard Trimmer 9639-2201, showcasing its design and key features such as self-sharpening precision blades, easy-to-clean removable blades, 60-minute cordless run time, and the inclusion of 12 guide combs for precise grooming. The packaging also indicates it is a 22-piece set and can be used with or without the cord.

IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance. When using an electrical appliance, basic precautions should always be followed, including the following:

- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning, putting on or taking off parts.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended household use as described in this manual.
- Do not use attachments not recommended by the manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken comb, as facial injury may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "off", then remove plug from outlet.

PACKAGE CONTENTS

Your Wahl Haircut and Beard Trimmer package includes:

- Wahl Haircut and Beard Trimmer (Model 9639-2201)
- Power Adapter/Charger
- 12 Secure Fit Guide Combs (various lengths from 1/16" to 1", including left and right ear taper)
- Cleaning Brush
- Blade Oil
- Instruction Manual
- Storage Pouch/Case (if included in 22-piece set)

SETUP

Charging the Trimmer

1. Ensure the trimmer is turned off.
2. Connect the power adapter to the charging port on the trimmer.
3. Plug the adapter into a suitable electrical outlet (120V-240V).
4. Allow the trimmer to charge for approximately 1 hour for a full charge. A full charge provides up to 60 minutes of run time.
5. The trimmer can be used corded while charging if needed.

Attaching Guide Combs

1. Select the desired guide comb length. The combs are marked with their respective lengths (e.g., 1/16", 1/8", etc.).
2. Align the guide comb with the trimmer blade.
3. Snap the comb firmly onto the blade until it clicks into place.
4. To remove, gently lift the back of the comb and slide it off the blade.

OPERATING INSTRUCTIONS

General Trimming Tips

- For best results, use the trimmer on clean, dry hair.
- Always start with a longer guide comb and gradually reduce the length if desired.
- Move the trimmer against the direction of hair growth for an even cut.

- Overlap strokes to ensure all hair is cut.

Haircutting

1. Attach the desired guide comb.
2. Turn on the trimmer.
3. Begin cutting from the nape of the neck, moving upwards.
4. Use the ear taper combs for blending around the ears.
5. For the top of the head, use a longer comb or a comb-over-finger technique.

Beard Trimming

1. Ensure your beard is clean and dry.
2. Attach a suitable guide comb for your desired beard length.
3. Trim against the grain of your beard growth.
4. For detailing and outlining, remove the guide comb and use the bare blade carefully.

MAINTENANCE

Cleaning the Blades

The self-sharpening precision ground blades are rinsable and detachable for hygienic grooming.

1. Turn off the trimmer and unplug it from the power source if corded.
2. Detach the blade set by pushing it away from the trimmer body.
3. Use the cleaning brush to remove loose hairs from the blades and the trimmer body.
4. Rinse the detached blades under running water. Ensure the trimmer body does not get wet.
5. Allow the blades to air dry completely before reattaching.

Oiling the Blades

To maintain optimal performance and blade longevity, oil the blades regularly.

1. After cleaning and drying the blades, apply 2-3 drops of Wahl blade oil across the top of the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

Storage

Store the trimmer and its accessories in a dry, cool place, away from direct sunlight and moisture. Use the provided storage pouch/case to keep all components together and protected.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or dead.	Charge the trimmer for at least 1 hour. Ensure the power adapter is securely connected.
Trimmer pulls hair or cuts unevenly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If blades are excessively dull, consider replacement.

Problem	Possible Cause	Solution
Trimmer makes unusual noise.	Blades are not properly aligned or lubricated.	Ensure blades are correctly attached and oiled.
Short run time.	Battery not fully charged or battery life diminishing.	Ensure a full 1-hour charge. If problem persists, battery may need service.

SPECIFICATIONS

Feature	Detail
Model Name	9639-2201
Brand	Wahl
Power Source	Battery Powered (Cord/Cordless Operation)
Blade Material	Stainless Steel
Run Time	Up to 60 minutes (from 1-hour charge)
Voltage	120V-240V (Worldwide Voltage)
Special Features	Self-sharpening, Detachable, Rinsable Blades
Included Accessories	12 Secure Fit Guide Combs
Color	Black and Silver
Target Audience	Men, Women

WARRANTY AND SUPPORT

Wahl products are tested to ensure they meet the highest quality standards. This product comes with a manufacturer's warranty against defects in material and workmanship. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, replacement parts, or warranty claims, please contact Wahl Customer Service. Contact information can typically be found on the Wahl official website or on the warranty card.

Website: www.wahl.com

© 2024 Wahl Clipper Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my Wahl 9639-2201 Haircut and Beard Trimmer not cutting hair properly?

If your Wahl 9639-2201 Haircut and Beard Trimmer is not cutting hair, pulling hair, or cutting unevenly, follow these troubleshooting steps based on the manual: Clean the Blades: Hair buildup can prevent the blades from...

[Read full answer](#)