

[Manuals.plus](#) /

› [Betus](#) /

› Betus Digital Travel Alarm Clock User Manual

## Betus B.Clock.Fold.Light

# Betus Digital Travel Alarm Clock User Manual

Model: B.Clock.Fold.Light

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Betus Digital Travel Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## PRODUCT FEATURES

- Large font display with backlight for easy readability.
- Displays date, time, and temperature.
- Integrated alarm clock and timer functions.
- Compact and foldable design for portability.
- Battery operated for convenience.

## PRODUCT OVERVIEW AND COMPONENTS



Figure 1: Front view of the Betus Digital Travel Alarm Clock, displaying time, month-date, day, and temperature on a green backlit LCD screen.



Figure 2: Dimensions of the Betus Digital Travel Alarm Clock, showing its compact size.

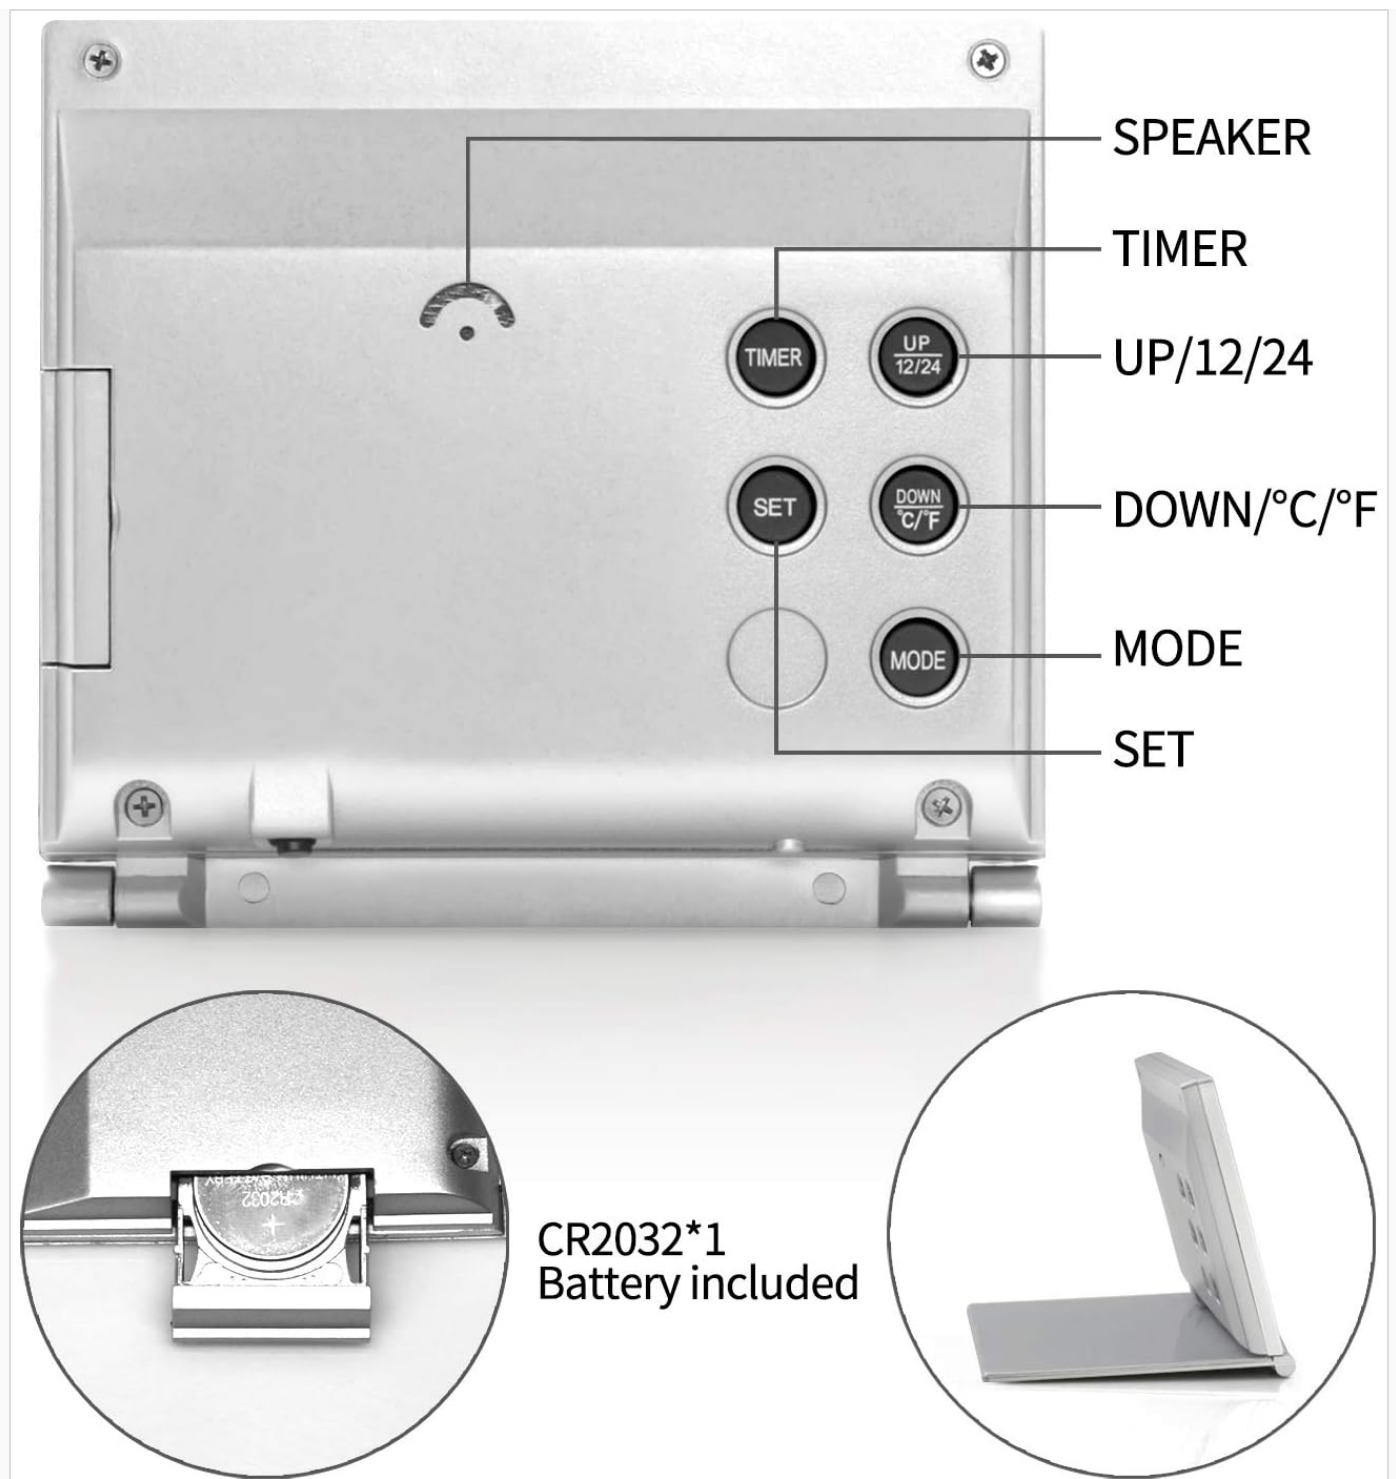


Figure 3: Rear view of the clock, highlighting the control buttons: TIMER, UP/12/24, SET, DOWN/°C/°F, and MODE. The speaker and battery compartment are also visible.

### Control Buttons:

- **SET:** Enters setting mode for time, date, and alarm. Confirms selections.
- **UP/12/24:** Adjusts values up; in time mode, changes time format between 12-hour and 24-hour.
- **DOWN/°C/°F:** Adjusts values down; in time mode, changes temperature unit between Celsius and Fahrenheit.
- **MODE:** Switches between time, alarm, and timer display modes.
- **TIMER:** Enters countdown timer setting mode and starts/stops the timer.
- **Light Button (located below the digital clock):** Activates the backlight for 8 seconds when pressed.

## SETUP

## Battery Installation:

The clock requires one CR2032 button cell battery. The battery compartment is located on the back of the unit (refer to Figure 3).

1. Open the battery compartment cover on the back of the clock.
2. Insert one CR2032 battery with the positive (+) side facing up.
3. Close the battery compartment cover securely.

## OPERATING INSTRUCTIONS

### 1. Setting Time Format (12/24 Hour):

- In time mode, press the **"UP/12/24"** button to change the time format between 12-hour and 24-hour.

### 2. Setting Time and Date:

1. In time mode, press the **"SET"** button to enter time setting mode.
2. The setting sequence is: hours, minutes, years, months, days.
3. Press **"UP/12/24"** and **"DOWN/°C/°F"** buttons to set your desired time and date.
4. Press **"SET"** to confirm each setting and move to the next.
5. *Important:* Please ensure you set the correct year, otherwise the date/day will display incorrectly. There is no way to change the day directly. Once you have selected the correct year, month, and date, the day will display correctly.
6. If you find the day displays incorrectly: In time mode, press the **"SET"** button three times to reach the year setting. Then press **"UP/12/24"** to select the correct year. Press **"SET"** and **"UP/12/24"** with the same steps to select the correct Month and Date. Once done, hit the **"SET"** button, and the day will change correctly.

### 3. Alarm Setting:

1. Press the **"MODE"** button to enter alarm setting mode.
2. Then press the **"SET"** button to set hours, minutes, snooze time, and alarm tone in sequence.
3. Use **"UP/12/24"** and **"DOWN/°C/°F"** buttons to choose your desired time, snooze time, and alarm tone.

### 4. Turning Alarm ON/OFF & Snooze:

- In alarm mode, press **"DOWN/°C/°F"** or **"UP/12/24"** button to turn on/off the alarm and snooze. An alarm icon will be displayed when the alarm is active.
- When the alarm goes off, it will ring for 1 minute.
- When snooze is set up, snooze will work ONLY twice.
- During the alarm, press any button (except **"SET"**) to activate snooze.
- To turn off the alarm completely, press **"SET"** during the alarm.



## How to Turn Off the alarm?

If you turn on the alarm, there will be a "⏰" icon displayed on the clock.

If you want to turn off the alarm mode, you should

1. Press the "MODE" button in TIME mode, and you will see a "🔔" bell icon and "⏰" icon displayed. This means you successfully entered the Alarm mode setting.
2. Press the "UP" or "DOWN" button until there are "- : -" display.  
(You can also use this way to close the snooze)
3. Press the "MODE" button until it displays the normal time.

If there is only a "TIME" icon and no "⏰" icon display, this means you successfully turn off the alarm.

Figure 4: Visual guide for turning off the alarm. If only a "TIME" icon and no alarm icon is displayed, the alarm is successfully turned off.

## 5. Using the Countdown Timer:

1. Press the "TIMER" button to enter countdown timer mode.
2. Press "SET" to set the desired countdown time (hours, minutes, seconds).
3. Use "UP/12/24" or "DOWN/°C/°F" to adjust the values.
4. Press "TIMER" again to start the countdown.
5. The timer will sound when it reaches zero.



Figure 5: The clock displaying the countdown timer function.

## 6. Temperature Unit (°C/°F):

- In time mode, press the "**DOWN/°C/°F**" button to switch between Celsius and Fahrenheit temperature display.

## MAINTENANCE

### Cleaning:

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.

### Battery Replacement:

When the display becomes dim or functions become erratic, it is time to replace the CR2032 battery. Follow the battery installation steps in the "Setup" section.

## TROUBLESHOOTING

| Problem                              | Possible Cause                            | Solution                                                                                                            |
|--------------------------------------|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Display is blank or dim.             | Low or dead battery.                      | Replace the CR2032 battery.                                                                                         |
| Incorrect day of the week displayed. | Incorrect year setting.                   | Re-enter time setting mode and ensure the correct year, month, and date are set. The day will update automatically. |
| Alarm does not sound.                | Alarm is not activated or set correctly.  | Ensure the alarm icon is displayed in alarm mode. Verify alarm time settings.                                       |
| Buttons are unresponsive.            | Temporary software glitch or low battery. | Remove and reinsert the battery to reset the device. If the problem persists, replace the battery.                  |

## SPECIFICATIONS

| Feature             | Detail                                    |
|---------------------|-------------------------------------------|
| Model Number        | B.Clock.Fold.Light                        |
| Display Type        | Digital LCD with Backlight                |
| Dimensions (Folded) | 3" (H) x 3.4" (W) x 0.55" (D)             |
| Weight              | 2.9 ounces                                |
| Power Source        | 1 x CR2032 Button Cell Battery            |
| Material            | ABS Plastic                               |
| Alarm Tone Options  | 16 Music Tones                            |
| Snooze Duration     | Snooze works twice                        |
| Time Format         | 12-hour / 24-hour selectable              |
| Temperature Unit    | Celsius (°C) / Fahrenheit (°F) selectable |

## WARRANTY AND SUPPORT

Betus stands behind its products. All Betus products are covered by a 1-year warranty from the date of purchase. For technical support, troubleshooting assistance, or warranty claims, please contact Betus customer service through the official Betus store on Amazon or refer to the contact information provided with your purchase. You can also visit the [Betus Store on Amazon](#) for more information and resources. A PDF user manual is also available for download: [User Manual \(PDF\)](#)

© 2024 Betus. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**