

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DOYO](#) /
- › [DOYO Wireless Wii Guitar Hero Controller User Manual](#)

DOYO B088WRZ28S

DOYO Wireless Wii Guitar Hero Controller

INSTRUCTION MANUAL

Product Overview

This manual provides instructions for the DOYO Wireless Wii Guitar Hero Controller, designed for use with Nintendo Wii and Wii U consoles. It is compatible with all Guitar Hero titles and Rock Band 2 & 3 games. This controller enhances your music rhythm gaming experience with its ergonomic design and responsive controls.

Setup

1. Assembly

The DOYO Wireless Wii Guitar Hero Controller features a detachable neck for convenient storage and transport. To assemble, align the neck with the guitar body and slide it into place until it clicks securely. To detach, press the release button located on the back of the guitar body near the neck joint and slide the neck out.


The guitar body and the long neck are separable, reducing the footprint
(Exclude Wii Remote Control)



The guitar body and the long neck are separable, reducing the footprint for storage.

2. Connecting the Wii Remote

The guitar controller is powered by and connects to a standard Wii Remote (not included). Open the compartment on the back of the guitar body. Insert your Wii Remote into the designated slot, ensuring the connector cable is properly plugged into the remote's expansion port. Close the compartment cover securely.

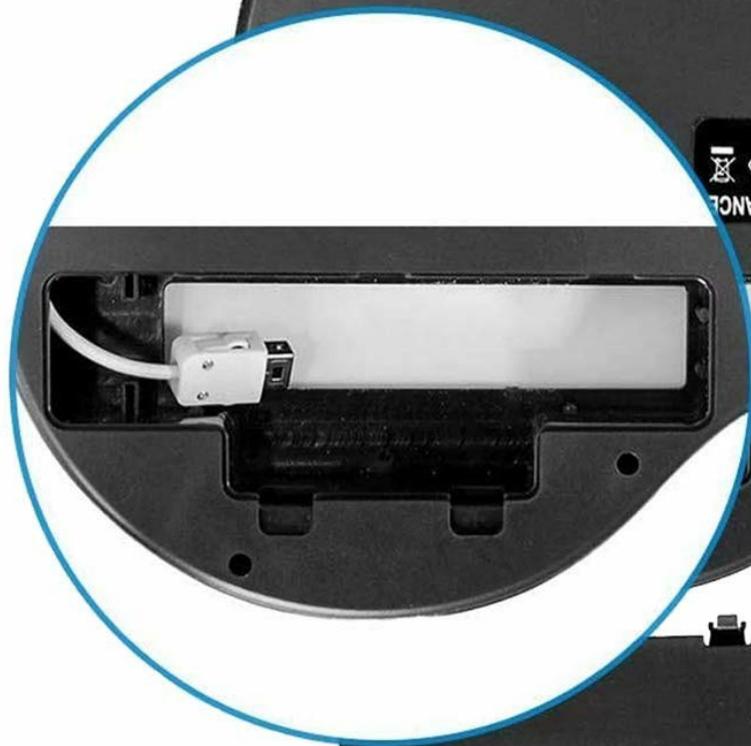

**Will Remote Control
Slot Easy To connect and hold the Will remote**

EASY INSTALLATION

The Wii Remote Control slot allows for easy connection and secure holding of the Wii Remote.

Official video demonstrating the connection of a Wii Remote to the DOYO Wireless Wii Guitar Hero Controller.

3. Synchronization

Once the Wii Remote is inserted, synchronize it with your Wii or Wii U console as you would with any other Wii accessory. Press the SYNC button on the console and then the SYNC button on the Wii Remote (usually found inside the battery compartment or under a small cover).

Operating Instructions

The DOYO Wireless Wii Guitar Hero Controller features multi-colored fret buttons, a strum bar, and a whammy bar for an immersive gaming experience.

Guitar Hero Controller

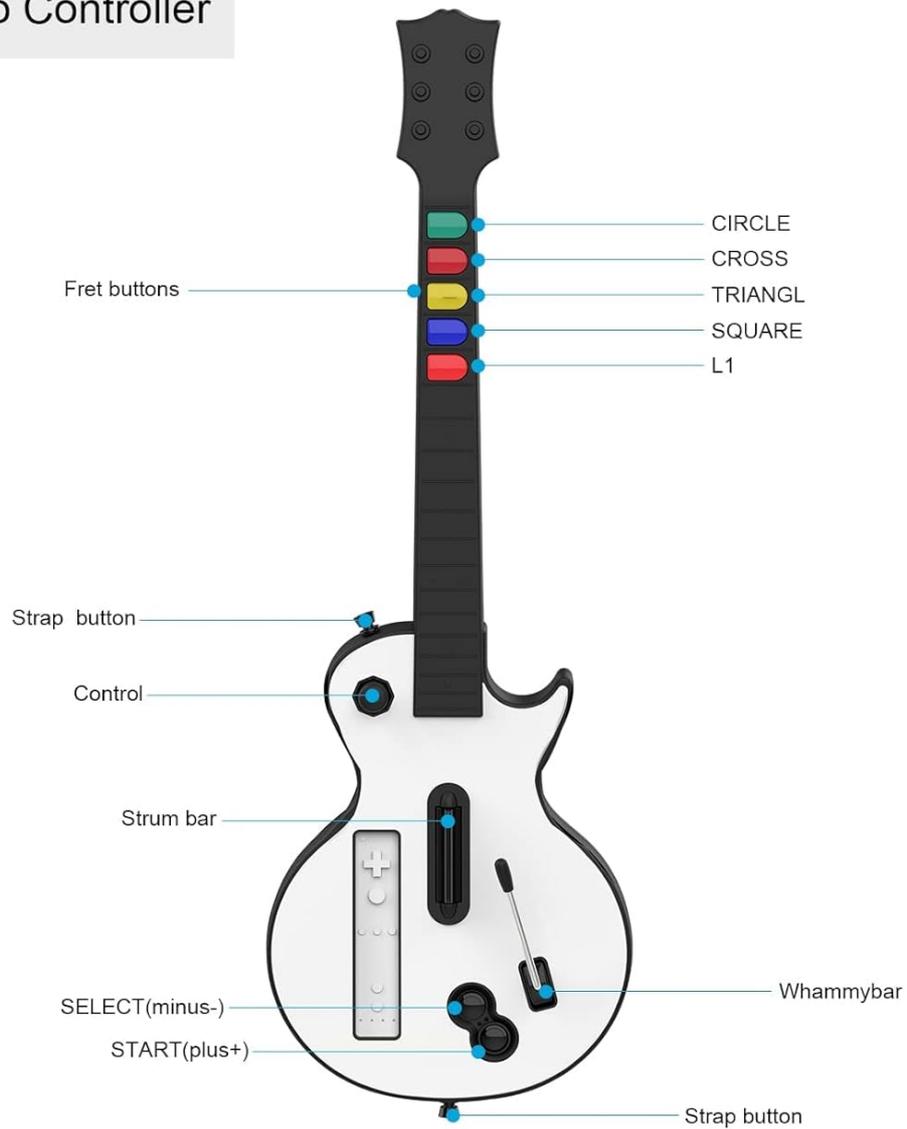


Diagram illustrating the various controls on the Guitar Hero Controller, including fret buttons, strum bar, and whammy bar.

Game Compatibility

This controller is compatible with the following games:

- All Guitar Hero titles for Nintendo Wii and Wii U.
- Rock Band 2 and Rock Band 3 for Nintendo Wii and Wii U.

Compatible with All Guitar Hero Games and Rock Band 2 and 3



Visual representation of compatible Guitar Hero and Rock Band game titles.

Important Compatibility Notes:

- **Not compatible with Rock Band 1:** Rock Band 1 requires a microphone to play, which this guitar controller does not support.
- **No microphone input:** This controller does not support voice gameplay. It is not compatible with any games requiring a microphone input.



Visual warning about incompatibility with Rock Band 1 and games requiring microphone input.

Maintenance

Cleaning Contact Points

If you experience intermittent disconnections or unresponsive buttons, prolonged use or non-use may cause oxidation of the device's contact points. To resolve this, gently wipe the contact points with a cotton swab lightly dampened with alcohol or use a pencil eraser to clean them. Ensure the contacts are dry before re-inserting the Wii Remote.



When you start the game, the guitar's color buttons will show scrolling and will emit rhythmic notes

Instructions for cleaning the guitar's contact points to prevent disconnection issues.

Troubleshooting

Controller Not Responding / Frequent Disconnections

- **Check Wii Remote Connection:** Ensure the Wii Remote is securely inserted into the guitar controller's slot and the connector cable is firmly attached.
- **Clean Contact Points:** Refer to the 'Maintenance' section for instructions on cleaning the contact points between the guitar and the Wii Remote. Oxidation can cause connectivity issues.
- **Re-synchronize:** Try re-synchronizing the Wii Remote with your console.
- **Wii Remote Battery:** Ensure the Wii Remote has sufficient battery power. Replace batteries if necessary.
- **Interference:** Minimize potential wireless interference by moving other wireless devices away from the console and controller.

Specifications

Model Number	B088WRZ28S
Brand	DOYO
Compatibility	Nintendo Wii, Wii U (Guitar Hero games, Rock Band 2 & 3)
Connectivity	Wireless (via Wii Remote)
Power Source	Wii Remote (no additional batteries required for guitar)
Dimensions (approx.)	30 inches long (with neck), 9.5 inches wide (at guitar body)
Item Weight	2.99 pounds

Warranty and Support

For product support, please contact DOYO customer service. Information regarding specific warranty periods may be available through your retailer or on the official DOYO website. This product is subject to a 30-day return/replacement policy from the date of purchase.

For further assistance, please visit the [DOYO Store on Amazon](#).