

EuropAce ER 3161T

EuropAce ER 3161T 200L Deluxe 1 Door Upright Fridge User Manual

Model: ER 3161T

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or performing maintenance.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

2. PRODUCT OVERVIEW

The EuropAce ER 3161T is a 200L Deluxe 1 Door Upright Fridge designed for efficient food storage. It features a stylish interior LED light for clear visibility and a reversible door with a magnetic seal for flexible placement and secure closure.

Key components include a crystal drain pan, a crystal crisper drawer for fresh produce, and two spill-free toughened glass shelves for organized storage. The fridge has a net capacity of 135L and a freezer net capacity of 20L, with a semi-automatic defrosting system.



Image: Front view of the EuropAce ER 3161T 200L Deluxe 1 Door Upright Fridge. This image displays the single door design and overall compact form factor of the appliance.

3. SETUP AND INSTALLATION

3.1 Unpacking

1. Remove all packaging materials, including foam and adhesive tape.
2. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

3.2 Placement

1. Place the refrigerator on a firm, level floor. Use the adjustable feet to ensure stability.
2. Allow adequate space around the appliance for proper ventilation (at least 10 cm at the back and sides).
3. Avoid placing the refrigerator in direct sunlight or near heat sources like stoves, ovens, or radiators.

3.3 Door Reversal

The door of the ER 3161T is reversible, allowing it to open from either the left or right side. If you need to change the door swing direction, refer to the detailed instructions provided in the separate door reversal kit or contact customer service for guidance. This process typically involves moving hinges and plugs from

one side to the other.

3.4 Power Connection

1. After placement, allow the refrigerator to stand upright for at least 2-4 hours before plugging it into a power outlet. This allows the refrigerant to settle.
2. Connect the appliance to a dedicated, properly grounded electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator is equipped with a temperature control dial, usually located inside the fresh food compartment. Turn the dial to adjust the cooling intensity. A higher number typically indicates colder temperatures. Start with a medium setting and adjust as needed based on ambient temperature and food load.

4.2 Food Storage Guidelines

- Store fresh produce in the crystal crisper drawer to maintain humidity and freshness.
- Utilize the two spill-free toughened glass shelves for general food items, ensuring proper air circulation.
- Do not overload the shelves, as this can impede cooling efficiency.
- Ensure all food items are covered to prevent moisture loss and odor transfer.

4.3 Defrosting

The ER 3161T features a semi-automatic defrosting system. Frost will accumulate on the freezer compartment walls. When the frost layer becomes approximately 5mm thick, manual defrosting is recommended to maintain efficiency. To defrost:

1. Unplug the refrigerator from the power outlet.
2. Remove all food items and place them in a cooler.
3. Leave the refrigerator door open to allow frost to melt naturally.
4. Place a towel or shallow pan at the bottom to collect melted water, or utilize the crystal drain pan if designed for this purpose.
5. Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in and returning food.

5. MAINTENANCE AND CARE

5.1 Cleaning the Interior

1. Always unplug the refrigerator before cleaning.
2. Wash the interior surfaces, including the crystal drain pan, crystal crisper drawer, and toughened glass shelves, with a solution of mild detergent and warm water.
3. Rinse thoroughly and dry with a soft cloth.
4. Do not use abrasive cleaners, scouring pads, or harsh chemicals.

5.2 Cleaning the Exterior

1. Wipe the exterior surfaces with a soft cloth dampened with mild detergent and water.
2. For the magnetic door seal, clean gently with a damp cloth to ensure it remains pliable and seals

effectively.

3. Regularly vacuum the condenser coils at the back of the refrigerator (if accessible) to maintain cooling efficiency.

5.3 Extended Absence

If the refrigerator will not be used for an extended period, unplug it, empty all contents, defrost (if necessary), clean the interior thoroughly, and leave the door slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	No power; power cord not plugged in; circuit breaker tripped.	Check power supply; ensure plug is secure; reset circuit breaker.
Temperature is not cold enough	Temperature control set too warm; door opened too frequently; warm food placed inside; poor ventilation.	Adjust temperature control to a colder setting; minimize door openings; allow hot food to cool before storing; ensure adequate space around the unit.
Unusual noises	Appliance not level; objects vibrating against the unit; normal operating sounds.	Level the appliance using adjustable feet; ensure nothing is touching the back or sides; gurgling or humming sounds are normal.
Water on floor	Drain pan overflowing; drain hole blocked.	Empty and clean the crystal drain pan; clear any blockage from the drain hole.

7. SPECIFICATIONS

Feature	Specification
Brand	EuropAce
Model	ER 3161T
Total Capacity	200 Liters
Fridge Net Capacity	135 Liters
Freezer Net Capacity	20 Liters
Product Dimensions (W x D x H)	52.5 x 51.5 x 113.5 cm
Item Weight	32 kg
Number of Doors	1
Defrosting System	Semi-Automatic

Feature	Specification
Special Features	Reversible door, Interior LED light
Shelf Type	Glass
Configuration	Full-Sized Freezer-on-Top
Installation Type	Freestanding

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or visit the official EuropAce website. Keep your purchase receipt as proof of purchase.

For technical assistance, spare parts, or service inquiries, please contact EuropAce customer service through their official channels. Provide your model number (ER 3161T) and serial number (if applicable) when seeking support.