

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [UltraPro](#) /

> [UltraPro GE 6-Device Backlit Universal Remote Control User Manual](#)

### UltraPro 47504v

# UltraPro GE 6-Device Backlit Universal Remote Control User Manual

Model: 47504v

## INTRODUCTION

This user manual provides comprehensive instructions for setting up and operating your UltraPro GE 6-Device Backlit Universal Remote Control. This remote is designed to consolidate control of up to six different audio and video devices, simplifying your home entertainment experience. It features pre-programming for popular brands like Samsung and Roku, along with easy setup options for other devices.





Figure 1: Front and side view of the UltraPro GE 6-Device Backlit Universal Remote Control. The remote is black with purple and white buttons, featuring a sleek, ergonomic design.

## SETUP AND INSTALLATION

### 1. Battery Installation

The remote requires two AA batteries (not included). To install:

1. Open the battery compartment cover on the back of the remote.
2. Insert two AA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

### 2. Pre-programmed Devices

The remote's TV and STRM device buttons are pre-programmed for immediate use with Samsung TVs and Roku streaming media boxes. No programming is required for these specific devices, though it is not compatible with Roku

Streaming Sticks or Amazon Fire TV/Sticks.

### 3. Programming Other Devices

For other devices, you can use either automatic code search or direct code entry. Refer to the "Programming Instructions" section for detailed steps.

**6**  
DEVICE  
Up to 6 controllable devices

**UltraPro™**

Select the device to control

Backlight ON/OFF

Home & menu navigation  
Easily access features on streaming devices

Big-button keypad

3 streaming app hotkeys  
For smart TVs and app-enabled devices to access apps, like Netflix, Hulu and Amazon Prime – nonprogrammable

DVD/Blu-ray™ open/close

Fully control all your media

Requires 2 AA batteries  
(Not included)

**Preprogrammed for Roku® & Samsung TVs**  
Control your Samsung TV or Roku device via the TV or STRM button – no programming required  
NOT COMPATIBLE with Roku Streaming Stick or Amazon Fire TV/Stick

Figure 2: Key features of the remote, including device selection buttons, backlight ON/OFF, streaming app hotkeys, home and menu navigation, big-button keypad, and DVD/Blu-ray open/close button.

## OPERATING INSTRUCTIONS

### Device Selection

To control a specific device, press the corresponding device button at the top of the remote (e.g., TV, B-RAY, CBL, STRM, AUD, AUX). The remote will then send commands to the selected device.



# Controls your devices



Soundbar/audio



Streaming media players



Home theater



TVs



DVD/Blu-ray™ player



Cable/satellite

Comprehensive code library works with all major brands and supports thousands of the latest and legacy audio/video components  
Samsung · Vizio · JVC · Sony · Emerson · Element · Hisense · Westinghouse · Etc.

Figure 3: The remote can control up to six different devices, including soundbars/audio systems, streaming media players, home theater systems, TVs, DVD/Blu-ray players, and cable/satellite boxes.

## Master Volume Control

The master volume control feature allows you to adjust the audio level regardless of which device is currently selected. This means you can control your soundbar or TV volume without switching device modes.

## Backlighting

The remote features full backlighting with blue LEDs for enhanced visibility in low-light settings. Press the light bulb button at the top right of the remote to toggle the backlighting on or off.



## Soft blue LED backlighting

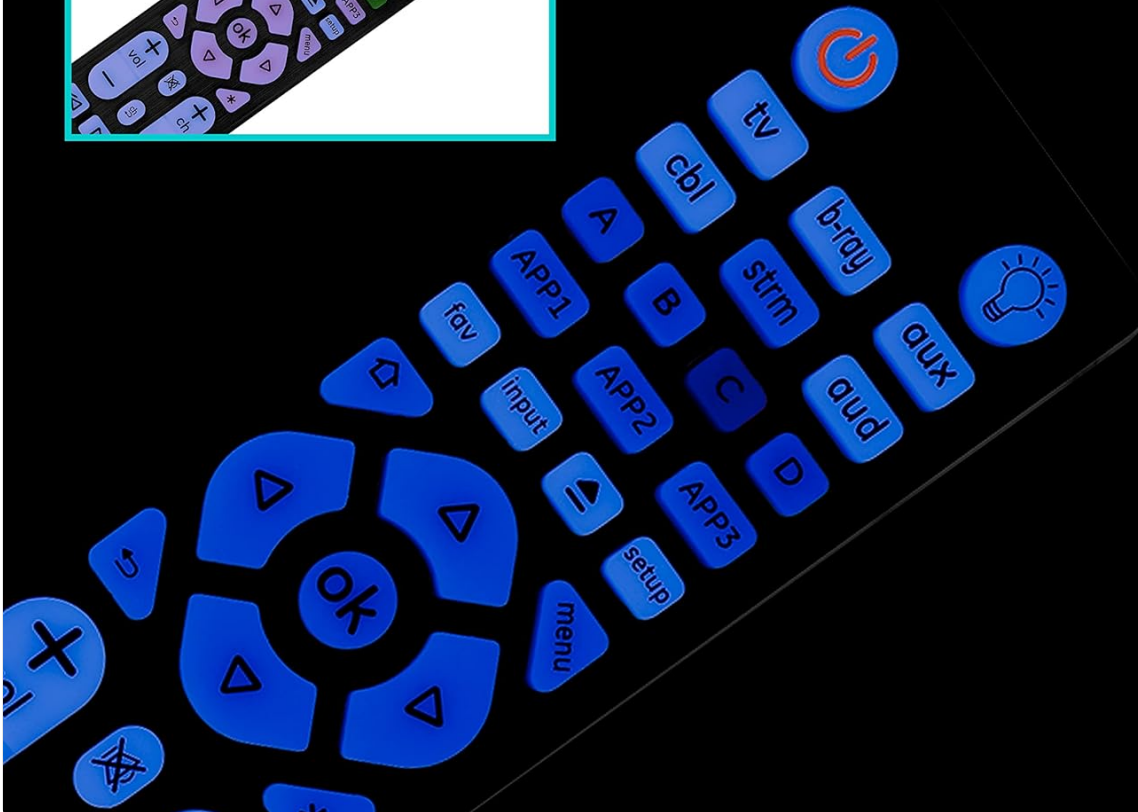


Figure 4: The soft blue LED backlighting illuminates all buttons for easy use in dark or dimly lit rooms.

### Advanced Functions

- **Blu-ray/DVD Open/Close:** A dedicated button is included for controlling the disc tray of your Blu-ray or DVD player.
- **DVR Functions:** Utilize advanced DVR functions for recording, playback, and navigation.
- **Menu Navigation:** Simple menu navigation buttons (up, down, left, right, OK) allow you to browse menus on your devices.
- **Dot Button:** Access sub-channels using the dot button.
- **Streaming App Hotkeys:** Three dedicated hotkeys (APP1, APP2, APP3) provide direct access to your smart TV's primary streaming applications. These are non-programmable.

### PROGRAMMING INSTRUCTIONS

To program your UltraPro GE Universal Remote Control for devices not pre-programmed, follow these steps:

1. **Find Remote Codes:** Locate the remote codes for your specific device brand. These codes can typically be found in the included code list or online at the manufacturer's support website (e.g., [www.byjasco.com/remotecodes](http://www.byjasco.com/remotecodes)).
2. **Enter Setup Mode:** Press and hold the **SETUP** button until the red indicator light on the remote turns on, then release the button.
3. **Select Device:** Press and release the device button on the remote (e.g., TV, CBL, B-RAY) that you wish to program. The red indicator light will blink once and remain lit.
4. **Enter Code:** Starting with the first code from your list, key in the 3, 4, or 5-digit code using the number buttons on the remote. After each digit is entered, the red indicator light will blink. If the code is valid, the light will turn off. If the code is invalid, the light will flash rapidly.
5. **Test Device:** Point your remote at the device and test different buttons (e.g., Power, Volume, Channel) to see if the device responds correctly.
6. **Repeat for Additional Devices:** If the device does not respond or not all functions work, repeat the process with the next code from your list until full functionality is achieved. Repeat steps 2-5 for each additional device you wish to program.



## How To Program Device

1. Find the remote codes for your device.\*
2. Press the setup button until the red indicator light turns on, then release.
3. Press and release device button on remote.
4. Starting with the first code, key in the code using the number buttons.
5. Point your remote at the device and test different buttons to see if the device responds.
6. Repeat process for each additional device.

\*Find your codes at [www.byjasco.com/remotecodes](http://www.byjasco.com/remotecodes)

Figure 5: Visual guide for programming devices, highlighting the setup button and number keypad for code entry.

## PRODUCT FEATURES

- **Multi-device control:** Operate up to six different audio and video devices such as TVs, Blu-ray/DVD players, cable/satellite receivers, soundbars, and more.
- **Best remote code library:** Universal remote works with all major brands and supports thousands of the latest audio and video devices (not for use with radio frequency devices like Roku Streaming Sticks and Amazon Fire TV/Sticks).
- **Simple setup:** Add two AA batteries (not included) and enjoy easy automatic code search and direct code entry programming, as well as master volume control to adjust the audio no matter which device is being used.
- **Preprogrammed for Samsung and Roku:** Universal remote's TV and STRM device buttons are preprogrammed for immediate use with Samsung TVs and Roku streaming media boxes (not compatible with Roku Streaming Sticks).
- **Fully backlit with a stylish finish:** The brushed black finish enhances any décor; blue LED backlighting helps you see each button easily in dark or dimly lit rooms.

## MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light does not illuminate during button presses. Always replace both batteries at the same time with new AA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate device.	Incorrect device mode selected; batteries are low or dead; remote not programmed correctly.	Ensure the correct device button is pressed. Replace batteries. Reprogram the remote using the correct code for your device.
Some buttons do not work.	Incorrect code used; device not fully compatible.	Try other codes listed for your device brand. Some advanced functions may not be supported by all universal remotes.
Backlighting is dim or not working.	Low batteries.	Replace batteries with new ones.

## SPECIFICATIONS

- **Model Number:** 47504v
- **Color:** Black
- **Max Number of Supported Devices:** 6
- **Power Source:** 2 x AA Batteries (not included)

- **Dimensions:** 9.02 x 2.4 x 1.57 inches
- **Item Weight:** 4.6 ounces
- **Compatible Devices:** Sony, Samsung, Hisense, Westinghouse, LG, Toshiba, Sharp, Vizio, Insignia, Philips, TCL, Panasonic, Roku, Apple TV, Smart TVs, Streaming Players, Blu-Ray, DVD, VCR, Home Theater, and more.



Figure 6: Physical dimensions of the remote control: approximately 8.65 inches long, 1.88 inches wide, and 1.06 inches deep.

## WARRANTY AND SUPPORT

For warranty information, technical support, or to access the full product manual (PDF), please visit the manufacturer's official website or refer to the documentation included with your purchase. A digital version of the user guide is available at:

<https://manuals.plus/m/a1a0dc82759d8ff7b47913495f68879cf08fd77365d0b959d5dc3d12bc09885f>

Manufacturer: Jasco Products Company, LLC

