

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux Pure D8.2 Silence Vacuum Cleaner PD82-8DB User Manual](#)

## Electrolux PD82-8DB

# Electrolux Pure D8.2 Silence Vacuum Cleaner PD82-8DB User Manual

Model: PD82-8DB

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Electrolux Pure D8.2 Silence Vacuum Cleaner, model PD82-8DB. Please read these instructions carefully before using the appliance and keep them for future reference.



The Electrolux Pure D8.2 Silence Vacuum Cleaner, recognized for its design and performance.

## SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for domestic use only.

- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.

## PACKAGE CONTENTS

Your Electrolux Pure D8.2 Silence Vacuum Cleaner package includes the following components:

- Electrolux Pure D8.2 Silence Vacuum Cleaner unit
- Hose assembly
- Telescopic tube
- OneGo Power Clean nozzle (main brush for all floor types)
- ParkettoPro nozzle (for sensitive surfaces)
- 3-in-1 tool (crevice tool, upholstery brush, dusting brush)
- S-bag® Classic Long Performance dust bags (x2)
- Motor filter
- User Manual



All components included with the Electrolux Pure D8.2 Silence Vacuum Cleaner.



The versatile 3-in-1 tool for various cleaning tasks.

## SETUP

Follow these steps to assemble your vacuum cleaner before first use:

- 1. Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the 'Package Contents' section are present.
- 2. Attaching the Hose:** Insert the hose end into the suction inlet on the main unit until it clicks securely into place.
- 3. Connecting the Telescopic Tube:** Attach the handle end of the hose to the telescopic tube. Adjust the telescopic tube to a comfortable length by pressing the release button and extending or retracting it.
- 4. Attaching the Nozzle:** Connect your desired cleaning nozzle (e.g., OneGo Power Clean or ParkettoPro) to the end of the telescopic tube. Ensure it is firmly attached.
- 5. Inserting the S-bag:** Open the dust bag compartment. Ensure an S-bag is correctly inserted. The vacuum cleaner comes with two S-bag Classic Long Performance bags.
- 6. Power Connection:** Extend the power cord and plug it into a suitable electrical outlet (230V). The action radius is 12 meters.



**Motor effect**



**Action radius**



The vacuum cleaner's 600W motor and 12-meter action radius.

## OPERATING INSTRUCTIONS

Your Electrolux Pure D8.2 Silence Vacuum Cleaner is designed for ease of use and efficient cleaning.

### Powering On/Off

Press the power button located on the main unit or the remote control on the handle to turn the vacuum cleaner on or off.

### Adjusting Suction Power

The vacuum cleaner offers flexible suction power control:

- **Remote Power Regulation:** Use the +/- buttons on the comfortable handle to adjust the suction power. An LED screen on the handle provides clear indication of the selected power level.
- **Smart Mode:** Activate Smart Mode for automatic suction power adjustment. This advanced technology detects the floor type

(e.g., hard floor, carpet) and optimizes suction for seamless transitions and effective cleaning.



## Remote power regulation

Clean without bending down to adjust the power level. And see clearly with the LED screen

Remote power regulation on the handle for convenient control.



## A SMARTer way to clean

The SMART mode automatically adjusts the suction power to optimise performance for any type of floor

The brush head features Smart Mode for an intelligent cleaning experience.

### Using Different Nozzles

- **OneGo Power Clean Nozzle:** This main nozzle is designed for superior particle pick-up on all floor types, from fine dust to larger debris.
- **ParkettoPro Nozzle:** Use this nozzle for delicate hard floors to prevent scratches and ensure gentle cleaning.
- **3-in-1 Tool:** This versatile accessory can be used as a crevice tool for tight spaces, an upholstery brush for furniture, or a dusting brush for delicate surfaces.

### Parking and Storage

The vacuum cleaner can be parked horizontally or vertically for convenient storage. The centrally located handle ensures perfect weight balance for easier lifting and carrying.



## Easily grab and go

The centrally located handle ensures perfect weight balance for easier lifting and carrying

The central handle allows for easy lifting and carrying.

### **MAINTENANCE**

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

#### **Changing the S-bag® Dust Bag**

An LED alert on the main unit will indicate when the S-bag is full and needs to be changed. The 3.5 L S-bag features a hygienic closing system to prevent dust contact during disposal.

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment cover.
3. Carefully remove the full S-bag, ensuring the hygienic closing system seals the bag.
4. Insert a new S-bag, making sure it is correctly positioned in the holder.
5. Close the dust bag compartment cover securely.

PURE**D8.2** · SILENCE



## Bag replacement alert

An LED alerts you when the S-bag® is full and must be changed

The LED alert indicates when the S-bag needs replacement.



## Easier, hygienic bag changes

The 3.5 L S-bag® captures and seals away dust for more hygienic bag changes without dust contact

The S-bag design ensures hygienic dust bag changes.

### Cleaning/Replacing Filters

The vacuum cleaner is equipped with a washable HEPA filter. Refer to the filter compartment for specific instructions on removal and cleaning. Ensure the filter is completely dry before reinserting.

### Cleaning Nozzles and Accessories

Periodically check nozzles and accessories for blockages or tangled hair/fibers. Clean them as needed to maintain effective suction.

### TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum cleaner does not start	Not plugged in; no power at outlet; power button not pressed.	Check power cord connection; check circuit breaker; press power button.
Low suction power	Dust bag full; filters clogged; hose/nozzle blocked.	Replace dust bag; clean/replace filters; check and clear blockages.
Unusual noise	Foreign object in brush roll or hose; motor issue.	Turn off and unplug, then check for and remove foreign objects. If noise persists, contact customer support.
Dust bag full indicator remains on after changing bag	New bag not inserted correctly; sensor malfunction.	Ensure the new S-bag is fully and correctly seated. If issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Electrolux customer support.

## SPECIFICATIONS

Key technical specifications for the Electrolux Pure D8.2 Silence Vacuum Cleaner PD82-8DB:

- Model:** PD82-8DB (also known as 13783211)
- Brand:** Electrolux
- Type:** Bagged Canister Vacuum Cleaner
- Power:** 600 Watts
- Voltage:** 230 Volts
- Dust Bag Capacity:** 3.5 Liters
- Noise Level:** 57 dB (decibels)
- Filter Type:** HEPA Filter (Washable)
- Action Radius:** 12 meters
- Dimensions (Product):** Approximately 42 x 30 x 24 cm
- Item Weight:** 5 Kilograms
- Material:** Plastic (55% recycled plastic used in construction)
- Color:** Blue
- Special Features:** Pure Sound System, Smart Mode Technology, Remote Power Regulation, OneGo Power Clean Nozzle, Central Handle, Horizontal and Vertical Parking

## WARRANTY AND SUPPORT

Electrolux provides a 10-year warranty on the motor of the Pure D8.2 Silence Vacuum Cleaner, reflecting its commitment to quality and durability. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Electrolux website.

For technical assistance, spare parts, or any other inquiries, please contact Electrolux customer support through their official channels. Ensure you have your product model number (PD82-8DB) and purchase details available when contacting support.

