

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Uten](#) /

> [Uten 2685A Computerized Sewing Machine User Manual](#)

Uten 2685A

Uten 2685A Computerized Sewing Machine User Manual

Model: 2685A | Brand: Uten

INTRODUCTION

The Uten 2685A Computerized Sewing Machine is a versatile and user-friendly device designed for both beginners and experienced sewers. It offers a wide range of features to enhance your sewing and embroidery projects, including 200 unique built-in stitches, automatic needle threading, and variable speed control. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your sewing machine to ensure optimal performance and longevity.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Uten 2685A sewing machine.

How to Find Your Sewing Machine Accessories When Unboxing the First Time?

The accessories are stored inside the in the removable accessory table on the front of the machine.

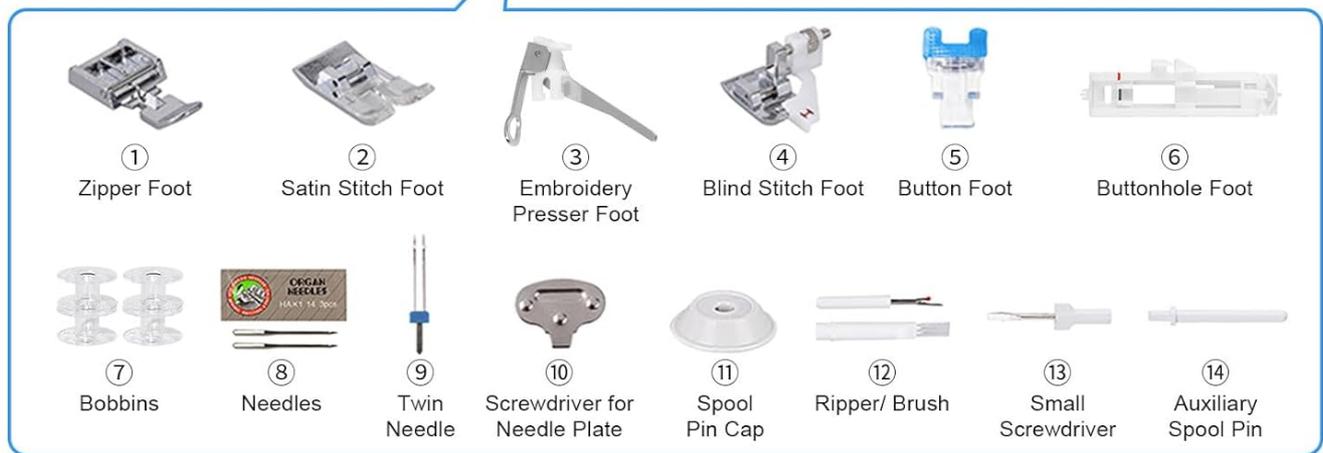
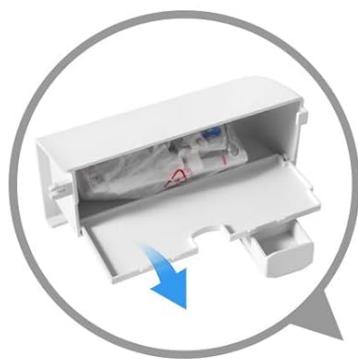


Figure 2: Illustration demonstrating the location of the accessory storage compartment within the removable table of the sewing machine, along with a visual list of included accessories such as various presser feet, bobbins, needles, and tools.

Power Connection

Connect the power cord to the machine's cord socket and then to a suitable electrical outlet. Ensure the power switch is in the OFF position before connecting.

OPERATING INSTRUCTIONS

Stitch Selection and Adjustment

The Uten 2685A offers 200 unique built-in stitches, including utility, decorative, alphanumeric, and 8 styles of auto-size buttonhole stitches. Use the stitch selection buttons on the LCD panel to navigate and choose your desired stitch pattern. Adjust stitch length and width as needed using the dedicated controls.

Up to 200 stitches to meet all your sewing needs

100 different pattern + letter patterns

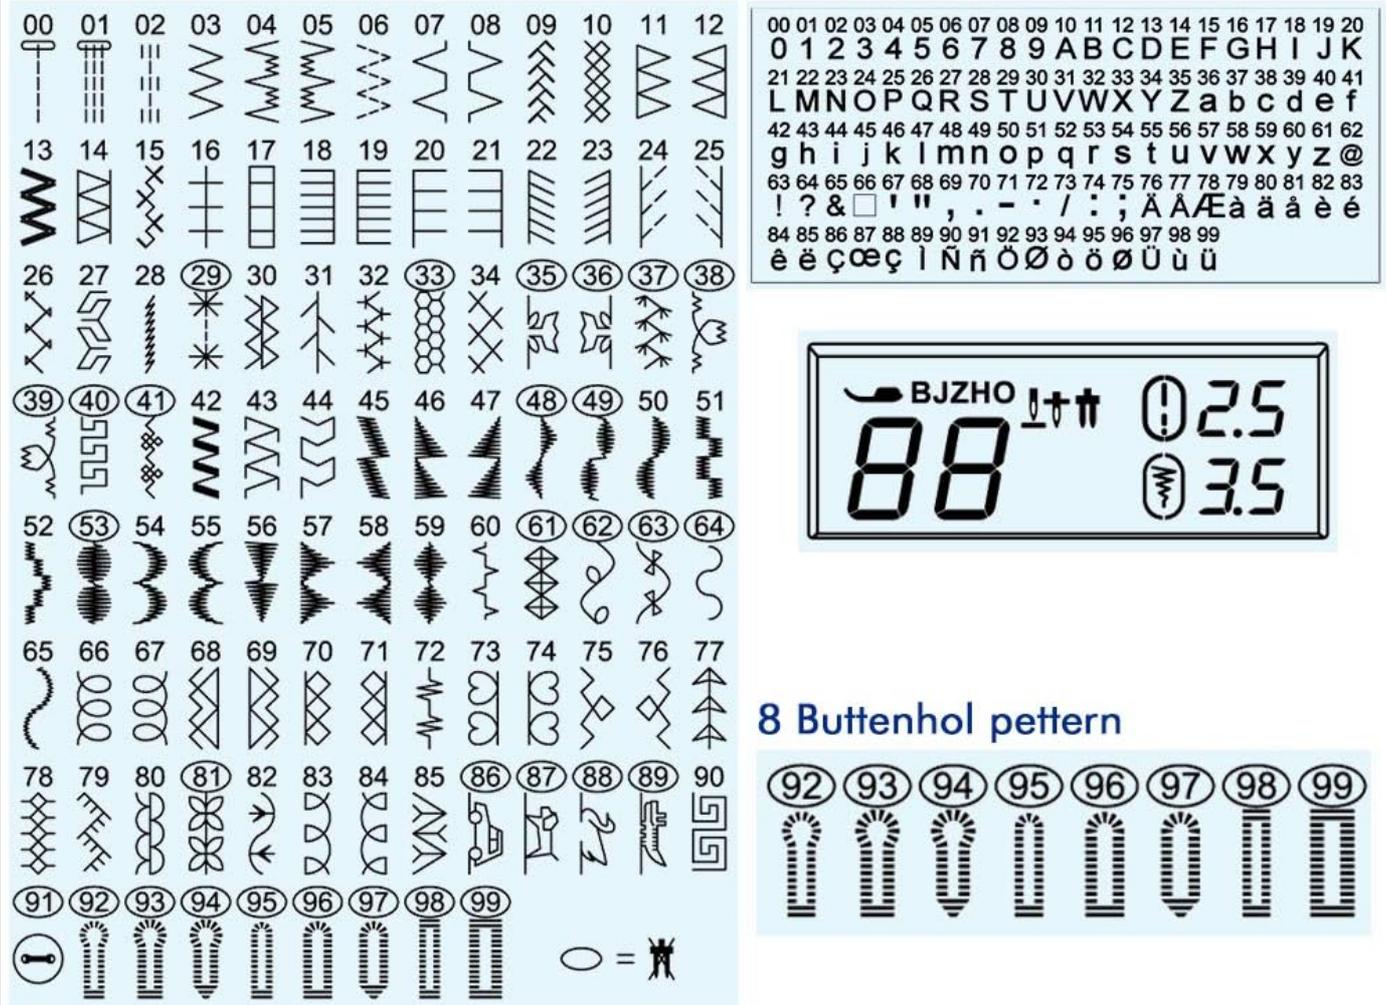


Figure 3: Detailed view of the stitch selection panel, highlighting the wide array of 200 stitches available, including numbers, letters, and various decorative and utility patterns.

Bobbin Winding and Insertion

The machine features an automatic bobbin winding system and a quick-set drop-in top bobbin. Follow the threading guides to wind your bobbin evenly. For insertion, simply drop the wound bobbin into the bobbin case from the top, ensuring the thread is correctly routed.

Your browser does not support the video tag.

Video 1: This video demonstrates the process of winding the bobbin, inserting the top drop-in bobbin, and threading the machine. It also shows the automatic needle threader in action, along with the variable speed control and needle up/down functions. (Source: FairBasic US)

Automatic Needle Threader

To use the automatic needle threader, raise the needle to its highest position. Lower the threader lever, hook the thread, and release. This feature significantly simplifies the threading process.

Automatic needle threader, twin needle, Buttonhole lever



Figure 4: A close-up view illustrating the use of the automatic needle threader, showing the mechanism engaging with the needle for easy threading.

Variable Speed Control

Adjust the sewing speed using the slider control located on the front of the machine. This allows you to set the maximum or minimum sewing speed for comfortable and precise stitching, especially useful for intricate details or when learning.

Start/Stop Button and Needle Position

The Start/Stop button allows for automatic sewing without the need for a foot pedal. The Needle Up/Down button controls the needle's resting position, which is useful for pivoting fabric at corners or removing the fabric after sewing.

Thread Tension Control

Proper thread tension is crucial for balanced stitches. Adjust the tension dial according to your fabric type and thread. Refer to the machine's tension guide for recommended settings.

Twin Needle Sewing

The machine supports twin needle settings for parallel stitching, ideal for hemming or decorative work. Ensure you use a twin needle and thread both needles correctly according to the manual's instructions.

Drop Feed for Free Motion Quilting

Engage the drop feed mechanism to lower the feed dogs, allowing you to move the fabric freely for free-motion quilting or embroidery. This feature provides creative control over your stitching path.

Multilayer Denim Sewing

The robust metal frame and powerful motor of the Uten 2685A allow it to handle multiple layers of denim, making it suitable for heavy-duty projects. Use appropriate needles and thread for best results.

One-Step Auto-sized Buttonhole

Create perfect buttonholes with ease using the one-step auto-sized buttonhole function. Attach the buttonhole foot, place your button in the designated slot, and the machine will automatically sew a buttonhole to the correct size.

MAINTENANCE

Cleaning Your Machine

Regular cleaning is essential for maintaining your sewing machine's performance. Always unplug the machine before cleaning. Use a small brush to remove lint and dust from the bobbin area, feed dogs, and needle plate. Periodically clean the exterior with a soft, damp cloth.

Needle Replacement

Replace needles frequently, especially when working with different fabric types or if you notice skipped stitches or fabric damage. Always use the correct needle type and size for your project.

Oiling (If Applicable)

Consult the full user manual (link provided in Support section) for specific oiling instructions. Some modern machines are self-lubricating, while others require periodic oiling at designated points.

TROUBLESHOOTING

This section addresses common issues you might encounter with your sewing machine. For more detailed troubleshooting, refer to the comprehensive user manual.

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading, wrong needle size for fabric.	Replace needle with a new, correct type/size. Re-thread the machine completely, ensuring thread is seated in all guides.
Thread Jamming / Nesting	Improper bobbin insertion, incorrect upper threading, lint buildup in bobbin case, incorrect tension.	Remove fabric, clear all threads. Re-insert bobbin correctly. Re-thread upper thread. Clean bobbin case area. Adjust tension.
Needle Breaking	Bent needle, pulling fabric while sewing, wrong needle size for fabric, hitting a pin.	Replace needle. Do not pull fabric; let the feed dogs move it. Use appropriate needle for fabric thickness. Avoid sewing over pins.

Problem	Possible Cause	Solution
Uneven Stitches	Incorrect thread tension, improper threading, worn needle.	Adjust thread tension. Re-thread both upper and bobbin threads. Replace needle.

SPECIFICATIONS

- **Model:** 2685A
- **Dimensions:** 4.72"D x 11.02"W x 10.63"H
- **Item Weight:** 11.9 pounds
- **Built-in Stitches:** 200 (including utility, decorative, alphanumeric, and 8 buttonhole styles)
- **Needle Threader:** Automatic
- **Bobbin System:** Quick-Set Drop-in Top Bobbin
- **Speed Control:** Variable
- **Frame Structure:** Heavy Metal Inner Frame
- **Included Accessories:** Zigzag foot, zipper foot, button foot, blind stitch foot, buttonhole foot, embroidery presser foot, seam ripper/lint brush, 3 needles, twin needle, 4 bobbins, screwdriver, auxiliary spool pin, manual.

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or contact Uten customer support. If you require further assistance or have questions not covered in this manual, please visit the official Uten store or refer to the comprehensive user guide.

Official User Manual (PDF): [Download User Manual](#)

Uten Store: [Visit Uten Store on Amazon](#)