

Goplus Length Adjustable Handle

Goplus Rolling Garden Cart with Adjustable Handle - User Manual

Model: Length Adjustable Handle



INTRODUCTION

Thank you for choosing the Goplus Rolling Garden Cart. This manual provides essential information for the safe assembly, operation, and maintenance of your garden cart. Designed for comfort and convenience, this cart features a 360-degree swivel seat, adjustable height, and an extendable steering handle, making gardening tasks easier on your back and knees. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Goplus Rolling Garden Cart with its green frame and black seat, positioned in a lush garden environment, showcasing its intended use.

SAFETY INFORMATION

Important Safety Precautions:

- Always ensure the total weight on the cart does not exceed **330 lbs (150 kg)**. Overloading can cause instability and damage.
- Adjust the seat height to a comfortable and stable position before use. Ensure the seat is securely fastened.
- When moving the cart, pull it from the front using the drag rod. Pushing from the side or rear may cause tipping, especially on uneven terrain.
- Use the cart on relatively level ground. Avoid steep inclines or declines where the cart may become unstable.
- Keep hands and feet clear of moving parts, especially the wheels and steering mechanism.
- Store the cart in a dry, protected area to prevent rust and prolong its lifespan.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Main Frame with Seat Post (A)
- Tool Tray (B)
- Seat (C)
- Mesh Basket (D)
- Wheels (E) x 4
- Front Axle Assembly (F)
- Rear Axle Rod (G)
- Tool Tray Support Bracket (H)
- Steering Rod Brackets (I) x 2
- Handle Support Bar (J)
- Axle Spacers (K) x 2
- Adjustable Steering Handle (L)
- Assorted Bolts, Washers, and Nuts (a, b, c, d, e, f, g, i)



Image: All parts of the garden cart, including the main frame, wheels, seat, basket, and various fasteners, are displayed on a floor, labeled for identification.

ASSEMBLY INSTRUCTIONS

Assembly requires basic tools such as wrenches and a Phillips head screwdriver. It is recommended to have these tools available before beginning. For a visual guide, please refer to the assembly video below.

Your browser does not support the video tag.

Video: Official Goplus Garden Cart Assembly Video. This video demonstrates the step-by-step process of assembling the garden cart, including attaching wheels, the tool tray, seat, and handle.

Step 1: Attach Rear Wheels

1. Insert the Rear Axle Rod (G) through the designated holes in the Main Frame (A).
2. Place an Axle Spacer (K) on each end of the axle rod.
3. Slide a Wheel (E) onto each end of the axle rod, ensuring the valve stem faces outwards.
4. Secure each wheel with a washer (e) and a lock nut (h). Tighten firmly with a wrench.



Image: A person assembling the rear wheels onto the main frame of the garden cart, showing the axle rod, spacers, wheels, washers, and nuts.

Step 2: Install Tool Tray

1. Position the Tool Tray (B) under the main frame.
2. Attach the Tool Tray Support Bracket (H) to the front underside of the tool tray using bolts (a), washers (c), and nuts (f).
3. Align the tool tray with the frame and secure it using bolts (a), washers (c), and nuts (f) through the designated holes. Ensure the tray is level and stable.



Image: A person attaching the black tool tray to the green main frame of the garden cart, showing the placement and fastening points.

Step 3: Attach Front Axle and Handle Support

1. Attach the Front Axle Assembly (F) to the front of the main frame using bolts (a), washers (c), and nuts (f).
2. Secure the Handle Support Bar (J) to the front axle assembly using bolts (a), washers (c), and nuts (f). Ensure all connections are tight.



Image: A person fastening the front axle assembly and handle support bar to the garden cart frame, showing the bolts and nuts being tightened.

Step 4: Mount Seat, Steering Handle, and Basket

1. Place the Seat (C) onto the seat post on the main frame. Secure it using bolts (b), washers (d), and lock nuts (g). Tighten securely.
2. Attach the Adjustable Steering Handle (L) to the Handle Support Bar (J) using the provided bolt (i), washer (c), and nut (f). Ensure the handle can pivot freely.
3. Hook the Mesh Basket (D) onto the rear of the cart.



Image: A person attaching the green seat to the cart's seat post, then connecting the adjustable steering handle, and finally hooking the mesh basket onto the rear of the cart.

OPERATING INSTRUCTIONS

The Goplus Rolling Garden Cart is designed to assist with various gardening and outdoor tasks, reducing strain and increasing efficiency.

- **Adjustable Seat:** The seat can rotate 360 degrees and its height is adjustable from 19 to 21 inches. To adjust the height, loosen the nut under the seat, raise or lower the seat to your desired position, and then re-tighten the nut firmly. This allows for comfortable positioning for various tasks like planting, weeding, or pruning.
- **Steering Handle:** The telescoping handle allows for easy maneuvering of the cart. Adjust the handle length to a comfortable position for pulling the cart. The handle is designed for steering the front wheels.
- **Tool Storage:** Utilize the removable mesh basket at the back for larger items like watering cans or gloves. The tool tray located under the seat is ideal for smaller, frequently used tools, keeping them within easy reach.
- **Movement:** The four 10-inch air-filled rubber tires provide stability and traction on various terrains, including lawns, dirt paths, and patios. Always pull the cart using the steering handle for best control.



Image: A Goplus Rolling Garden Cart being used in a garden, demonstrating its functionality for planting tasks.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your garden cart.

- **Cleaning:** Wipe down the metal frame and plastic seat with a damp cloth after each use to remove dirt and debris. For stubborn grime, use mild soap and water.
- **Tire Pressure:** Periodically check the air pressure in the tires. Maintain recommended pressure for optimal performance and to prevent flats.
- **Fasteners:** Regularly inspect all bolts, nuts, and screws. Tighten any loose fasteners to ensure structural integrity.
- **Lubrication:** Apply a small amount of lubricant to the steering mechanism and seat swivel point if movement becomes stiff.
- **Storage:** Store the cart in a dry, covered area when not in use to protect it from weather elements, which can cause rust and material degradation.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Stiff Steering:** If the steering feels tight or difficult to turn, check the bolts connecting the steering handle to the front axle. Ensure they are not overtightened. Applying a lubricant (e.g., WD-40) to the axle assembly and pivot points can also improve smoothness.
- **Wobbly Wheels:** Check that the nuts securing the wheels to the axles are tight. Ensure all washers are correctly placed.
- **Unstable Seat:** Verify that the seat is properly bolted to the seat post and that the height adjustment nut is securely tightened.
- **Missing Parts:** If you discover missing parts during assembly, please contact Goplus customer service immediately for assistance.

SPECIFICATIONS

Product Dimensions	38"D x 17.5"W x 18"H
Color	Green
Brand	Goplus
Model	Length Adjustable Handle
Maximum Weight Recommendation	330 Pounds
Seat Height (Adjustable)	19 - 21 Inches
Frame Material	Powder Coated Steel
Seat Material Type	Plastic
Item Weight	31.5 pounds
Assembly Required	Yes



Image: A diagram of the Goplus Rolling Garden Cart with measurements for overall length, wheel diameter, and seat height range.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact Goplus customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can visit the official Goplus store for more information: [Goplus Store on Amazon](#)

