

FRANKE FHBP 774 BD

FRANKE FHBP 774 BD Built-in Electric Hob User Manual

Model: FHBP 774 BD

INTRODUCTION

Thank you for choosing the FRANKE FHBP 774 BD Built-in Electric Hob. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the hob and keep them for future reference.

Important Safety Information:

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not allow children to operate the hob unsupervised.
- Always disconnect the power supply before cleaning or maintenance.
- Do not use abrasive cleaners or sharp objects on the hob surface.
- The hob surface remains hot after use; avoid touching it until it has cooled down.

SETUP AND INSTALLATION

Installation must be carried out by a qualified electrician or authorized service technician. Incorrect installation can lead to injury or damage to the appliance.

Unpacking

- Carefully remove the hob from its packaging.
- Check for any damage during transit. If damage is found, do not install the appliance and contact your retailer.
- Dispose of packaging materials responsibly.

Mounting the Hob

1. Ensure the countertop opening dimensions match the hob's specifications.
2. Apply the supplied sealing strip around the edge of the hob to prevent liquid ingress.
3. Carefully lower the hob into the countertop opening.

4. Secure the hob from underneath using the provided mounting clips.

Electrical Connection

- The electrical connection must comply with local wiring regulations.
- Ensure the mains voltage matches the rating plate on the appliance.
- Connect the hob to a dedicated circuit with an appropriate circuit breaker.
- The appliance must be properly earthed.

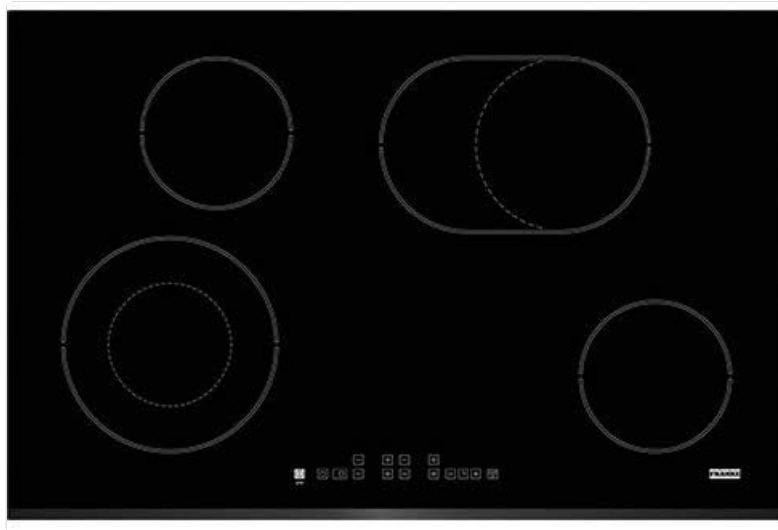


Figure 1: Overview of the FRANKE FHBP 774 BD Built-in Electric Hob. This image displays the black ceramic glass surface with four distinct cooking zones and the integrated touch control panel at the bottom center. The top-right zone is an extended oval zone, and the bottom-left zone is a dual-ring circular zone.

OPERATING INSTRUCTIONS

The FRANKE FHBP 774 BD hob features touch controls for easy and precise operation.

Control Panel Overview

The control panel is located at the front center of the hob. It includes power on/off, zone selection, heat level adjustment, and special function buttons.

Turning On/Off

- To turn on: Touch the **Power On/Off** button. The display will show "0" for all zones.
- To turn off: Touch and hold the **Power On/Off** button until all displays turn off.

Selecting a Cooking Zone and Adjusting Heat

1. Place a suitable pan on the desired cooking zone.
2. Touch the **Zone Selection** button corresponding to the zone you wish to use. The display for that zone will flash.
3. Use the '+' or '-' buttons, or slide your finger along the power level bar, to set the desired heat level (1-9).
4. To change the heat level, select the zone again and adjust.

Using the Extended Zone (Top-Right)

- This zone is suitable for larger or oval-shaped cookware.
- Select the top-right zone.

- Touch the **Extended Zone** button (if available, typically indicated by an icon showing the extended area) to activate the full heating area.
- Adjust the heat level as usual.

Using the Dual Zone (Bottom-Left)

- This zone offers two heating areas for different pan sizes.
- Select the bottom-left zone.
- Touch the **Dual Zone** button (if available, typically indicated by an icon showing inner/outer rings) to switch between the inner ring and both rings.
- Adjust the heat level as usual.

Residual Heat Indicator

After turning off a cooking zone, an "H" will appear in the display if the zone is still hot. Do not touch the surface while "H" is displayed.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your hob. Always ensure the hob is cool and disconnected from the power supply before cleaning.

Daily Cleaning

- Wipe the ceramic glass surface with a soft cloth and warm soapy water.
- Rinse with clean water and dry thoroughly with a clean cloth to prevent water marks.

Removing Stubborn Stains

- For burnt-on food or stubborn stains, use a specialized ceramic hob cleaner. Follow the product instructions.
- A hob scraper can be used for very tough residues, but use it carefully at a shallow angle to avoid scratching the surface.
- *Do not use abrasive sponges, scouring pads, or harsh chemical cleaners.*

Preventing Damage

- Avoid dropping heavy or sharp objects on the hob surface.
- Do not drag pots and pans across the surface, as this can cause scratches.
- Clean up spills immediately, especially sugary liquids, to prevent them from burning onto the surface.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; power button not pressed correctly.	Check circuit breaker/fuse. Ensure power button is pressed firmly for a few seconds.

Problem	Possible Cause	Solution
Cooking zone not heating.	Zone not selected; heat level not set; pan not suitable (if induction, though this is electric).	Select the zone and set a heat level. Ensure the pan is flat-bottomed and covers the zone adequately.
"H" indicator remains on.	Residual heat.	This is normal. The hob surface is still hot. Wait for it to cool down.
Hob emits a strange smell during first use.	Residues from manufacturing process.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.
Control panel unresponsive.	Moisture or object on control panel; temporary electronic glitch.	Wipe the control panel dry. Remove any objects. Disconnect power for 1 minute, then reconnect.

TECHNICAL SPECIFICATIONS

These specifications are subject to change without notice. Refer to the product's rating plate for precise details.

Feature	Detail
Model	FHBP 774 BD
Type	Built-in Electric Hob
Cooking Zones	4 (including 1 extended zone, 1 dual zone)
Control Type	Touch Control
Surface Material	Ceramic Glass
Power Supply	220-240V ~ 50/60Hz <i>(Refer to rating plate for exact requirements)</i>
Total Power	<i>(Specific wattage not provided, typical for 4-zone electric hobs is 6-7.5 kW)</i>
Dimensions (W x D)	<i>(Specific dimensions not provided, refer to installation guide)</i>
Cut-out Dimensions (W x D)	<i>(Specific dimensions not provided, refer to installation guide)</i>

WARRANTY AND SUPPORT

Your FRANKE FHBP 774 BD Built-in Electric Hob comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact FRANKE customer support or your authorized dealer. When contacting support, please have your model number (FHBP 774 BD) and serial number ready.

You can find contact information on the FRANKE official website or in the documentation supplied with your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question