

[Manuals.plus](#) /

› [OSMON](#) /

› OSMON OS 2000BL Bagless Cyclonic Vacuum Cleaner User Manual

OSMON OS 2000BL

OSMON OS 2000BL Bagless Cyclonic Vacuum Cleaner User Manual

Model: OS 2000BL (2024)

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PRODUCT OVERVIEW

The OSMON OS 2000BL is a powerful 2000 Watts bagless cyclonic vacuum cleaner designed for efficient cleaning across various surfaces. It features advanced HEPA filtration for improved air quality and a lightweight design for easy maneuverability.



Figure 1: Main unit of the OSMON OS 2000BL Bagless Cyclonic Vacuum Cleaner, showing the purple and black body, flexible hose, and floor nozzle.

Key Features:

- **Powerful 2000 Watts Motor:** Provides strong suction for effective cleaning of fine dust particles.
- **Multi-Stage Filtration (MSF) & HEPA Filter:** Captures dust and allergens, ensuring clean indoor air.
- **Bagless Cyclonic Technology:** Maximizes airflow and strengthens suction power, with an easy-to-empty dust container.
- **Lightweight and Easy Handling:** Designed for effortless maneuverability with large wheels.
- **Dust Container Full Indicator:** Alerts when the container needs emptying for optimal performance.
- **Extended Reach Stretch Hose:** Allows access to tight corners and high areas.
- **QuickFlip Crevice Tool:** Facilitates cleaning of hard-to-reach areas.

ASSEMBLY AND SETUP

Before first use, ensure all components are present and correctly assembled.

Included Components:

- Vacuum Cleaner Main Unit
- Hose Pipe
- Extension Pipe (Telescopic Wand)
- Carpet Brush (Floor Nozzle)
- 2-in-1 Nozzle (Crevice Tool/Brush)



Figure 2: All components of the vacuum cleaner, including the main unit, hose, extension pipe, floor nozzle, and 2-in-1 nozzle.

Assembly Steps:

1. **Attach the Hose Pipe:** Insert the larger end of the hose pipe firmly into the suction inlet on the main vacuum cleaner unit until it clicks into place.
2. **Connect the Extension Pipe:** Attach the metal extension pipe to the handle end of the hose pipe. Ensure a secure

friction fit.

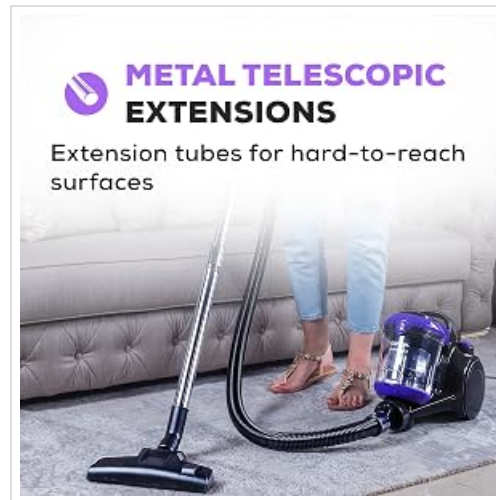


Figure 3: Illustration of attaching the metal telescopic extension pipe for extended reach.

3. **Attach the Floor Nozzle or Accessory:** Connect the desired cleaning accessory (e.g., carpet brush/floor nozzle or 2-in-1 nozzle) to the end of the extension pipe.



Figure 4: Close-up view of the included accessories, demonstrating their design for different cleaning tasks.

4. **Power Connection:** Extend the power cord from the main unit and plug it into a suitable electrical outlet. The cord is retractable via a button on the unit.

OPERATING INSTRUCTIONS

Starting the Vacuum Cleaner:

1. Ensure the vacuum cleaner is fully assembled and plugged into a power outlet.
2. Press the power button (often a large push button) located on the main unit to turn the vacuum cleaner on.
3. Begin cleaning the desired surface. The powerful 2000 Watts motor provides strong suction.



Figure 5: The vacuum cleaner in operation, demonstrating its use on a carpeted surface.

Cleaning Different Surfaces:

The OS 2000BL is suitable for various surfaces, including marble, carpeted rooms, and hardwood floors.

OSMON
OS 2000BL

Unleash the full potential of **OS 2000BL** Accessories on board



Figure 6: Visual guide demonstrating the vacuum cleaner's versatility across various floor types and for reaching elevated areas.

Noise Level:

The vacuum cleaner operates at a noise level of approximately 80 dB, designed to keep the volume down for a quieter cleaning experience.

OSMON

OS 2000BL

SUITABLE FOR ALL SURFACES

Smoothly clean marble floors,
carpeted rooms or even the
hardwood finished surfaces.



Figure 7: The vacuum cleaner in a living room setting, emphasizing its quiet operation.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Container:

The dust container full indicator will alert you when it's time to empty the container. This is crucial for maintaining strong suction.

1. Unplug the vacuum cleaner from the power outlet.
2. Locate the dust container release button or latch on the main unit.
3. Carefully remove the dust container.
4. Empty the contents into a waste bin.
5. Reattach the dust container securely to the main unit until it clicks into place.

Cleaning and Maintaining Filters:

The OS 2000BL features a HEPA filter and multi-stage filtration system. Regular cleaning of these filters is essential.



Figure 8: The HEPA filter, a key component of the advanced filtration system, designed to capture fine dust and allergens.

1. Unplug the vacuum cleaner.
2. Remove the dust container as described above.
3. Access the filters (refer to your specific model's diagram for exact filter locations, typically within or near the dust container).
4. Gently tap off loose dust from the filters over a waste bin.
5. If filters are washable (check product specifications), rinse them under cool running water until the water runs clear. Do not use detergent.
6. Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use the vacuum cleaner with wet filters.

7. Reinsert the dry filters and reattach the dust container.
- Note: Spare parts, including filters, are available for warranty and post-warranty repairs.*

TROUBLESHOOTING

This section addresses common issues you might encounter with your vacuum cleaner.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in. Power outlet not working. Thermal protector activated.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker or try another outlet. Unplug the unit, check for blockages, and allow it to cool for 30 minutes before restarting.
Loss of suction power.	Dust container is full. Filters are dirty or clogged. Hose or attachments are blocked.	Empty the dust container. Clean or replace the HEPA and other filters as per maintenance instructions. Check hose, extension pipe, and attachments for blockages and remove them.
Unusual noise during operation.	Blockage in the hose or nozzle. Something caught in the brush roll (if applicable, though this model uses a floor nozzle). Motor issue (less common).	Turn off and unplug the unit. Inspect hose and nozzle for obstructions. If noise persists after checking for blockages, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	OSMON
Model Name	OS 2000BL
Model Number	2024
Wattage	2000 Watts
Filter Type	HEPA Filter
Capacity	3 Litres
Noise Level	80 dB
Form Factor	Canister
Color	Purple & Black
Cordless	No (Corded)
Item Weight	6 kg

Feature	Detail
Included Components	Vacuum Cleaner, Hose Pipe, Extension Pipe, Carpet Brush, 2in1 Nozzle
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

The OSMON OS 2000BL Vacuum Cleaner comes with a **2-year warranty**. For warranty claims, spare parts, or any product-related queries, please contact customer support.

Customer Support:

- **Website:** www.americanmicronic.in (for customer support requests)
- **Phone:** 8882009988 (10 AM to 6 PM IST)

Please retain your purchase receipt for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08911MN5H>

More documents and user manuals: <https://manuals.plus/>