

## Kono K1872

# Kono 19-inch Carry-On Luggage Instruction Manual

Model: K1872

## INTRODUCTION

---

Thank you for choosing the Kono 19-inch Carry-On Luggage. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new product. Please read these instructions carefully before use to ensure optimal performance and longevity of your luggage.



Image: The Kono 19-inch Carry-On Luggage, presented alongside larger models, highlighting its compact size and design.

## SETUP

### 1. Unpacking

- Remove all packaging materials from the luggage.
- Inspect the luggage for any signs of damage. If damaged, contact customer support immediately.

### 2. Setting the Combination Lock

Your Kono luggage is equipped with a 3-digit combination lock. The default combination is 0-0-0. To set your personal combination:

1. Ensure the lock is set to the default combination (0-0-0).
2. Locate the small reset button (usually a small hole) next to the dials. Use a pen or a pointed object to press and hold this button.
3. While holding the reset button, set your desired 3-digit combination by turning the dials.
4. Release the reset button. Your new combination is now set.
5. Test your new combination by scrambling the dials and then entering your combination to open the

lock.

6. **Important:** Remember your combination. Kono cannot retrieve lost combinations.

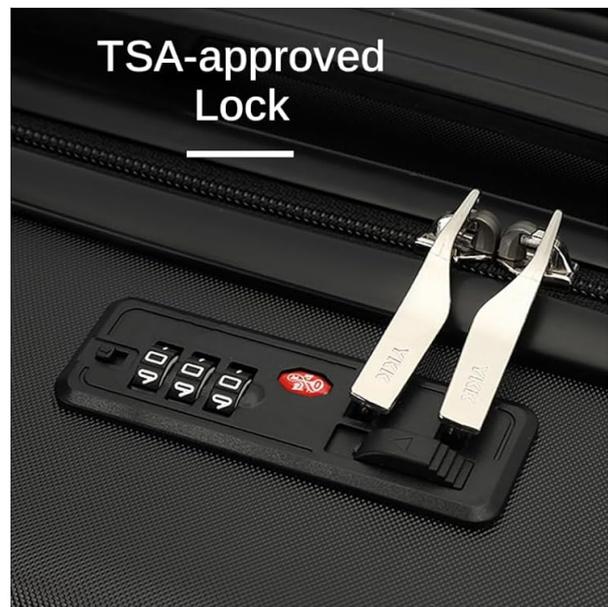


Image: Detailed view of the luggage features, including the combination lock mechanism.

### 3. Adjusting the Telescopic Handle

The luggage features an adjustable 3-level aluminum telescopic handle for comfortable maneuvering.

- To extend the handle, press the button located on the top of the handle and pull upwards.
- Release the button at your desired height (three levels available).
- To retract the handle, press the button and push the handle downwards until it is fully nested.

## OPERATION

### 1. Packing Your Luggage

The Kono 19-inch carry-on is designed with efficient packing in mind, offering a 27L capacity.

- **Main Compartments:** Utilize the two roomy, fully-lined compartments for your clothing and larger items.
- **Packing Straps:** Secure your clothes using the internal packing straps to minimize shifting during

transit.

- **Zipper Mesh Pocket:** Use the zipper mesh pocket for smaller items, toiletries, or anything you wish to keep separate and easily accessible.

## LARGE STORAGE SPACE

Pack all in and keep you organized everywhere in-between



Image: The interior of the Kono luggage, demonstrating its spacious compartments and packing straps for organized storage.

## 2. Maneuvering the Luggage

Your luggage is equipped with quiet 360-degree spinner wheels for effortless movement.

- Push or pull the luggage in any direction with minimal effort.
- The spinner wheels allow for easy navigation through crowded spaces and tight aisles.

# | MULTI-ANGLE DISPLAY |



Image: A multi-angle display of the Kono luggage, illustrating its design and the functionality of its spinner wheels.

## MAINTENANCE

### 1. Cleaning the Hard Shell

The ABS hard shell is designed to be scratch and pressure-resistant, as well as dirt-proof and waterproof.

- Wipe the exterior with a soft, damp cloth and mild soap.
- Avoid using abrasive cleaners or solvents, as these can damage the finish.
- Dry thoroughly with a clean cloth.

### 2. Wheel and Handle Care

- Periodically check the wheels for debris (hair, lint, etc.) and remove them to ensure smooth rolling.
- Avoid exposing the telescopic handle to excessive force or impact.
- Ensure the handle retracts and extends smoothly. If it becomes stiff, a small amount of silicone-based lubricant can be applied to the telescoping tubes (avoiding the button mechanism).

## TROUBLESHOOTING

Problem	Possible Cause	Solution
<b>Lock will not open</b>	Incorrect combination entered.	Ensure the correct 3-digit combination is aligned. If forgotten, there is no master key or reset method without the original combination.
<b>Wheels are stiff or not rolling smoothly</b>	Debris caught in wheels; lack of lubrication.	Remove any visible debris. Clean the wheel axles. If necessary, apply a small amount of silicone lubricant to the wheel bearings.
<b>Telescopic handle is difficult to extend/retract</b>	Debris in the mechanism; bent tubes; lack of lubrication.	Check for and remove any debris. Ensure the button is fully pressed. Apply a small amount of silicone lubricant to the telescopic tubes. Avoid forcing the handle.

## SPECIFICATIONS

- **Model:** K1872
- **Dimensions (including wheels and handles):** 18.9" x 11.8" x 7.9" (48cm x 30cm x 20cm)
- **Weight:** 4.7 lbs (2.13 kg)
- **Packing Capacity:** 27 Liters
- **Material:** Durable, lightweight ABS hard shell
- **Wheels:** 360-degree spinner wheels
- **Handle:** Adjustable 3-level aluminum telescopic handle
- **Lock:** Integrated 3-digit combination lock
- **Color:** Black

## WARRANTY INFORMATION

Your Kono 19-inch Carry-On Luggage comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship. It does not cover damage caused by misuse, neglect, accidents, abrasion, extreme temperatures, solvents, acids, normal wear and tear, or transport damage (e.g., by airlines). For warranty claims, please retain your proof of purchase.

## CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Kono luggage, please contact our customer support team.

- **Website:** [www.kono.com](http://www.kono.com) (Note: This is a placeholder URL. Please refer to your product packaging or purchase documentation for official contact details.)
- **Email:** [support@kono.com](mailto:support@kono.com) (Note: This is a placeholder email.)