

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOTT](#) /

› [HOTT CD611 Portable CD Player User Manual](#)

HOTT CD611


HOTT CD611 Portable CD Player User Manual

Model: CD611

INTRODUCTION

Thank you for choosing the HOTT CD611 Portable CD Player. This device is designed to provide high-quality audio playback from various disc formats, offering portability for home, travel, and car use. It features anti-shock protection, multiple sound effects, and broad compatibility. Please read this manual carefully to ensure proper operation and maintenance of your CD player.

WHAT'S IN THE BOX

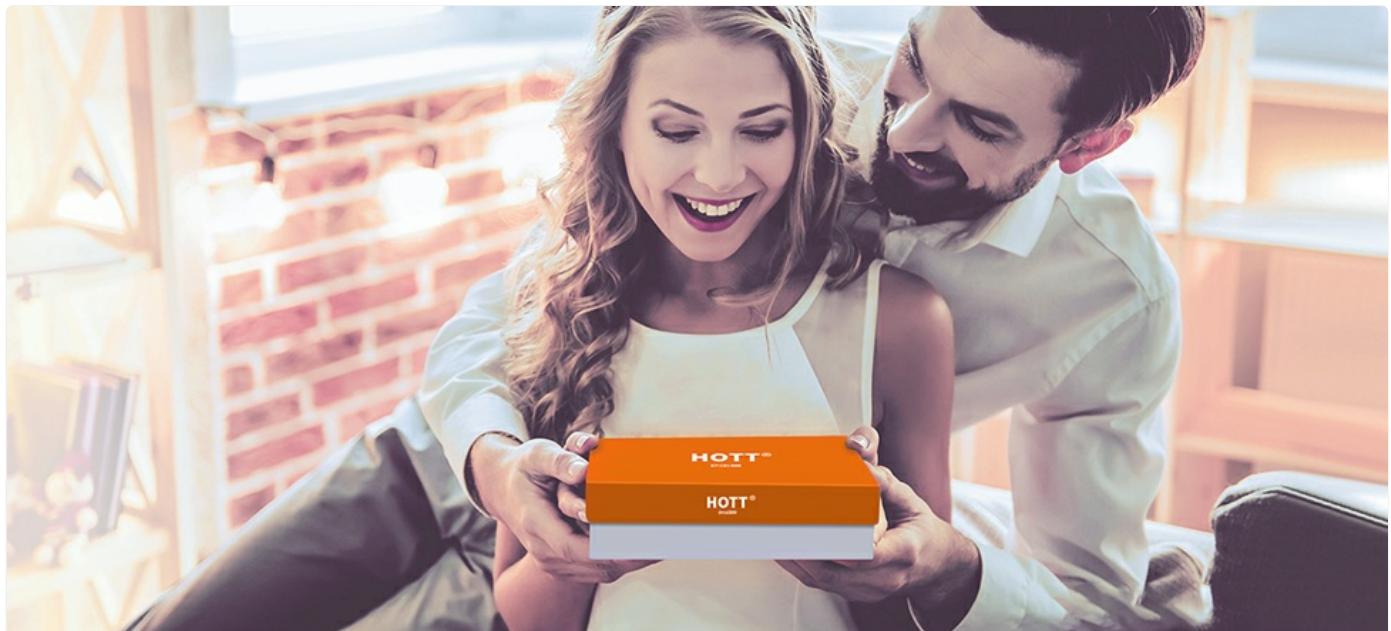

CD Player

Headphones

AUX

Instructions

Charging Cable

Image: The HOTT CD611 package contents, showing the portable CD player, a pair of stereo headphones, an AUX audio cable, the

instruction manual, and a USB charging cable.

- HOTT CD611 Portable CD Player
- Stereo Headphones
- 3.5mm AUX Audio Cable
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW



Image: A detailed diagram illustrating the various controls and features of the HOTT CD611 Portable CD Player, including the LCD display, control buttons, and the battery compartment on the underside.

Controls and Functions:

- LCD Display:** Shows track number, time, playback mode, and sound effects.
- DIR:** Selects playlist in MP3 mode.
- ASP:** Activates Anti-shock protection function.
- Previous / Back:** Skips to the previous track or rewinds the current track.
- Next / Forward:** Skips to the next track or fast-forwards the current track.
- Power On / Play / Pause:** Powers the device on, plays, or pauses playback.
- MODE:** Chooses playback styles (e.g., repeat all, repeat one, shuffle).
- Sound Effects:** Selects sound effects (BS, Pop, Jazz, Rock, Classic).
- Pause / Power Off:** Pauses playback with a single press; powers off with a double press.
- Cell Box:** Battery compartment (on the underside).
- HOLD Switch:** Located on the underside. When in "HOLD" position, all buttons are locked, and the player cannot be powered on.

Powering the Device:

Power Supports

1. AA Batteries Power Supply (Batteries NOT INCLUDED)
2. USB Power Supply (4.5V-5V)



AA Battery Power Supply



USB Charger



Notebook computer



Mobile power supply

Image: Illustrations showing the various power options for the HOTT CD611, including AA batteries (not included), connection to a USB charger, a notebook computer, or a mobile power supply.

- **AA Batteries:** Insert 2 x AA batteries into the cell box on the underside of the player. Ensure correct polarity. (Batteries NOT INCLUDED)
- **USB Power Supply:** Connect the provided USB charging cable to the player and a 4.5V-5V USB power source (e.g., USB charger, computer USB port, power bank).

Connecting Headphones:

Plug the stereo headphones into the 3.5mm headphone jack on the side of the CD player.

OPERATING INSTRUCTIONS

Inserting a Disc:

Gently slide the "OPEN" switch on the side of the player to open the disc cover. Place your CD, CD-R, CD-RW, or MP3 disc onto the spindle, ensuring it is seated correctly. Close the disc cover firmly until it clicks.



Image: The HOTT CD611 Portable CD Player with icons indicating compatibility with CD, MP3, CD-R, and CD-RW disc formats.

Basic Playback:

- Press the **Play/Pause** button to start playback.
- Press the **Play/Pause** button again to pause playback.
- Press the **Next / Forward** button to skip to the next track. Hold to fast-forward.
- Press the **Previous / Back** button to skip to the beginning of the current track or to the previous track. Hold to rewind.
- To turn off the player, press the **Pause / Power Off** button twice.

Anti-Shock Protection (ASP):

The HOTT CD611 features Anti-Shock Protection to prevent interruptions during movement. It provides up to 45 seconds of anti-skip protection for standard CDs and 120 seconds for MP3 CDs. Press the **ASP** button to activate this feature.

Anti-skip protection

Support 3.5mm AUX cable connect to car



Image: The HOTT CD611 Portable CD Player demonstrating its anti-skip protection feature and how to connect it to a car's audio system using a 3.5mm AUX cable.


Sound Effects:

Enhance your listening experience with 5 built-in sound effects. Press the **Sound Effects** button repeatedly to cycle through:

- **BS (Bass Boost)**
- **Pop**
- **Jazz**
- **Rock**
- **Classic**

Stereo sound quality

Compatible with CD, CD-R, CD-RW, MP3

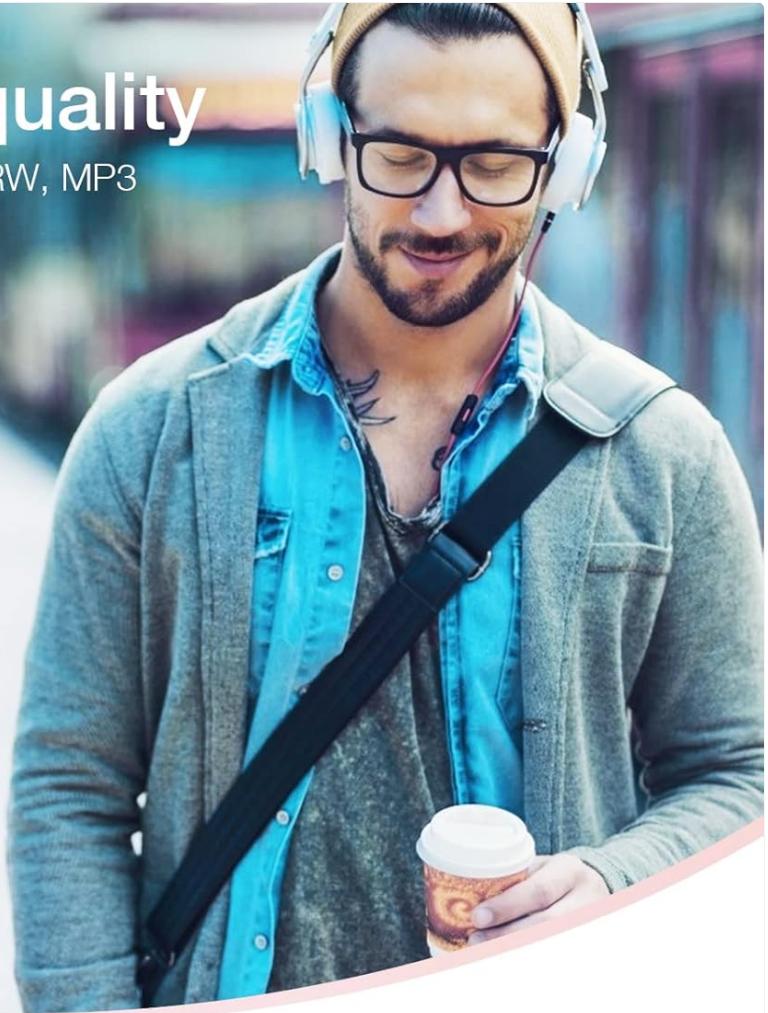

5 Sounds effects



Image: A visual representation of the HOTT CD611's stereo sound quality and the five available sound effects: BBS (Bass Boost System), Pop, Jazz, Rock, and Classic.

Playback Modes:

Press the **MODE** button to select different playback styles:

- Repeat One (repeats current track)
- Repeat All (repeats all tracks on the disc)
- Shuffle (plays tracks in random order)
- Intro (plays the first few seconds of each track)

Resume Function and A-B Repeat:



Resume Function:

It will memorize the last playback track and start it from where you left last time

Resume and A-B Repeat

Image: A user operating the HOTT CD611, highlighting the resume function which memorizes the last playback track, and the A-B repeat feature for repeating a specific section of audio.

- **Resume Function:** The player will memorize the last playback track and start from where you left off when powered on again.
- **A-B Repeat:** (Specific instructions for A-B repeat are not detailed in the provided data, but it's mentioned as a feature. Typically, you press a button at point A, then again at point B to repeat the section.)

CONNECTIVITY

Connecting to External Speakers or Car Audio:

The HOTT CD611 can be connected to external speakers or a car's audio system using the included 3.5mm AUX audio cable.



Connect the speakers

Share music on CDS with friends and enjoy it anytime, anywhere

Image: A person using the HOTT CD611 Portable CD Player connected to an external speaker, illustrating how to share music.

1. Locate the 3.5mm AUX input on your external speaker or car audio system.
2. Connect one end of the 3.5mm AUX cable to the headphone jack of the HOTT CD611.
3. Connect the other end of the AUX cable to the AUX input of your speaker or car audio system.
4. Ensure your external device is set to the AUX input mode.

MAINTENANCE

- Keep the CD player clean by wiping it with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Avoid exposing the player to extreme temperatures, humidity, or direct sunlight.
- Handle discs by their edges to prevent fingerprints and scratches.
- Store the player in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	<ul style="list-style-type: none">Batteries are dead or inserted incorrectly.USB power cable is not connected or faulty.HOLD switch is engaged.	<ul style="list-style-type: none">Replace batteries or check polarity.Ensure USB cable is securely connected to a working power source.Disengage the HOLD switch on the underside of the player.
Disc skips or playback is interrupted.	<ul style="list-style-type: none">Disc is dirty or scratched.Player is subjected to excessive vibration.ASP function is not active.	<ul style="list-style-type: none">Clean the disc with a soft, lint-free cloth. Try another disc.Minimize movement during playback.Ensure ASP function is activated.
No sound.	<ul style="list-style-type: none">Headphones not connected properly.Volume is too low.Disc is not playing.	<ul style="list-style-type: none">Ensure headphones are fully plugged in.Adjust the volume control.Check if the disc is playing (LCD display).
Disc not recognized.	<ul style="list-style-type: none">Disc is inserted incorrectly.Disc format is not supported.Disc is severely damaged.	<ul style="list-style-type: none">Re-insert the disc correctly.Ensure the disc is CD, MP3, CD-RW, or CD-R format (DVDs are not supported).Try a different disc.

SPECIFICATIONS

- Model:** CD611
- Product Dimensions:** 5.5 x 5.5 x 0.79 inches
- Item Weight:** 9.2 ounces
- Compatible Disc Formats:** CD, MP3, CD-RW, CD-R, WMA
- Anti-Shock Protection:** 45 seconds for CDs, 120 seconds for MP3s
- Sound Effects:** BS (Bass Boost), Pop, Jazz, Rock, Classic
- Power Supply:** 2 x AA Batteries (not included), USB Power Supply (DC 4.5V-5V)
- Connectivity:** 3.5mm AUX Audio Output

WARRANTY AND SUPPORT

HOTT provides comprehensive support for your CD611 Portable CD Player:

- Return Policy:** 30-days return policy.
- Warranty:** 1-year warranty from the date of purchase.
- Extended Warranty:** Register your product through the official HOTT website to extend the warranty period to 18 months.
- Lifetime Support:** Enjoy lifetime technical support for your product.
- Customer Service:** For assistance, please contact our toll-free call center. Refer to the contact information provided in your product packaging or on the official HOTT website.

Please retain your proof of purchase for warranty claims.

© 2024 HOTT. All rights reserved.