

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LIORQUE](#) /

› [LIORQUE Kitchen Timer Instruction Manual](#)

**LIORQUE YGH5249**

# LIORQUE Kitchen Timer Instruction Manual

Model: **YGH5249** | Brand: **LIORQUE**

## INTRODUCTION

---

The LIORQUE multifunctional digital timer (Model YGH5249) is designed for versatile time management in various settings, including cooking, studying, exercising, and entertainment. Its simple yet elegant design makes it a practical tool for any household. This manual provides detailed instructions on how to set up, operate, and maintain your LIORQUE Kitchen Timer to ensure optimal performance and longevity.

Key features include a large LCD display, clock function, countdown and count-up modes, a powerful magnetic back, and a customizable setting. With three adjustable volume levels and multiple placement options, this timer is a reliable assistant for all your timing needs.

## PRODUCT OVERVIEW

---



Front view of the LIORQUE Digital Kitchen Timer, showing the large LCD display and control buttons.

### Key Features:

- **Digital Timer with Clock Function:** Functions as a 24-hour digital clock, countdown timer, and stopwatch. Maximum timer value is 99 hours, 59 minutes, 59 seconds.
- **Quick Setting:** Features shortcut keys [1H], [5M], [1M], and [1S] for rapid time adjustment. Hold buttons to increase value quickly.
- **Custom Mode:** Save a specific countdown value by pressing and holding the "CUSTOM" button for 2 seconds. Recall the saved value with a single press.
- **3 Adjustable Volume Levels:** Choose between Loud, Soft, or Silent modes by sliding the volume switch. Silent mode is suitable for quiet environments like libraries or study rooms.
- **Multiple Placement Methods:** Equipped with a foldable stand for tabletop use, a powerful magnetic back for attachment to metal surfaces (e.g., refrigerators), and a lanyard hole for hanging.



Large LCD Screen



Delay reminder



1min countdown reminder



Auto-restore the set time



12/24H Clock



Custom Setting



Adjustable Volume



Strong Magnet

Visual representation of the timer's key features, including large LCD screen, delay reminder, 1-minute countdown reminder, auto-restore, 12/24H clock, custom setting, adjustable volume, and strong magnet.

## SETUP

### Battery Installation:

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

The timer will power on automatically once batteries are installed.

## OPERATING INSTRUCTIONS

### Switching Between Clock Mode and Timer Mode:

The LIORQUE timer can function as both a digital clock and a timer. To switch between modes:

- **To enter Counting Mode (Timer/Stopwatch):** Long press the **ST/SP** button for 2 seconds.
- **To enter Clock Mode:** After exiting timer mode, the timer will automatically switch to clock mode.
- **To shut down:** In Counting Mode, long press the **ST/SP** button for 5 seconds.

## Digital Timer & Clock



Long press **【ST/SP】** 2s to switch & press 5s to shut it down

Counting Mode 



Clock Mode 



Instructions for switching between Counting Mode and Clock Mode using the ST/SP button.

### Setting the Clock:

In Clock Mode, you can set the time:

1. In Clock Mode, press the **RESET** button to enter time setting mode. The hour digits will flash.
2. Use the **1H**, **5M**, **1M**, **5S** buttons to adjust the hour.
3. Press **RESET** again to move to minute setting. Adjust minutes using the same buttons.
4. Press **RESET** a third time to confirm and exit setting mode.

## Countdown Timer Mode:

This mode is used for setting a specific duration and counting down to zero.

1. Ensure the timer is in Counting Mode (long press **ST/SP** for 2s if in Clock Mode).
2. Use the **1H**, **5M**, **1M**, **5S** buttons to set the desired countdown time. Press and hold for rapid adjustment.
3. Press **ST/SP** to start the countdown.
4. To pause, press **ST/SP** again. Press again to resume.
5. When the countdown reaches zero, an alarm will sound.
6. To stop the alarm, press any button.
7. To reset the timer to zero, press the **RESET** button.

## Two Kinds of Counting Modes



Illustration of the two counting modes: Count-up (stopwatch) and Countdown (timer).

## Count-up (Stopwatch) Mode:

This mode is used to measure elapsed time from zero.

1. Ensure the timer is in Counting Mode.
2. If a time is set, press **RESET** to clear it to 00:00:00.
3. Press **ST/SP** to start the count-up.

- To pause, press **ST/SP** again. Press again to resume.
- To reset the stopwatch to zero, press the **RESET** button while paused.

## Shortcut Setting:

Quickly set common time intervals using the shortcut buttons.

- Press **1H** to add 1 hour.
- Press **5M** to add 5 minutes.
- Press **1M** to add 1 minute.
- Press **5S** to add 5 seconds.

You can press these buttons multiple times to accumulate time. For example, pressing **5M** twice will set 10 minutes.

## Shortcut Setting





**Press 5M-button for 2 times**



**Press 1M-button for 2 times**

Examples of using shortcut buttons to quickly set time intervals.

## Custom Mode:

The Custom Mode allows you to save a frequently used countdown time for quick recall.

- Set your desired countdown time using the **1H**, **5M**, **1M**, **5S** buttons.

2. Press and hold the **CUSTOM** button for 2 seconds. The timer will beep to confirm the time has been saved.
3. To recall the saved custom time, simply press the **CUSTOM** button once. The display will show your saved time, ready to start.



## Custom Mode

- ① Long press **ST/SP** to enter the counting mode
- ② Short press **1H/5M/1M/5S** to set your time
- ③ Long press **CUSTOM** to save the setting



Steps to set and recall a custom timer setting.

## Volume Adjustment:

The timer offers three volume levels for its alarm.

- Locate the volume switch on the right side of the timer.
- Slide the switch to select your preferred volume:
  - **Loud:** For noisy environments like a busy kitchen.
  - **Soft:** For general use.
  - **Mute:** For silent operation, ideal for libraries, study rooms, or meetings.



 Loud

## 3-Level Alarm Volume Adjustment



 Soft



 Mute

Visual guide to the three alarm volume settings: Loud, Soft, and Mute.

### Delay Reminder and Auto-Restore:

- **Delay Reminder:** After a countdown finishes and the alarm sounds, the timer will automatically start counting up. This feature indicates how much time has elapsed since the alarm went off, useful for tracking overdue tasks.
- **Auto-Restore:** After a countdown finishes, pressing the **ST/SP** button will restore the timer to the previously set countdown time, making it convenient for repetitive tasks.

# Easy to use

## 1min countdown reminder



### Delay reminder



It will start countup after the countdown is over, telling the user delayed time.

### Auto-restore the set time



Each time the countdown is over, press **[ST/SP]** to restore to the set countdown time, it is less bother.

Diagram illustrating the delay reminder (count-up after countdown) and auto-restore functions.

## PLACEMENT OPTIONS

The LIORQUE Kitchen Timer offers flexible placement options to suit your needs:

- **Durable Stand:** Utilize the foldable stand on the back to place the timer firmly on any flat surface, such as a kitchen counter, desk, or bedside table.
- **Powerful Magnet:** The strong magnetic back allows you to attach the timer securely to metallic surfaces like refrigerators, ovens, or whiteboards. Silicone pads prevent slipping and protect surfaces from scratches.
- **Lanyard Hole:** A hole is provided on the back for hanging the timer on a hook or with a string, offering another convenient storage or viewing option.




Lanyard Hole



2-powerful Magnet  
& Anti-Slip Pad




Durable Stand

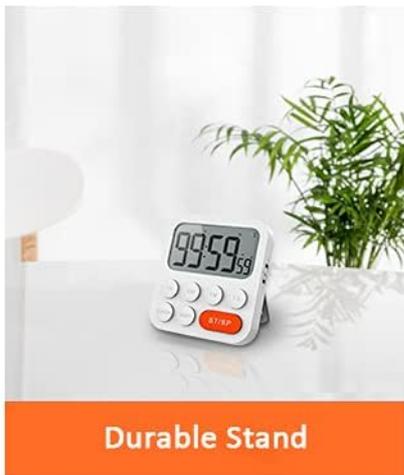

Durable Stand



2-powerful Magnet  
& Anti-Slip Pad

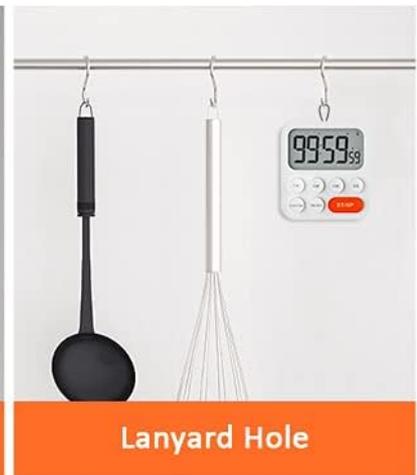

Lanyard Hole

Visual representation of the timer's versatile placement options: tabletop stand, magnetic attachment, and hanging via lanyard hole.

## MAINTENANCE

- **Cleaning:** Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Battery Replacement:** Replace batteries when the display becomes dim or the timer functions erratically. Always use new AAA batteries.
- **Storage:** Store the timer in a cool, dry place when not in use for extended periods. Remove batteries if storing for more than a few months to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries.	Replace with new AAA batteries. Ensure correct polarity.
Alarm is not sounding.	Volume set to Mute.	Slide the volume switch to Loud or Soft.
Timer not responding to button presses.	Temporary software glitch or low battery.	Remove and reinsert batteries to reset the device. If issue persists, replace batteries.
Custom mode not saving/recalling.	Button not held long enough or incorrect procedure.	Ensure you hold the CUSTOM button for 2 seconds to save. Press once to recall.

## SPECIFICATIONS

Attribute	Detail
Brand	LIORQUE
Model Number	YGH5249
Color	White (Lot de 1)
Product Dimensions (L x W x H)	3 x 9 x 9 cm
Material	Silicone
Item Weight	110 Grams
Power Source	2 AAA Batteries (included)
Max Timer Value	99 Hours, 59 Minutes, 59 Seconds
Display Size	12.1 Centimeters

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact LIORQUE customer service directly. Contact details are typically provided on the product box or on the official LIORQUE website.

Please retain your proof of purchase for any warranty claims.