

- Manuals.plus /
- > OMOTON /
 - > OMOTON Mini Wireless Keyboard and Mouse Combo User Manual

OMOTON Wireless Keyboard and Mouse Combo Black

OMOTON Mini Wireless Keyboard and Mouse Combo User Manual

Model: Wireless Keyboard and Mouse Combo Black

PRODUCT OVERVIEW

The OMOTON Mini Wireless Keyboard and Mouse Combo provides a reliable and efficient solution for your computing needs. This 2.4GHz wireless set offers a stable connection up to 10 meters, designed for comfortable and quiet operation in various environments. It features a full-size keyboard with multimedia keys and a compact mouse, both optimized for ergonomic use.



Image: The OMOTON Mini Wireless Keyboard and Mouse Combo, including the keyboard, mouse, and USB receiver.

The keyboard features a scissor-switch design for sensitive and quiet keystrokes, reducing fatigue during extended use. It also includes 12 multimedia keys for quick access to common functions like volume control, play/pause, and email. The mouse is designed to fit comfortably in your hand and offers adjustable DPI levels for precise tracking on various surfaces.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x USB Receiver
- 1 x User Manual (this document)

SETUP

1. Installing Batteries

The keyboard requires two AAA batteries, and the mouse requires one AA battery (batteries are not included). Follow these steps:

1. Locate the battery compartments on the underside of the keyboard and mouse.
2. Open the battery covers.
3. Insert the batteries, ensuring correct polarity (+/-).
4. Close the battery covers securely.



Image: The underside of the keyboard and mouse, highlighting the battery slots and the storage location for the USB receiver within the mouse.

2. Connecting the USB Receiver

The USB receiver is typically stored inside the mouse's battery compartment for convenience. To connect the combo to your computer:

1. Remove the USB receiver from its storage slot in the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Your computer should automatically recognize the devices without requiring additional software installation.

3. Powering On

After installing batteries and plugging in the USB receiver:

- Locate the ON/OFF switch on the underside of both the keyboard and the mouse.
- Slide the switches to the 'ON' position.

- The devices are now ready for use.

OPERATING INSTRUCTIONS

Compatibility

This wireless keyboard and mouse combo is compatible with various operating systems, including:

- Windows XP
- Windows 7
- Windows 8
- Windows 10
- Windows Vista

SUPPORT MULTIPLE DEVICES

Windows XP/7/8/10/Vista



Image: The keyboard and mouse combo supporting multiple devices, including desktop computers, laptops, and external monitors running Windows operating systems.

Keyboard Features

- **Scissor Design:** The keys feature a scissor-switch mechanism, providing a responsive, comfortable, and quiet typing experience. This design contributes to reduced hand fatigue during prolonged use.
- **Multimedia Keys:** Access common functions quickly with 12 dedicated multimedia keys. These include controls for volume, play/pause, search, and more.
- **Ergonomic Tilt:** The keyboard is designed with a slight 8-degree incline to promote a more natural and comfortable typing posture.

ERGONOMIC DESIGN

Fits your entire palm and feels comfortable,
takes workflow efficiency to a new level

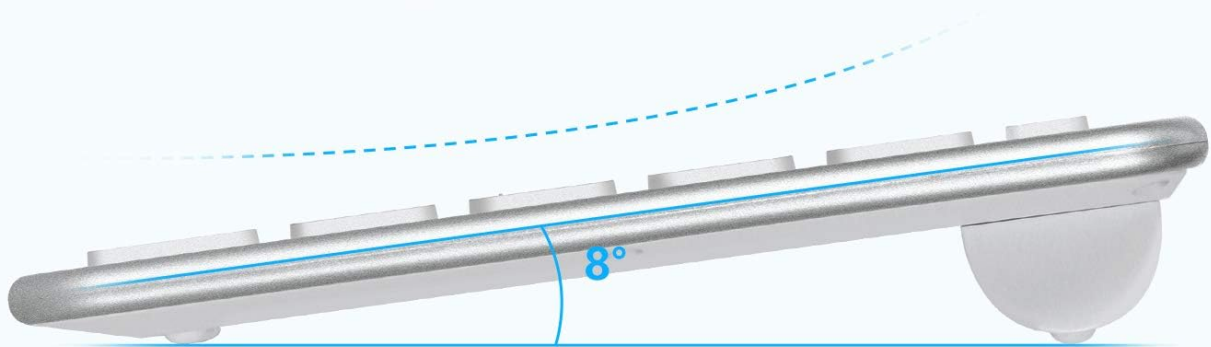
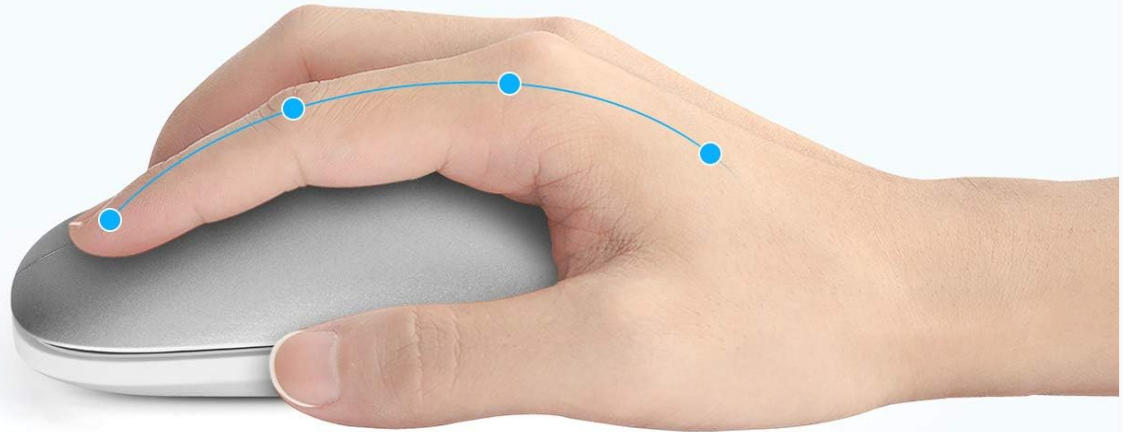


Image: A detailed view of a keyboard key, illustrating the internal scissor-switch structure that provides a quiet and responsive typing feel.



Image: An illustration demonstrating the ergonomic design of the mouse, fitting the palm comfortably, and the 8-degree tilt of the keyboard for improved typing posture.

Mouse Features

- **Silent Buttons:** The mouse buttons are designed for quiet clicks, making it suitable for environments where noise reduction is important.
- **Adjustable DPI:** The mouse offers adjustable DPI (Dots Per Inch) levels (800 / 1200 / 1600 DPI) to customize cursor sensitivity and tracking speed. To adjust, press the left and right mouse buttons simultaneously for more than 3 seconds.
- **High Precision Tracking:** The mouse is designed for smooth and accurate tracking on various surfaces, including leather, wood, and metal.

HIGH PRECISION TRACKING

Smooth Experience with Multiple Surfaces



Image: A circular diagram showing the adjustable DPI levels (800, 1200, 1600) for the mouse, indicating how to switch between them.

SCISSOR STRUCTURE

Scissors switch keys offer a comfortable, silent typing experience



Image: The mouse positioned on layered surfaces representing leather, wood, and metal, demonstrating its high precision tracking capability across different materials.

Power-Saving Mode

To conserve battery life, both the keyboard and mouse will automatically enter a sleep mode after a period of inactivity (approximately 8-15 minutes). To reactivate them, simply press any button on the keyboard or move/click the mouse.

MAINTENANCE

Cleaning

To maintain the performance and appearance of your keyboard and mouse:

- Use a soft, dry, lint-free cloth to wipe down the surfaces.

- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid spraying liquids directly onto the devices or using harsh chemicals.
- For the keyboard, you may use compressed air to clear debris from between the keys.

Battery Replacement

When the devices stop responding or exhibit intermittent connectivity, it is likely time to replace the batteries. Refer to the 'Installing Batteries' section under Setup for detailed instructions.

TROUBLESHOOTING

Q: The keyboard or mouse is not responding.

A:

- Ensure that fresh batteries are correctly installed in both the keyboard and mouse.
- Verify that the ON/OFF switches on both devices are in the 'ON' position.
- Confirm that the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port if necessary.
- If the devices entered power-saving mode, press any key on the keyboard or move/click the mouse to wake them up.

Q: The wireless connection is unstable or experiences lag.

A:

- Ensure the keyboard and mouse are within the optimal operating range of 10 meters from the USB receiver.
- Minimize potential interference by keeping the devices away from other 2.4GHz wireless devices (e.g., Wi-Fi routers, cordless phones) or large metal objects.
- If using a desktop computer, try plugging the USB receiver into a front USB port to improve signal strength.

Q: The mouse cursor is erratic or not tracking smoothly.

A:

- Clean the mouse's optical sensor with a soft, dry cloth.
- Ensure you are using the mouse on a suitable surface. Avoid highly reflective, transparent, or uneven surfaces. A mouse pad is recommended for optimal performance.
- Adjust the mouse DPI setting to a different level to see if it improves tracking.

SPECIFICATIONS

Feature	Detail
Brand	OMOTON
Model Number	Wireless Keyboard and Mouse Combo Black
Operating System Compatibility	Windows XP / 7 / 8 / 10 / Vista

Feature	Detail
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Operating Range	Up to 10 meters (33 feet)
Keyboard Dimensions (L x W x H)	439.4 x 135.3 x 23.2 mm (17.28 x 5.33 x 0.91 inches)
Mouse Dimensions (L x W x H)	108.0 x 61.2 x 29.6 mm (4.25 x 2.4 x 1.17 inches)
Item Weight	Approximately 1.63 pounds (for combo)
Color	Silver
Keyboard Keys Number	105 Keys
Mouse DPI Levels	800 / 1200 / 1600 DPI
Keyboard Battery	2 x AAA (Not included)
Mouse Battery	1 x AA (Not included)
Sleep Time (Inactivity)	Keyboard: 15 minutes; Mouse: 8 minutes
Special Feature	Ergonomic Design, Multimedia Keys, Quiet Operation
Compatible Devices	Laptop, Personal Computer

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official OMOTON website. For technical support, frequently asked questions, or to contact customer service, please visit the OMOTON store on Amazon:

[Visit the OMOTON Store for Support](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0894F2HZY>

More documents and user manuals: <https://manuals.plus/>