

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [IKEA](#) /

› **IKEA LISABO Chair, Ash (Model 804.572.36) Instruction Manual**

IKEA 804.572.36

IKEA LISABO Chair, Ash (Model 804.572.36) Instruction Manual

This manual provides detailed instructions for the assembly, use, and maintenance of your IKEA LISABO Ash Chair.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Maximum load capacity: **110 kg (242 lbs)**. Do not exceed this weight.
- Ensure all screws and fittings are tightened securely before use. Re-tighten as needed to maintain stability.
- Do not stand on the chair.
- Use the chair on a flat, stable surface.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.



Image description: An overhead view of the IKEA LISABO Ash Chair components, including legs, seat, backrest, and hardware, laid out on a flat surface.

The IKEA LISABO chair package includes all necessary parts and hardware for assembly.

- Chair frame components
- Seat and backrest panels
- Assembly hardware (screws, dowels, etc.)
- Assembly tool (e.g., Allen key)

ASSEMBLY INSTRUCTIONS

This product requires assembly. Follow these steps carefully. It is recommended to assemble the chair on a soft, clean surface to prevent scratches.

1. Step 1: Attach the Legs to the Seat Frame.

Identify the four legs and the seat frame. Align the pre-drilled holes on the legs with those on the seat frame. Insert the provided screws and tighten them using the included tool. Do not overtighten initially.



Image description: An illustration showing the process of attaching the four wooden legs to the underside of the chair's seat frame using screws.

2. **Step 2: Secure the Backrest.**

Position the backrest against the rear of the seat frame. Insert the remaining screws through the backrest into the frame and tighten them.



Image description: An illustration depicting the backrest being aligned and screwed into place at the back of the assembled seat frame and legs.

3. **Step 3: Final Tightening.**

Once all components are loosely assembled, go back and firmly tighten all screws. Ensure the chair is stable and does not wobble.



Image description: A photograph of the fully assembled IKEA LISABO Ash Chair, ready for use.

OPERATING INSTRUCTIONS

The IKEA LISABO chair is designed for seating purposes.

- Sit centrally on the seat for optimal balance and comfort.
- Avoid leaning excessively on the backrest or sides.
- Do not use the chair as a step stool or ladder.

MAINTENANCE AND CARE

Proper care will extend the life of your LISABO chair.

- **Cleaning:**

Wipe clean with a cloth dampened in a mild cleaner. Avoid abrasive cleaners or harsh chemicals.

- **Drying:**

Wipe dry with a clean, dry cloth immediately after cleaning to prevent moisture damage.

- **Screw Tightening:**

For maximum quality and safety, re-tighten all screws and fittings as needed, typically every 3-6 months, or if the chair feels unstable.

- **Environment:**

Keep the chair away from direct sunlight and heat sources to prevent wood from drying out or cracking.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles	Loose screws, Uneven floor	Re-tighten all assembly screws. Move chair to a flat surface.
Squeaking noise	Loose joints	Re-tighten all screws. Apply a small amount of lubricant (e.g., paraffin wax) to joint areas if noise persists.
Surface damage (scratches)	General wear and tear	Use furniture polish or wood repair kits for minor scratches.

SPECIFICATIONS

- **Model:** 804.572.36
- **Brand:** IKEA
- **Color:** Ash
- **Maximum Load:** 110 kg (242 lbs)
- **Dimensions (Assembled):**
 - Width: 44 cm (17.3 inches)
 - Depth: 51 cm (20.1 inches)
 - Height: 80 cm (31.5 inches)
 - Seat Width: 44 cm (17.3 inches)
 - Seat Depth: 39 cm (15.4 inches)
 - Seat Height: 45 cm (17.7 inches)
- **Materials:**
 - Legs/Frame support: Solid birch, tinted clear acrylic lacquer
 - Seat rail: Layer-glued wood veneer, tinted clear acrylic lacquer
 - Seat/Backrest: Layer-glued wood veneer, ash veneer, tinted clear acrylic lacquer

WARRANTY AND SUPPORT

For information regarding warranty, returns, or additional support, please contact IKEA customer service or visit your local IKEA store.

You can find more information on the official IKEA website: www.ikea.com