

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Lamicall](#) /

> [Lamicall Tablet Floor Stand Gooseneck User Manual](#)

Lamicall 038b2e6e-c86a-429d-a274-b861ac78c92b

Lamicall Tablet Floor Stand Gooseneck User Manual

Model: 038b2e6e-c86a-429d-a274-b861ac78c92b

Brand: Lamicall

INTRODUCTION

Welcome to the user manual for your Lamicall Tablet Floor Stand Gooseneck. This guide provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use of your device. Please read this manual thoroughly before using the product.

SAFETY INFORMATION

- Ensure the stand is placed on a stable, flat surface to prevent tipping.
- Do not over-bend the gooseneck arm beyond its natural flexibility to avoid damage.
- Keep the stand away from children and pets to prevent accidental injury or damage to the device.
- Avoid placing heavy objects on the gooseneck arm or tablet holder.
- Do not disassemble or modify the product, as this may void the warranty and pose safety risks.

PACKAGE CONTENTS

- Heavy-Duty Base
- Main Support Pole (with height adjustment knob)
- Flexible Gooseneck Arm
- Universal Tablet Holder

SETUP INSTRUCTIONS

Follow these steps to assemble your Lamicall Tablet Floor Stand.

Step 1: Assemble the Base

Place the heavy-duty base on a flat, stable surface. Insert the bottom end of the main support pole into the center hole of the base and twist clockwise until securely tightened.





Image: Assembled Lamicall Tablet Floor Stand with a tablet.

Step 2: Attach the Gooseneck Arm

Screw the flexible gooseneck arm onto the top of the main support pole. Ensure it is firmly attached.

Step 3: Install the Tablet Holder

Attach the universal tablet holder to the end of the gooseneck arm. The holder features a universal ball joint for flexible positioning.



HEAVY

DUTY BASE

Provide Solid Support.

Height-adjustable Knob.

Anti-slip Rubber.

Image: Details of the stand's heavy base, anti-slip rubber, and height adjustment knob.

OPERATING INSTRUCTIONS

Adjusting Height

Loosen the height-adjustable knob on the main support pole. Extend or retract the pole to your desired height (from 130cm/51.2 inches to 160cm/63 inches). Tighten the knob firmly to secure the height.

HEIGHT EXTENDABLE

Compatible with all 4.7" - 12.9" phones and tablets.



Image: Diagram illustrating the adjustable height and dimensions of the stand.

Adjusting Gooseneck Angle

The flexible gooseneck arm can be bent and shaped to achieve your preferred viewing angle. Gently bend the arm to position your device as needed.

Inserting and Removing Your Device

Pull apart the spring-loaded clamps on the tablet holder to expand it. Carefully place your tablet or phone into the holder, ensuring it is securely gripped by the anti-slip rubber pads. To remove, gently pull the clamps apart again.

Rotating Your Device

The universal ball joint on the back of the tablet holder allows for 360-degree rotation. Adjust your device to portrait or landscape orientation with ease.

Usage Scenarios

The Lamicall Tablet Floor Stand is designed for various hands-free activities, including:

- Watching videos or movies in bed or on the couch.
- Following recipes in the kitchen.
- Participating in video calls or online classes.
- Using your device during exercise routines.
- Drawing or sketching with a tablet.

ADJUSTABLE **DESIGN**

Easy to find a best view angle.



Image: User playing guitar with tablet on stand.

STAND YOUR LIFE

Make your fitness time more enjoyable.



Image: User exercising with tablet on stand.

FREE YOUR **HANDS**

Hold your tablet in a stable and safe way.



Image: Tablet on stand positioned for viewing in bed.

lamicall

Less is more

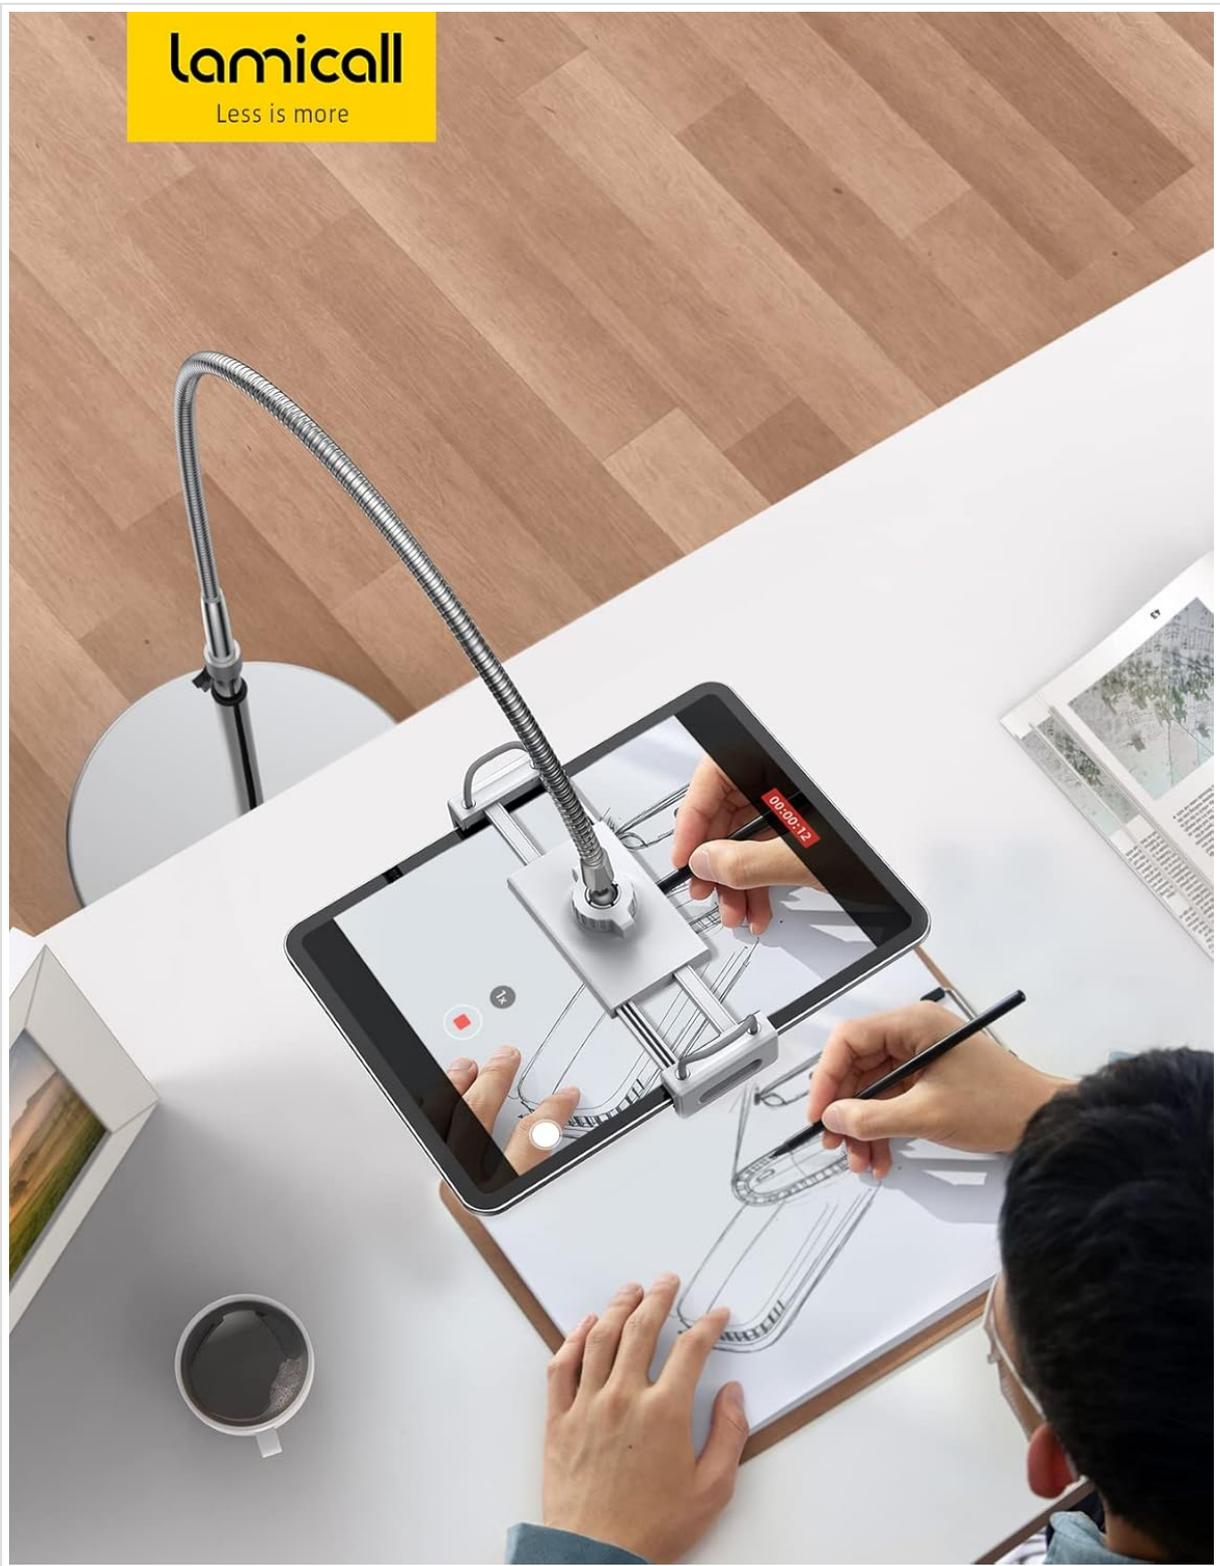


Image: User drawing with tablet on stand.

Official Product Video

Your browser does not support the video tag.

Video: An overview of the Lamicall Tablet Floor Stand's features and uses, presented by Lamicall Authorized.

DEVICE COMPATIBILITY

The Lamicall Tablet Floor Stand is designed to fit devices ranging from 4.7 to 12.9 inches. This includes, but is not limited to:

- **iPads:** 2024 / 2022 iPad Pro 11/12.9/13, 2022 iPad 10.9, iPad 10th Generation, iPad mini 6, iPad Air 6/5/4/3/2/1, iPad 10.2, iPad mini 5/4/3, iPad mini 8.3, iPad mini 7.9, iPad Pro 9.7, iPad Pro 10.5, iPad 10th 9th 8th 7th 6th 5th 4th 3rd 2nd Generation.
- **IPhones:** iPhone 15 Pro Max, iPhone 15 Pro, iPhone 15, iPhone 15 Plus, iPhone 14 Pro Max, iPhone 14 Pro, iPhone 14 Plus, iPhone 14, iPhone 13 Pro Max, iPhone 13 Pro, iPhone 13, iPhone 13 mini, iPhone 12 Pro Max, iPhone 12 Pro, iPhone 12, iPhone 12 mini, iPhone 11 Pro Max, iPhone 11 Pro, iPhone 11, iPhone XS, iPhone XS Max, iPhone XR, iPhone X, iPhone 10, iPhone 8, iPhone 8 Plus, iPhone 7, iPhone 7 Plus, iPhone 6, iPhone 6s Plus, iPhone SE, iPhone 17 Pro Max, iPhone 17 Air.
- **Other Devices:** Kindle Fire HD 7 8 10, E-readers, Huawei, Surface Go 2, Surface Pro X, Surface Pro 7, Google Nexus, Switch, Pixel, Galaxy Tab S8, S7, A8, A7, and other cell phones.

MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, damp cloth. Avoid using abrasive cleaners or solvents that may damage the finish.
- **Storage:** When not in use, store the stand in a cool, dry place.
- **Inspection:** Periodically check all connections and adjustment points to ensure they are secure.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Stand is wobbly	Base not fully tightened or placed on an uneven surface.	Ensure the main pole is securely screwed into the base. Place the stand on a flat, stable surface.
Gooseneck arm sags	Device is too heavy or gooseneck is overextended.	Ensure your device is within the compatible size/weight range. Adjust the gooseneck to a more stable, curved position.
Tablet slips from holder	Device not properly secured or holder clamps are loose.	Ensure the tablet is centered and firmly gripped by the holder's clamps. Check for any obstructions.
Difficulty adjusting height	Height adjustment knob is too tight.	Loosen the height adjustment knob sufficiently before attempting to adjust the pole.

SPECIFICATIONS

Feature	Detail
Brand	Lamicall
Model Number	038b2e6e-c86a-429d-a274-b861ac78c92b
Item Weight	10.6 pounds

Feature	Detail
Product Dimensions	17.32 x 13.38 x 4.33 inches
Color	Silver
Mounting Type	Floor Stand
Adjustable Height	130cm (51.2 inches) to 160cm (63 inches)
Device Compatibility	4.7 - 12.9 inches (phones and tablets)

WARRANTY AND SUPPORT

Lamicall products are designed for durability and performance. For warranty information, technical support, or any questions regarding your Lamicall Tablet Floor Stand, please refer to the official Lamicall website or contact their customer service directly. Contact details can typically be found on the product packaging or the brand's online store.