Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Aikoper /
- Aikoper 1500W Portable Electric Space Heater User Manual

Aikoper NT15-20A

Aikoper 1500W Portable Electric Space Heater User Manual

Model: NT15-20A

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- Do Not Cover: Never cover the heater or block the air inlets/outlets. This can cause overheating and fire.
- Proper Placement: Place the heater on a firm, level surface. Avoid placing on rugs, carpets, or near curtains.
- **Power Cord:** Do not route the power cord under furniture or appliances. Avoid placing the cord in high-traffic areas where it could be tripped over.
- Overheat Protection: The heater is equipped with an advanced overheat protection sensor that automatically shuts off the unit if it detects overheating.
- Tip-Over Protection: A smart tip-over switch automatically turns off the heater if it is knocked over.
- Ventilation: Ensure proper ventilation around the heater. Do not use in confined spaces.
- Indoor Use Only: This appliance is designed for indoor use only.
- Avoid Extension Cords: Plug the heater directly into a wall outlet. Avoid using extension cords or power strips, as this may lead to overloading and fire hazards.



Figure 1: Important safety warnings. Avoid damaged cords, covering the heater, and using extension cords.



Figure 2: Additional safety warnings. Do not place against walls, ensure a snug plug fit, and avoid sharing outlets with other high-power devices.

PRODUCT OVERVIEW

The Aikoper 1500W Portable Electric Space Heater is designed to provide fast and efficient heating for small to mediumsized rooms. Its compact design and multiple safety features make it ideal for use in bedrooms, offices, and other indoor spaces.



Figure 3: Front view of the Aikoper Space Heater, showing its compact size and heating element.



Figure 4: Top control panel with clear dials for temperature and mode selection.

SETUP

- 1. **Unpack:** Carefully remove the heater from its packaging. Retain packaging for off-season storage.
- 2. **Placement:** Place the heater on a firm, level surface free from obstructions. Ensure there is at least 3 feet of clear space around the heater to allow for proper airflow.
- 3. Power Connection: Plug the heater directly into a 120V AC wall outlet. Do not use extension cords or power strips.

OPERATING INSTRUCTIONS

The Aikoper Space Heater features simple manual controls for ease of use.

Mode Selection:

- OFF: Turns the heater off.
- FAN ONLY: Activates the fan without heat, providing air circulation.
- LOW Heat (1): Provides 750W of heating power.
- MEDIUM Heat (2): Provides 1000W of heating power.
- HIGH Heat (3): Provides 1500W of heating power for maximum warmth.

Thermostat Control:

Adjust the thermostat dial from MIN to MAX to set your desired room temperature. The heater will cycle on and off to maintain the set temperature.



Figure 5: Four modes for year-round comfort, including fan-only and three heat settings.



Figure 6: Adjustable thermostat for precise temperature control.

Your browser does not support the video tag.

Video 1: Official Product Overview. This video demonstrates the basic functions and features of the Aikoper Space Heater, including its compact size and control knobs.

MAINTENANCE

- Cleaning: Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
- **Inspection:** Periodically inspect the power cord and plug for any signs of damage. If any damage is found, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; Tip-over switch activated; Overheat protection activated.	Ensure plug is fully inserted; Place heater on a flat, stable surface; Unplug and allow to cool for 30 minutes before restarting.
No heat output.	Heater is in Fan Only mode; Thermostat set too low.	Select a heat mode (1, 2, or 3); Increase thermostat setting.
Heater makes unusual noise.	Dust accumulation; Loose internal component.	Clean the heater's exterior; If noise persists, discontinue use and contact support.

SPECIFICATIONS

Brand: AikoperModel: NT15-20A

• Power: 1500W (High), 1000W (Medium), 750W (Low)

• Voltage: 120 Volts

• **Dimensions:** 6.4"D x 4.8"W x 9.09"H

• Weight: 2.73 pounds

• **Special Features:** Manual Thermostat, Portable, Fast Heating, Adjustable Temperature, Overheat Protection, Tip-Over Protection, Compact

• Heating Coverage: Up to 150 sq. ft.

• Form Factor: Pedestal

• Indoor/Outdoor Usage: Indoor

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided in your product packaging or visit the official Aikoper website. Ensure you have your model number (NT15-20A) and purchase details ready when contacting support.

© 2025 Aikoper. All rights reserved.



Pelonis NT15-13L Oscillating Ceramic Heater Owner's Manual and Safety Guide

Comprehensive owner's manual for the Pelonis Oscillating Ceramic Heater, Model NT15-13L. This guide provides essential safety precautions, detailed operating instructions, troubleshooting advice, cleaning and storage recommendations, product specifications, service and support contact information, and a one-year limited warranty.



NETTA PTC Fan Heater NT20-20A: User Manual and Operation Guide

Official user manual for the NETTA PTC Fan Heater, model NT20-20A. Provides detailed instructions on safe operation, features, troubleshooting, maintenance, and product specifications. Includes information on warranty and disposal. Suitable for domestic use.



 
DAIKIN EPSX* Optional Equipment Addendum Book

This addendum book provides essential information for installing and connecting optional equipment to DAIKIN EPSX* systems. It covers wired and wireless room thermostats, heat pump convectors, remote sensors, human comfort interfaces, and bizone kits, including detailed wiring diagrams and configuration notes.



Grinfineon 20A Sine Wave Motor Controller User Manual

User manual for the Grinfineon 20A Sine Wave Motor Controller with Higo Motor Plug for Small Hubs, covering installation, hookup, core features, and limitations.



Equinox II Sauna Assembly Instructions | Sun Home Saunas

Step-by-step guide for assembling the Sun Home Saunas Equinox II infrared sauna. Includes parts list, tools required, and detailed assembly procedures for a safe and enjoyable experience.



PowerFlex 70 Adjustable Frequency AC Drive Technical Data

Comprehensive technical data and specifications for the Allen-Bradley PowerFlex 70 Adjustable Frequency AC Drive, detailing product features, catalog number explanations, installation guidelines, power ratings, and certifications.