

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MAXXMEE](#) /

› [MAXXMEE 3-in-1 Laundry Care Center 1350W User Manual](#)

## MAXXMEE B0895WH81G

# MAXXMEE 3-in-1 Laundry Care Center User Manual

MODEL: B0895WH81G

## Introduction

The MAXXMEE 3-in-1 Laundry Care Center is designed to simplify your garment care routine. This versatile appliance offers three primary functions: rapid drying, gentle smoothing, and refreshing of various fabrics using steam. It is capable of processing up to five shirts simultaneously, providing a convenient solution for everyday clothing maintenance.

## Important Safety Instructions

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power outlet when not in use, before cleaning, or before adding/removing water.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets. Close supervision is necessary when the appliance is used near children.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Use the appliance only for its intended purpose as described in this manual.
- Ensure the appliance is placed on a stable, level surface during operation.
- Do not block steam vents or air inlets/outlets during operation.
- Use only distilled or demineralized water to prevent mineral buildup.
- Avoid touching hot surfaces. Use handles or knobs.

## Package Contents

Please refer to the product packaging for a complete list of included components and accessories.

## Setup

---

Before first use, assemble the MAXXMEE Laundry Care Center according to the following steps:

1. Unpack all components from the packaging.
2. Assemble the main frame by inserting the extendable rods into their designated slots in the base unit. Ensure all connections are secure.
3. Drape the fabric cover over the assembled frame, ensuring it is properly aligned and zipped closed where applicable.
4. Locate the water reservoir. Fill it with clean, distilled, or demineralized water. Do not overfill.
5. Place the filled water reservoir back into its designated position in the base unit.
6. Position the appliance on a flat, stable surface, ensuring adequate space around it for air circulation.



Image: The MAXXMEE Laundry Care Center shown in its compact, folded state, illustrating its space-saving design when not in use.

## Operating Instructions

---

The MAXXMEE Laundry Care Center features a simple control dial for selecting functions.



Image: A detailed view of the control dial on the MAXXMEE Laundry Care Center, showing the settings for Drying, Smoothing, and Refreshing.

## Garment Preparation

- Hang garments on the provided hangers. For shirts, use the special hanger with long rods to widen the waist. Insert additional rods into sleeves to widen them.
- Attach weights to the bottom edges of the shirt to ensure it is well-stretched and taut. Proper garment placement is crucial for optimal results.
- The unit can accommodate up to five shirts, but for best results, consider processing fewer items at a time to allow for better steam and air circulation.

## Function Selection

Turn the control dial to select your desired function:

1. **Drying (Trocknen):** For rapid drying of damp clothes.



Image: The MAXXMEE Laundry Care Center operating in drying mode, indicated by a sun icon, with a red jacket inside the steaming chamber.

2. **Smoothing (Glätten):** To gently remove wrinkles and smooth fabrics.



Image: The MAXXMEE Laundry Care Center in smoothing mode, indicated by a wavy lines icon, with a blue shirt being treated inside.

3. **Refreshing (Auffrischen):** To eliminate odors and refresh garments without washing.



Image: The MAXXMEE Laundry Care Center operating in refreshing mode, indicated by a flower icon, with a pink jacket inside the steaming chamber.

Once the function is selected, the appliance will begin its cycle. The duration of the cycle will vary depending on the selected function and the garment type. A typical combined drying and smoothing cycle may take approximately 90 minutes.

## Maintenance

### Cleaning the Water Reservoir

Regularly empty and clean the water reservoir to prevent mineral buildup. Use a soft cloth and mild detergent if necessary, then rinse thoroughly. Ensure the reservoir is completely dry before refilling or storing.

## Cleaning the Exterior

Wipe the exterior surfaces of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the appliance is unplugged and cool before cleaning.

## Storage

When not in use, the MAXXMEE Laundry Care Center can be folded for compact storage. Ensure the water reservoir is empty and the appliance is clean and dry before folding. Store in a cool, dry place.



Image: The MAXXMEE Laundry Care Center shown in its fully folded configuration, highlighting its compact design for easy storage.

## Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker. If problem persists, contact support.
No steam or insufficient steam.	Water reservoir empty; mineral buildup; steam vents blocked.	Refill water reservoir. Clean reservoir and steam vents. Use distilled water.
Garments remain wrinkled.	Improper garment placement; overloaded; cycle too short.	Ensure garments are properly stretched and weighted. Do not overload. Select a longer cycle if available or run a second cycle.
Garments not drying effectively.	Overloaded; insufficient air circulation; cycle too short.	Reduce number of garments. Ensure appliance is not placed in an enclosed space. Select a longer drying cycle.

## Specifications

Feature	Detail
Brand	MAXXMEE
Model	B0895WH81G
Manufacturer	ds Produkte GmbH
Power	1350 W
Dimensions (folded)	71.6 x 39.4 x 36.8 cm
Weight	13.68 kg
Material	Aluminum, Nylon, Plastic
Color	White

## Warranty and Support

For warranty information, please refer to your purchase documentation or contact the retailer where the product was purchased. For technical support or service inquiries, please contact MAXXMEE customer service through their official channels.

© 2023 MAXXMEE. All rights reserved.