

[Manuals.plus](#) /

› [Skyworth](#) /

› Skyworth HD TV - 32 Inch - Silver - 32TB7000 User Manual

Skyworth 32TB7000

Skyworth HD TV User Manual

Model: **32TB7000** | Brand: *Skyworth*

1. PRODUCT OVERVIEW

The Skyworth 32TB7000 is a 32-inch HD TV designed to provide a clear and immersive viewing experience. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television. Please read this manual thoroughly before using the product to ensure proper and safe operation.



Image: Skyworth 32-inch HD TV, showcasing its sleek design and vibrant display capabilities.

2. SETUP GUIDE

2.1 What's in the Box

- Skyworth 32-inch HD TV (Model: 32TB7000)
- Power Cable
- Remote Control
- User Manual (this document)

2.2 Stand Installation

Carefully place the TV screen-down on a soft, flat surface to prevent scratches. Align the TV stand(s) with the screw holes on the bottom of the TV. Secure the stand(s) using the provided screws. Ensure the stand is firmly attached before placing the TV upright.

2.3 Connecting Your TV

Before connecting any cables, ensure the TV and all external devices are powered off.

1. **Power Connection:** Connect the power cable to the TV's power input and then to a wall outlet.
2. **HDMI Devices:** For high-definition video and audio, connect devices like Blu-ray players, game consoles, or set-top boxes to the TV's HDMI ports using HDMI cables.
3. **USB Devices:** Connect USB drives for media playback to the TV's USB ports.
4. **Antenna/Cable:** Connect an antenna or cable TV coaxial cable to the RF input on the TV for broadcast channels.

3. OPERATING YOUR TV

3.1 Power On/Off

Press the **POWER** button on the remote control or on the TV itself to turn the TV on or off.

3.2 Remote Control Functions

The remote control allows you to navigate menus, change channels, adjust volume, and access various features. Refer to the remote control diagram (not included in this digital manual) for specific button layouts.

- **Source/Input:** Press to select connected devices (HDMI, USB, TV).
- **Volume +/-:** Adjusts the sound level.
- **Channel +/-:** Changes TV channels.
- **Navigation Buttons:** Used to move through menus and select options.
- **Netflix, YouTube, Amazon Instant Video:** Dedicated buttons for quick access to these streaming services.

3.3 Initial Setup and Settings

Upon first power-on, the TV will guide you through an initial setup process, including language selection, country/region, and channel scanning. You can adjust display settings such as brightness, contrast, and color saturation through the TV's picture menu. The TV supports a 720p resolution and a 60 Hz refresh rate for smooth viewing.

4. MAINTENANCE

4.1 Cleaning the Screen

Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

4.2 General Care

- Avoid placing the TV in direct sunlight or near heat sources.
- Ensure adequate ventilation around the TV.
- Unplug the TV during lightning storms or when unused for extended periods.

5. TROUBLESHOOTING

If you encounter issues with your TV, please refer to the following common problems and solutions before contacting support.

| Problem | Possible Cause | Solution |
|----------------------------|--|--|
| No Power | Power cable not connected; outlet not working. | Check power cable connection; try a different outlet. |
| No Picture/Sound | Incorrect input source; external device off. | Press the Source button on the remote to select the correct input; ensure external devices are powered on. |
| Remote Control Not Working | Dead batteries; obstruction. | Replace batteries; remove any obstructions between remote and TV. |
| Poor Picture Quality | Weak signal; incorrect picture settings. | Check antenna/cable connection; adjust picture settings in the TV menu. |

6. SPECIFICATIONS

| Feature | Detail |
|--------------------|------------------------------------|
| Brand | Skyworth |
| Model Name | 32TB7000 |
| Screen Size | 32 Inches (82 cm visible diagonal) |
| Display Technology | LED |
| Resolution | 720p |
| Refresh Rate | 60 Hz |
| Special Features | Flat Screen |

| Feature | Detail |
|-----------------------------|--|
| Connectivity Technology | HDMI, USB |
| Supported Internet Services | Amazon Instant Video, Netflix, YouTube |
| Included Components | Power Cable, Remote Control |
| Package Dimensions | 77.6 x 51.8 x 13.2 cm |
| Item Weight | 5.7 kg |
| Manufacturer | Skyworth |
| ASIN | B0896TMVT5 |
| Date First Available | 26 May 2020 |

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Skyworth TV comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Skyworth website for detailed terms and conditions regarding warranty coverage and duration.

7.2 Customer Support

For technical assistance, service inquiries, or further questions not covered in this manual, please contact Skyworth customer support. Contact information can typically be found on the official Skyworth website or on the product packaging.