

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aigostar](#) /

› [Aigostar 7.4 QT Air Fryer Instruction Manual](#)

Aigostar 7.4 QT Air Fryer (Model B0896VBKLM)

Aigostar 7.4 QT Air Fryer Instruction Manual

Model: B0896VBKLM

INTRODUCTION

Thank you for choosing the Aigostar 7.4 QT Air Fryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.


- Do not immerse the main unit in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local voltage before connecting.
- Keep the appliance and its cord out of reach of children.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Always unplug the appliance after use and before cleaning.
- Do not block the air vents during operation.
- Use only original accessories provided by the manufacturer.
- The appliance is intended for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Aigostar Air Fryer.



Figure 1: Main unit of the Aigostar 7.4 QT Air Fryer, showcasing its sleek black design and digital display with a whole chicken and fries inside the basket.

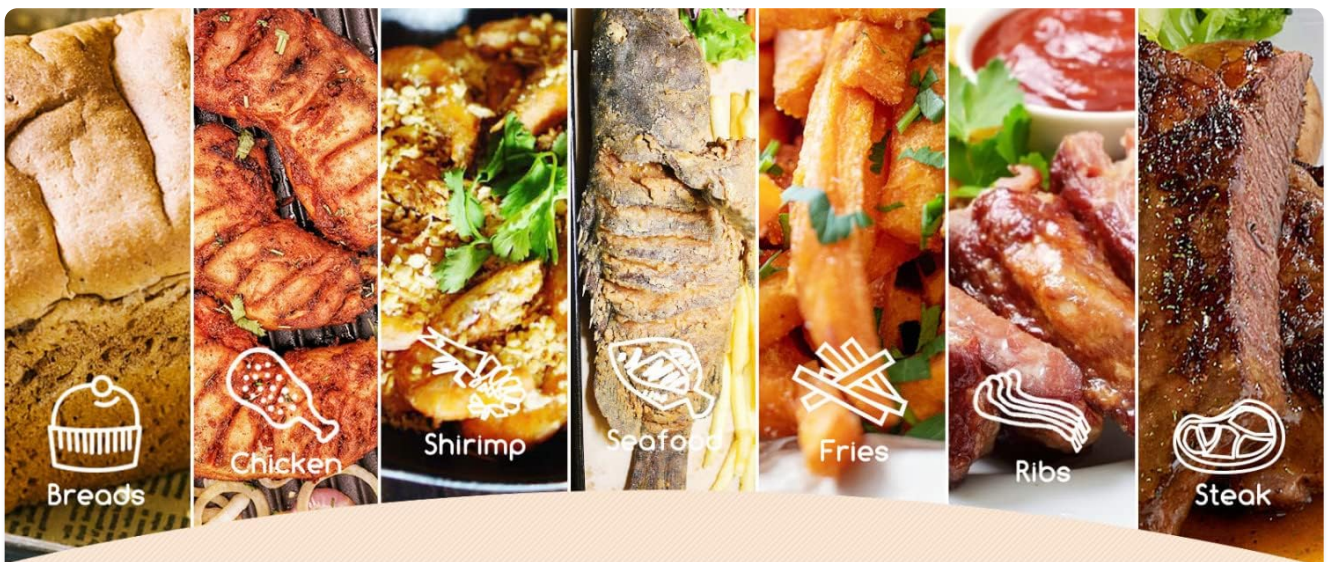

8 Presets Function



Figure 2: Close-up of the LED touchscreen control panel, highlighting the 8 preset cooking functions for various food types like breads, chicken, shrimp, seafood, fries, ribs, and steak, along with temperature and timer controls.

Key Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** LED touchscreen for setting time, temperature, and selecting presets.
- **Removable Basket & Drawer:** Nonstick coated for easy food placement and cleaning.
- **Handle:** Cool-touch handle for safe removal of the basket.
- **Air Vents:** Located at the back for proper air circulation.

SETUP

Before using your air fryer for the first time, follow these steps:

1. Remove all packaging materials and stickers.
2. Clean the basket and drawer with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.

3. Wipe the inside and outside of the main unit with a damp cloth.
4. Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances, ensuring adequate air circulation around the unit.



Figure 3: The air fryer's dimensions are approximately 12.5 inches deep, 16.3 inches wide, and 13.6 inches high, illustrating its compact yet spacious design suitable for various kitchen countertops.

OPERATING INSTRUCTIONS

Your Aigostar Air Fryer offers versatile cooking options with its digital controls and presets.

Basic Operation:

1. Plug the power cord into a grounded wall outlet.
2. Carefully pull the basket out of the air fryer.
3. Place ingredients into the basket. Do not overfill.
4. Slide the basket back into the air fryer. Ensure it clicks securely into place.
5. Press the Power button to turn on the appliance.

6. Use the temperature and time control buttons (+ / -) to set your desired cooking parameters. The temperature range is 176°F to 400°F, and the timer can be set up to 60 minutes.
7. Press the Power button again to start cooking.
8. Some recipes may require shaking ingredients halfway through cooking. Pull out the basket, shake, and reinsert. The air fryer will resume cooking automatically.
9. When cooking is complete, the timer will beep. Carefully pull out the basket and empty the contents.



Figure 4: The air fryer's basket is designed to pull out horizontally, which is recommended to reduce friction and ensure smooth operation when checking or shaking food during cooking.

Using Presets:

The air fryer features 8 convenient presets for common dishes:

- Cake
- French Fries
- Shrimp
- Chicken

- Steak
- Meat
- Fish
- Keep Warm

To use a preset, simply press the corresponding icon on the touchscreen. The air fryer will automatically set the optimal temperature and time for that food type. You can adjust these settings manually if desired.



Figure 5: An internal view of the Aigostar Air Fryer demonstrating its 360-degree rapid air circulation technology, which ensures even cooking and crispy results without the need for excessive oil.

Official Product Video:

Your browser does not support the video tag.

This video demonstrates the key features and operation of the Aigostar 7.4 QT Air Fryer, including its digital touchscreen, preset menus, and detachable basket. It provides a visual guide to using the appliance effectively.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. The removable nonstick basket and drawer are **dishwasher safe** for convenient cleaning.
3. For manual cleaning, wash the basket and drawer with hot water, dish soap, and a non-abrasive sponge.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Clean the heating element with a cleaning brush to remove any food residue.
6. Ensure all parts are completely dry before storing or using again.



Figure 6: The nonstick basket of the Aigostar Air Fryer is shown being placed into a dishwasher, emphasizing its dishwasher-safe feature for easy cleanup after cooking.



Figure 7: A user demonstrating the detachment of the nonstick basket from the main drawer, highlighting the cool-touch handle and button guard for safe and easy separation for cleaning.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; basket not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Push the basket firmly into the main unit until it clicks into place.
Food is not cooked evenly.	Basket is overfilled; ingredients not shaken.	Do not overfill the basket. Shake smaller ingredients halfway through cooking. For larger items, flip them.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Greasy residue from previous use; fatty ingredients.	Clean the basket and drawer thoroughly after each use. For fatty foods, drain excess oil from the drawer during cooking.
Food is not crispy.	Not enough oil (for certain foods); temperature or time too low.	Lightly brush or spray oil on foods that typically require it. Increase cooking time or temperature slightly.

SPECIFICATIONS

- **Brand:** Aigostar
- **Model:** 7.4 QT Air Fryer (B0896VBKLM)
- **Capacity:** 7 Liters (7.4 QT)
- **Product Dimensions:** 12.5"D x 16.3"W x 13.6"H
- **Color:** Black
- **Material:** Polypropylene (PP)
- **Output Wattage:** 1500 Watts
- **Voltage:** 120 Volts
- **Special Features:** Temperature Control, Timer, LED Touchscreen, 8 Presets
- **Max Temperature Setting:** 400 Degrees Fahrenheit
- **Nonstick Coating:** Yes
- **Dishwasher Safe:** Yes (Basket & Drawer)
- **Item Weight:** 14.57 pounds

WARRANTY AND SUPPORT

Your Aigostar 7.4 QT Air Fryer comes with a manufacturer 1-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Aigostar customer service through their official website or the contact information provided with your purchase documentation. Please have your model number (B0896VBKLM) and proof of purchase ready when contacting support.

For more information, visit the official Aigostar Store: [Aigostar Store on Amazon](#)