

[Manuals.plus](#) /

› [HADEN](#) /

› Haden Boston Toaster Instruction Manual

HADEN Boston

Haden Boston Toaster Instruction Manual

Model: Boston

[Introduction](#) [Safety Instructions](#) [Setup Specifications](#) [Operating Instructions](#) [Maintenance](#)
[Troubleshooting](#) [Warranty](#) [Support](#)

1. INTRODUCTION

Thank you for purchasing the Haden Boston Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.



Image 1.1: The Haden Boston Toaster, showcasing its design and capacity for two slices of bread. The toaster features a vibrant red body with chrome accents, and is shown in a kitchen setting with prepared toast.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Do not toast pastries with runny fillings.

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain the packaging for future storage or disposal.
2. **Placement:** Place the toaster on a stable, heat-resistant, and non-flammable surface, away from curtains or other flammable materials. Ensure there is adequate space around the toaster for ventilation.
3. **Cleaning:** Wipe the exterior of the toaster with a damp cloth. Do not use abrasive cleaners. Ensure the crumb tray is clean and properly inserted.
4. **First Use (Burn-off):** Before toasting food for the first time, operate the toaster without bread for a few cycles at the highest setting. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a suitable 230V AC electrical outlet.

4. OPERATING INSTRUCTIONS

The Haden Boston Toaster is designed for ease of use, featuring multiple functions for perfect toast every time.



Image 4.1: Detailed view of the toaster's control panel, highlighting the Cancel, Reheat, and Defrost function buttons, along with the browning level selector.

4.1. Basic Toasting

1. **Insert Bread:** Place up to two slices of bread into the toasting slots.
2. **Select Browning Level:** Turn the browning control dial to your desired setting (1 for light toast, 6 for dark toast). Start with a medium setting (e.g., 3 or 4) and adjust according to preference.
3. **Start Toasting:** Press the carriage lever down until it locks into place. The toaster will begin toasting, and the indicator light will illuminate.
4. **Completion:** Once the selected browning cycle is complete, the toast will automatically pop up, and the indicator light will turn off.

4.2. Special Functions

- **Cancel Function:** To stop the toasting cycle at any time, press the **CANCEL** button. The carriage will immediately pop up.
- **Reheat Function:** To warm up already toasted bread without further browning, insert the toast and press the **REHEAT** button after pressing the carriage lever down.
- **Defrost Function:** To toast frozen bread, insert the bread, press the carriage lever down, and then

press the **DEFROST** button. This function automatically adjusts the toasting time for frozen items.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

- 1. Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- 2. Crumb Tray:**
 - Slide out the crumb tray located at the bottom of the toaster.
 - Empty crumbs into a waste bin.
 - Wipe the tray clean with a damp cloth and dry thoroughly before reinserting.
 - *Note:* Ensure the crumb tray is always in place before using the toaster.
- 3. Exterior Cleaning:** Wipe the exterior surfaces of the toaster with a soft, damp cloth. For stubborn marks, a mild detergent can be used, followed by wiping with a clean, damp cloth and then drying. Do not use abrasive cleaners, scouring pads, or metal polish.
- 4. Interior Cleaning:** Never insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully invert it to shake out the food.
- 5. Storage:** When not in use, store the toaster in a clean, dry place. You can wrap the power cord around the cord storage clips (if available) on the underside of the toaster.

6. TROUBLESHOOTING

If you encounter issues with your Haden Boston Toaster, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; carriage lever not fully depressed.	Ensure the toaster is securely plugged into a working outlet. Press the carriage lever down until it locks.
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Bread is stuck in the toaster.	Oversized bread; anti-jam mechanism engaged.	Unplug the toaster. Allow it to cool. Carefully remove the bread using non-metallic tongs. Never use metal utensils.
Smoke coming from the toaster.	Crumbs accumulated in the bottom; food lodged in heating elements; first use burn-off.	Press the CANCEL button, unplug, and allow to cool. Clean the crumb tray. If it's the first use, some smoke is normal. If persistent, contact support.

If the problem persists after trying these solutions, please contact customer support.

7. PRODUCT SPECIFICATIONS

Haden Boston Red Metallic Pyramid Toaster



METAL SIDE PANELS



2 SLICE



ANTI-JAM FUNCTION



685-815W



Image 7.1: Visual representation of key features of the Haden Boston Toaster, including its 2-slice capacity and power rating.

- **Model:** Boston
- **Brand:** HADEN
- **Material:** Stainless Steel
- **Color:** Red
- **Voltage:** 230 Volts
- **Wattage:** 815 Watts (also noted as 685-815W in image)
- **Capacity:** 2 Slices
- **Special Features:** Cancel Function, Reheat Function, Defrost Function, Anti-Jam Function, Metal Side Panels
- **Number of Items:** 1

8. WARRANTY INFORMATION

HADEN products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please

retain your proof of purchase for any warranty claims. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact customer support. The warranty does not cover damage caused by misuse, neglect, accident, unauthorized repair, or normal wear and tear.

9. CUSTOMER SUPPORT

For any questions, assistance, or to report an issue with your Haden Boston Toaster, please contact our customer support team:



Image 9.1: Customer support details for Haden products, including contact numbers and website for further assistance.

Phone: +91-8448990861 | 9354500768

Website: www.pengessentials.com

Please have your model number (Boston) and proof of purchase ready when contacting support.

