

INFANS W1508UR2

INFANS W1508UR2 3-in-1 Foldable Baby Walker Instruction Manual

Model: W1508UR2

1. SAFETY INFORMATION

WARNING: Never leave child unattended. Always keep child in view while in the walker. This product is intended for children who can sit up unassisted, are under 30 pounds, and are less than 32 inches tall. Discontinue use if the child can walk on their own or climb out of the product.

- Ensure all parts are correctly assembled and securely fastened before each use.
- Keep the child away from stairs, steps, uneven surfaces, and objects that could be pulled down.
- Prevent access to hot liquids, electrical cords, stoves, heaters, and other hazards.
- This walker is equipped with a safety bumper under the seat to help prevent collisions with furniture.
- Six non-slip stair pads are included to help prevent the walker from falling down steps. Ensure these are properly installed if using near stairs.
- This product meets US CPSIA & ASTM safety standards. It is made of non-toxic PP material, free from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde.

2. PRODUCT OVERVIEW

The INFANS W1508UR2 is a versatile 3-in-1 baby walker designed to support your child's development through seated play, walk-behind assistance, and bouncing activities. It features an adjustable height, a comfortable high-back padded seat, a detachable music box, and a trampoline mat.



Figure 2.1: INFANS 3-in-1 Foldable Baby Walker (Blue model shown).

Key Components:

- **Activity Tray:** Features a detachable music box with lights and various toys.
- **Padded Seat:** High-back design for support and comfort, with a removable and washable cover.
- **Height Adjustment Mechanism:** Allows for 3 different height positions to grow with your child.
- **Wheels:** 360° rotatable universal wheels for easy movement.
- **Speed Adjustment:** Rear wheels can be adjusted to control walking speed.
- **Safety Features:** Anti-slip pads and a safety bumper.
- **Trampoline Mat:** Detachable mat for bouncer mode.

3. ASSEMBLY INSTRUCTIONS

Before assembly, ensure all parts are present and undamaged. Refer to the parts list in your packaging. Assembly typically requires no tools.

1. **Unfold the Walker Frame:** Carefully pull the frame upwards until it locks into an upright position.

Ensure all locking mechanisms are engaged.

2. **Attach the Seat:** Align the seat fabric with the designated slots on the walker's top tray. Securely fasten all tabs or clips as per the diagram. Ensure the seat is firmly attached and cannot be easily dislodged.
3. **Install Activity Tray/Music Box:** The music box is designed to be detachable. Place it into the central opening of the tray. It should click into place. To remove, locate the release mechanism (usually a button or lever) and gently lift.
4. **Attach Side Toys:** The small toys (e.g., giraffe, tree) can be inserted into the designated holes on the activity tray.
5. **Install Trampoline Mat (Optional for Bouncer Mode):** If using the bouncer mode, attach the trampoline mat to the bottom frame of the walker using the provided hooks or loops. This will prevent the child's feet from touching the floor and allow for bouncing.
6. **Check Safety Bumper and Non-Slip Pads:** Verify that the safety bumper is correctly positioned under the seat and that the six non-slip stair pads are securely attached to the bottom frame.



Figure 3.1: Overview of key components and their locations.

4. OPERATING INSTRUCTIONS

Seated Walker Mode:

- Place your child securely in the padded seat. Ensure their feet can comfortably touch the floor or the trampoline mat (if installed for bouncing).
- The activity tray with the music box and toys provides entertainment. The music box can be removed to create a snack tray.



Figure 4.1: Activity tray in "Play" mode with music box and "Eat" mode with music box removed.

Walk-Behind Mode:

- For children learning to walk, the walker can be used as a push-behind aid. Ensure the child can stand and hold onto the walker's frame.
- Adjust the height to an appropriate level for the child to comfortably push the walker.

Bouncer Mode:

- With the trampoline mat installed, the walker functions as a bouncer, allowing the child to bounce

in place.

- Ensure the child's feet are fully on the mat and not touching the floor.

5. ADJUSTMENTS

Height Adjustment:

The walker features 3 adjustable height positions. To adjust the height:

1. Locate the red adjustment button/lever underneath the main tray.
2. Rotate the red button half a turn to unlock.
3. Press the front end of the red button and push the seat down or pull it up to the desired height.
4. Release the button and ensure it locks securely into one of the three positions.



Figure 5.1: Three-position height adjustment.

Speed Adjustment:

The speed of the walker can be adjusted by tightening or loosening the screws on the rear wheels.

- To increase friction and slow down the walker, tighten the nut on the rear wheels.
- To decrease friction and allow faster movement, loosen the nut on the rear wheels.



Figure 5.2: Adjustable speed mechanism on the rear wheel.

6. MAINTENANCE AND CLEANING

- **Seat Cushion:** The high-back padded seat cover is detachable and washable for easy cleaning. Remove the seat cover and follow the care instructions on the label.
- **Plastic Parts:** Wipe down the plastic frame, activity tray, and toys with a damp cloth and mild soap. Rinse thoroughly and dry completely.
- **Wheels:** Regularly check the wheels for hair, lint, or debris that may hinder smooth movement. Clean as needed.
- **Music Box:** The music box can be wiped clean with a damp cloth. Do not immerse in water.

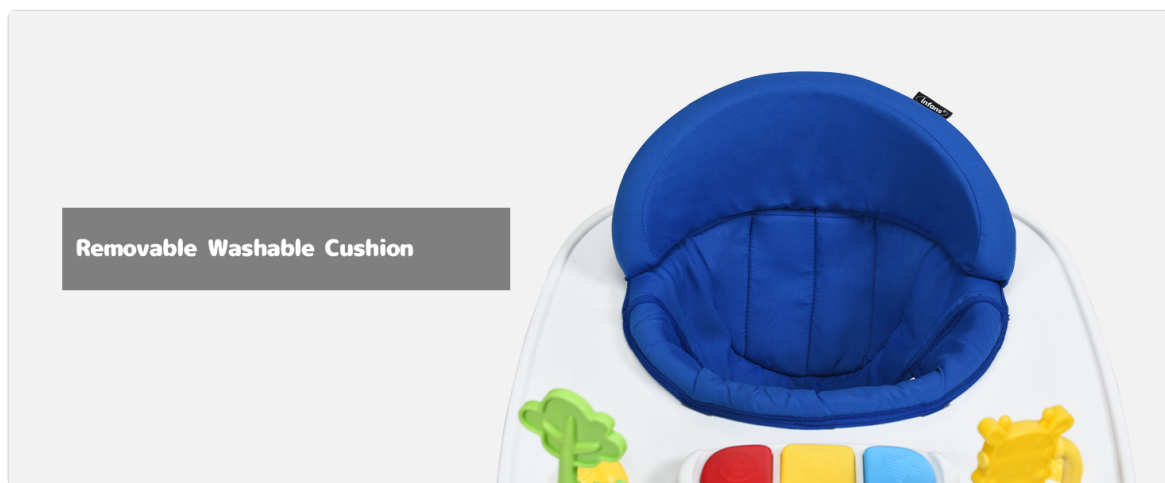


Figure 6.1: Removable and washable seat cushion.

7. STORAGE

The INFANS W1508UR2 walker is designed for compact storage.

1. **Folding:** To fold the walker, rotate the red adjustment button half a turn to align it with the gap. Press the front end of the red button and push the seat down completely until the walker is flat.
2. Once folded, the walker is approximately 11 inches tall, making it easy to store under a bed or against a wall.



Figure 7.1: Foldable design for compact storage.



Figure 7.2: Folded dimensions for storage.

8. TROUBLESHOOTING

- **Walker not moving smoothly:** Check wheels for debris (hair, lint) and clean if necessary. Ensure the speed adjustment nuts on the rear wheels are not overtightened.
- **Walker not locking into height position:** Ensure the red adjustment button is fully released and engaged in one of the designated height slots.
- **Music box not working:** Check if batteries are installed correctly and have sufficient charge (requires 2 x AA batteries, not included).
- **Seat difficult to attach/remove:** Ensure all tabs are correctly aligned with their respective slots. Applying gentle, even pressure can help.

9. SPECIFICATIONS

Feature	Detail
Model Number	W1508UR2
Product Dimensions (Unfolded)	30"L x 24"W x 21.5"H
Product Dimensions (Folded)	30"L x 24"W x 11"H
Maximum Weight Recommendation	30 Pounds
Material Type	Polypropylene (PP)
Material Composition	PP+Sponge+Cloth
Number Of Items	1
Age Range (Description)	Toddler (able to sit up unassisted)
Safety Certifications	US. CPSIA & ASTM Approved
Power Source (Music Box)	2 x AA batteries (not included)



Figure 9.1: Product dimensions.

Stable triangular structure



Figure 9.2: Stable triangular structure supporting up to 30 lbs.

10. WARRANTY AND SUPPORT

For warranty information or product support, please contact INFANS customer service. Keep your purchase receipt for proof of purchase.

- **Contact Information:** Refer to the contact details provided in your product packaging or visit the official INFANS website.
- **Online Resources:** Additional FAQs and support documents may be available on the INFANS brand store page.