

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION LIFETAB E10703 Tablet PC User Manual

MEDION E10703

MEDION LIFETAB E10703 Tablet PC User Manual

Model: E10703

1. INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your MEDION LIFETAB E10703 Tablet PC. Please read this manual carefully before using your device to ensure optimal performance and longevity.



Image: The MEDION LIFETAB E10703 Tablet PC, showcasing its vibrant Full HD display.

2. PACKAGE CONTENTS

Ensure all the following items are present in your package:

- MEDION LIFETAB Tablet PC E10703 MD61762
- USB Type-C Cable
- Power Adapter

3. SETUP

3.1 First Boot and Initial Setup

Follow these steps for the initial setup of your tablet:

1. **Power On:** Press and hold the power button until the MEDION logo appears.
2. **Language Selection:** Choose your preferred language from the list.
3. **Connect to Wi-Fi:** Select your Wi-Fi network and enter the password.
4. **Google Account:** Sign in with your Google account or create a new one. This is essential for accessing the Google Play Store and other Google services.
5. **Date and Time:** Confirm or adjust the date and time settings.
6. **Privacy Settings:** Review and accept the privacy policy and location services settings.
7. **Complete Setup:** Follow any remaining on-screen prompts to finalize the setup process.

3.2 Connecting to a Network

Your tablet supports both Wi-Fi and LTE connectivity.

3.2.1 Wi-Fi Connection

- Go to **Settings > Network & Internet > Wi-Fi**.
- Toggle **Wi-Fi On**.
- Select your desired network from the list of available networks.
- Enter the network password if prompted and tap **Connect**.

3.2.2 LTE Connection (Mobile Data)

- **Insert SIM Card:** Carefully insert a nano-SIM card into the designated SIM card slot. Refer to the tablet's physical layout for slot location.
- Go to **Settings > Network & Internet > Mobile network**.
- Ensure **Mobile data** is toggled **On**.
- Configure APN settings if required by your mobile carrier.



Image: Front view of the tablet, showing the display with network status icons.

4. OPERATING YOUR TABLET

4.1 Basic Navigation

The MEDION LIFETAB E10703 uses a capacitive touchscreen for interaction:

- **Tap:** Touch the screen briefly to select an item, open an app, or confirm an action.
- **Swipe:** Drag your finger across the screen to scroll through lists, switch between home screens, or navigate within apps.
- **Pinch-to-Zoom:** Place two fingers on the screen and move them apart to zoom in, or together to zoom out, typically in galleries or web pages.
- **Long Press:** Press and hold an item to reveal context menus or enable drag-and-drop functionality.

4.2 Applications and Software

Your tablet runs on **Android 9.0 Pie**, providing a user-friendly interface and access to a vast ecosystem of applications.

- **Home Screen:** Displays your favorite apps, widgets, and notifications.
- **App Drawer:** Swipe up from the home screen to access all installed applications.
- **Google Play Store:** Tap the Play Store icon to browse and download new applications, games, movies, and books. A Google account is required.

4.3 Camera Usage

The tablet is equipped with a rear camera (5 MP) for photos and videos.

- **Open Camera App:** Tap the Camera icon on your home screen or in the app drawer.
- **Take a Photo:** Frame your shot and tap the shutter button on the screen.
- **Record Video:** Switch to video mode within the camera app and tap the record button to start/stop recording.



Image: Side view of the MEDION LIFETAB E10703, highlighting the camera lens and various ports.

5. MAINTENANCE

5.1 Charging the Battery

To charge your tablet:

- Connect the USB Type-C cable to the tablet's charging port.
- Connect the other end of the cable to the provided power adapter.
- Plug the power adapter into a wall outlet.
- The battery icon on the screen will indicate charging status.

5.2 Storage Management

Your tablet has 64 GB of internal storage, which can be expanded using a microSD card.

- **Check Storage:** Go to **Settings > Storage** to view internal storage usage.
- **Expand Storage:** Insert a microSD card into the dedicated slot to increase available storage for photos, videos, and documents.
- **Clear Cache:** Regularly clear app caches to free up space and improve performance (**Settings > Apps & notifications > select app > Storage & cache > Clear cache**).

5.3 Cleaning and Care

To keep your tablet in optimal condition:

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Keep the tablet away from extreme temperatures, direct sunlight, and moisture.



Image: Rear view of the MEDION LIFETAB E10703, featuring the MEDION brand logo.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

Problem	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on. Press and hold the power button for 10-15 seconds.
No Wi-Fi connection	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Restart the tablet.
Apps are crashing or freezing	Clear the app's cache (Settings > Apps & notifications > App info > Storage & cache > Clear cache). Update the app. Reinstall the app.
Slow performance	Close unnecessary background apps. Clear internal storage. Perform a factory reset (Note: This will erase all data. Back up important files first.).

7. TECHNICAL SPECIFICATIONS

Key technical details of the MEDION LIFETAB E10703 Tablet PC:

Feature	Specification
Brand	MEDION
Model	E10703
Display	10-inch Full HD (1920 x 1200 pixels) IPS
Processor	MediaTek MT8766A Quad-Core (up to 2.0 GHz)
RAM	3 GB
Internal Storage	64 GB (expandable via microSD)
Operating System	Android 9.0 Pie
Connectivity	LTE Cat 4, WLAN, Bluetooth, GPS
Rear Camera	5 MP
Dimensions (H x W x D)	0.85 x 24.64 x 17.1 cm
Weight	498 g
Included Components	Tablet, USB Type-C cable, Power Adapter

8. WARRANTY AND SUPPORT

Your MEDION LIFETAB E10703 Tablet PC comes with a standard manufacturer's warranty. For detailed warranty terms, technical support, or service inquiries, please refer to the official MEDION website or contact their customer service directly. Keep your proof of purchase for warranty claims.

For further assistance, visit the official MEDION support page:[MEDION Service & Support](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0899D2BQR>

More documents and user manuals: <https://manuals.plus/>