

[manuals.plus](#) /› [ALLIMITY](#) /› [ALLIMITY RM-ED017 Replacement Remote Control User Manual for Sony Bravia TV Models](#)

ALLIMITY RM-ED017

ALLIMITY RM-ED017 Replacement Remote Control User Manual

For Sony Bravia TV Models

1. INTRODUCTION

This manual provides instructions for the ALLIMITY RM-ED017 replacement remote control, designed for use with various Sony Bravia TV models. This remote control offers full functionality as a direct replacement for your original Sony RM-ED017 remote.

2. COMPATIBLE TV MODELS

The ALLIMITY RM-ED017 remote control is compatible with the following Sony Bravia TV models:

- KDL-19L4000, KDL-19S5700, KDL-19S5730
- KDL-22S5500, KDL-22E5500
- KDL-26P5550, KDL-26L4000, KDL-26S5550
- KDL-32L4000, KDL-32L4000K, KDL-32P3550, KDL-32P3600, KDL-32P5550, KDL-32P5650, KDL-32S5500, KDL-32S5550, KDL-32S5600, KDL-32S5650
- KDL-37P3600, KDL-37P5650, KDL-37S5500, KDL-37S5600, KDL-37S5650
- KDL-40P3600, KDL-40P5650, KDL-40S5500, KDL-40S5600, KDL-40S5650
- KDL-46WE5B

This list includes models such as KDL19S5700, KDL19S5730, KDL22S5500, KDL26P5550, KDL32L4000, KDL32P3550, KDL32P5550, KDL32S5500, KDL32S5600, KDL32S5650, KDL37P5650, KDL37S5600, KDL40P3600, KDL40S5500, KDL40S5650, and others listed in the specifications.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery cover downwards or in the direction indicated by the arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The remote control is ready for use immediately after battery installation. No programming is required for compatible Sony Bravia TV models.





Image 1: Angled view of the ALLIMITY RM-ED017 remote control, showing the general shape and the location of the battery compartment on the back.

4. OPERATING INSTRUCTIONS

This remote control functions identically to the original Sony RM-ED017. Point the remote directly at your TV's infrared receiver for optimal performance.





Image 2: Front view of the ALLIMITY RM-ED017 remote control, displaying all buttons and their labels.

4.1 Button Functions

- **Power (I/O):** Turns the TV on or off. Located at the top right.
- **Digital/Analog:** Switches between digital and analog TV channels.
- **Scene:** Accesses scene selection modes.
- **Audio:** Adjusts audio settings or selects audio tracks.
- **Guide:** Displays the electronic program guide (EPG).
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or interactive services.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.
- **MENU:** Opens the main TV menu.
- **RETURN:** Returns to the previous screen or menu.
- **TOOLS:** Accesses quick settings or tools menu.
- **Number Buttons (0-9):** Directly selects channels or inputs numerical data.
- **+/- (Channel/Program):** Changes TV channels up or down.
- **+/- (Volume):** Adjusts the TV volume up or down.
- **Mute:** Mutes or unmutes the TV sound.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

6.1 Remote Control Not Working

- Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones.
- Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- Remote Sensor:** Confirm the TV's remote sensor is not blocked or dirty.
- TV Power:** Ensure the TV is plugged in and powered on.

6.2 Buttons Unresponsive

- Battery Check:** Low batteries can cause intermittent button response. Replace them.
- Clean Remote:** Dirt or debris under buttons can prevent them from registering. Clean the remote as described in the Maintenance section.

7. SPECIFICATIONS

Brand	ALLIMITY
Model Number	RM-ED017 (QH-RM-ED017-O)
Color	Black
Connectivity Technology	Infrared
Special Feature	Universal (for specified Sony Bravia models)
Maximum Range	10 Meters
Number of Supported Devices	1 (controls one TV)

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms or dedicated support channels for this product is not available in the provided data. Please refer to the retailer or manufacturer's website for any available warranty details or customer support contacts.

