

Glem AN965GI

Glem AN965GI Gas Cooker with Gas Oven User Manual

Model: AN965GI

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Glem AN965GI gas cooker with gas oven. Please read these instructions carefully before installation, operation, or maintenance. Keep this manual for future reference.

2. SAFETY INFORMATION

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

- **Gas Safety:** Ensure proper ventilation. Do not store or use flammable materials near the appliance. In case of a gas leak, turn off the gas supply, open windows, and do not operate electrical switches.
- **Electrical Safety:** Ensure the appliance is properly earthed. Do not use adapters or extension cords. Disconnect from power before cleaning or maintenance.
- **Child Safety:** Keep children away from the appliance during operation. The surfaces can become hot. Do not allow children to play with the controls.
- **Hot Surfaces:** The hob, oven, and surrounding areas become hot during use. Use oven mitts and exercise caution.
- **Safe Touch Door:** This appliance features a Safe Touch oven door, designed to keep the outer glass cooler, but caution is still advised.

3. PRODUCT OVERVIEW

The Glem AN965GI is a freestanding gas cooker featuring a 5-burner gas hob and a spacious gas oven, finished in stainless steel. It is designed for efficient and reliable cooking.



Figure 1: Front view of the Glem AN965GI gas cooker. This image displays the stainless steel finish, the five gas burners on the hob, the control knobs for both the hob and oven, and the large glass door of the gas oven below.

Key Features:

- **Hob:** 5 gas burners, including one central triple crown burner for rapid heating.
- **Oven:** 104-liter gas oven with grill function and internal light.
- **Controls:** Front-mounted control knobs with under-knob ignition for burners.
- **Design:** Stainless steel finish with a glass lid for the hob.
- **Safety:** Equipped with safety valves for all burners, Safe Touch oven door, and tangential cooling system.
- **Convenience:** Adjustable feet and a warming drawer.

4. INSTALLATION AND SETUP

IMPORTANT: Installation of this appliance must be carried out by a qualified and authorized technician in accordance with local regulations and standards.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Report any damage to your retailer immediately.

4.2 Positioning

Place the cooker on a flat, stable surface. Ensure adequate clearance from adjacent walls and cabinets as specified in the installation guide provided with the appliance. The appliance features adjustable feet for leveling.

4.3 Gas Connection

The gas connection must be performed by a qualified gas fitter. Ensure the gas supply type (natural gas or LPG) matches the appliance's specifications. Use appropriate flexible hoses and safety valves.

4.4 Electrical Connection

Connect the appliance to a properly earthed electrical outlet. Ensure the voltage and frequency match the appliance's rating plate. The electrical connection should also be performed by a qualified electrician.

5. OPERATING INSTRUCTIONS

5.1 Using the Gas Hob

1. **Selecting a Burner:** Place a suitable pan on the desired burner grate.
2. **Igniting a Burner:** Push and turn the corresponding control knob counter-clockwise to the maximum flame setting. The integrated ignition system will spark. Hold the knob in for a few seconds until the flame is stable.
3. **Adjusting Flame:** Once ignited, adjust the flame size by turning the knob between the maximum and minimum settings.
4. **Turning Off:** Turn the knob clockwise to the 'OFF' position.

NOTE: All burners are equipped with safety valves that automatically cut off the gas supply if the flame accidentally extinguishes.

5.2 Using the Gas Oven

1. **Preheating:** Open the oven door slightly. Push and turn the oven control knob to the desired temperature. Hold the knob in and press the ignition button (if separate) or wait for the integrated ignition to spark. Once ignited, hold the knob for a few seconds to activate the safety device.
2. **Temperature Control:** The oven temperature is regulated by the thermostat. Refer to the markings on the control panel for temperature settings.
3. **Oven Light:** The oven is equipped with an internal light, typically controlled by a separate switch or integrated with the oven knob.
4. **Grill Function:** To use the gas grill, select the grill setting on the oven control knob. Always operate the grill with the oven door slightly ajar to ensure proper ventilation.
5. **Turning Off:** Turn the oven control knob to the 'OFF' position.

6. MAINTENANCE AND CLEANING

WARNING: Always ensure the appliance is switched off and cooled down before cleaning or performing any maintenance.

6.1 General Cleaning

- **Exterior:** Clean stainless steel surfaces with a soft cloth and a non-abrasive stainless steel cleaner. Avoid harsh chemicals or abrasive pads.
- **Glass Lid:** Clean the glass lid with a soft cloth and glass cleaner.
- **Control Panel:** Wipe with a damp cloth and mild detergent. Do not use excessive water.

6.2 Hob Cleaning

- **Burner Caps and Grates:** Remove these components and wash them in warm soapy water. Dry thoroughly before replacing.
- **Spillages:** Clean up spills immediately to prevent them from baking onto the surface.

6.3 Oven Cleaning

- **Interior:** Use a damp cloth and a mild oven cleaner suitable for gas ovens. Follow the cleaner's instructions.
- **Oven Racks:** Remove and wash in warm soapy water.

7. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply, ignition electrode dirty, burner cap not correctly placed.	Check gas supply. Clean electrode. Re-position burner cap correctly.
Oven not heating	Gas supply off, oven igniter faulty, thermostat setting incorrect.	Check gas supply. Ensure oven knob is held long enough during ignition. Verify temperature setting.
Uneven cooking in oven	Oven not preheated, food placed incorrectly, oven not level.	Preheat oven fully. Ensure proper air circulation around food. Level the appliance.
Gas smell	Gas leak.	Immediately turn off gas supply, open windows, do not operate electrical switches, and contact a qualified technician.

8. SPECIFICATIONS

- **Model:** AN965GI
- **Type:** Freestanding Gas Cooker with Gas Oven
- **Hob:** 5 Gas Burners (including 1 central triple crown burner)
- **Oven Capacity:** 104 liters
- **Oven Type:** Gas Oven with Grill
- **Energy Class:** A
- **Material:** Stainless Steel
- **Controls:** Rotary Knobs
- **Dimensions (W x D x H):** Approximately 90 cm x 60 cm x 85-90 cm (Height with lid closed). Total height with lid open is approximately 150 cm.
- **Safety Features:** Safety valves on all burners, Safe Touch oven door, Tangential cooling system.
- **Additional Features:** Glass lid, oven light, warming drawer, adjustable feet.

9. WARRANTY AND SUPPORT

Your Glem AN965GI cooker is covered by a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions. For technical support, spare parts, or service requests, please contact your retailer or visit the official Glem website. Keep your purchase receipt as proof of purchase for warranty claims.