

## LG 24MP88HV-S

# LG 24MP88HV-S Full HD IPS Monitor User Manual

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your LG 24MP88HV-S Full HD IPS Monitor. Please read this manual thoroughly before operating your device to ensure proper use and to prevent damage. Keep this manual for future reference.

## SAFETY INFORMATION

---

Observe the following safety precautions to ensure safe operation and to prolong the life of your monitor:

- Do not expose the monitor to rain or moisture.
- Do not open the monitor casing. Refer all servicing to qualified service personnel.
- Ensure proper ventilation around the monitor. Do not block any ventilation openings.
- Use only the power adapter supplied with the monitor.
- Place the monitor on a stable, level surface to prevent it from falling.

## PACKAGE CONTENTS

---

Verify that all items are present in your product box:

- LG 24MP88HV-S Monitor
- Stand Base
- Stand Neck
- Power Adapter
- Power Cord
- HDMI Cable
- User Manual (this document)
- CD (Software/Drivers, if applicable)

## SETUP

---

## 1. Assembling the Stand

Carefully place the monitor face down on a soft, clean surface to prevent scratches. Attach the stand neck to the monitor, then secure the stand base to the neck using the provided screws.



Image: Front view of the LG 24MP88HV-S monitor with its silver stand fully assembled, displaying a vibrant landscape image.

## 2. Connecting the Monitor

Connect the power adapter to the monitor's power input port and then to a power outlet. Use the provided HDMI cable to connect your computer to one of the monitor's HDMI ports. Alternatively, you can use a VGA cable if your computer supports it.

- **Power Input:** Connect the power adapter (Input: 100-240Vac, 50/60Hz).
- **HDMI Ports (x2):** For digital video and audio input.
- **VGA Port (x1):** For analog video input.
- **Audio-In Port (x1):** For external audio input.
- **Audio-Out Port (x1):** For connecting external speakers or audio systems.
- **Headphone Port (x1):** For connecting headphones.



Image: Rear view of the LG 24MP88HV-S monitor highlighting its various connectivity ports including HDMI, VGA, and audio jacks. Also visible are icons representing features like IPS, Wide Viewing Angle, sRGB 99%, Color Calibrated, Stereo Speaker, MAXXAUDIO, 2x HDMI, Black Stabilizer, Flicker Safe, Reader Mode, and Game Mode.

### 3. Wall Mounting (Optional)

This monitor supports wall mounting. Refer to the wall mount kit instructions for proper installation. Ensure the wall mount is compatible with the monitor's VESA mounting pattern. Always consult a professional for wall mounting to ensure safety and proper installation.

## OPERATING THE MONITOR

### 1. Powering On/Off

Press the power button, typically located on the bottom center of the monitor, to turn the monitor on or off.

### 2. On-Screen Control (OSC)

The monitor features On-Screen Control with Screen Split 2.0, allowing you to easily adjust monitor settings using your mouse. Install the On-Screen Control software from the provided CD or download it from LG's official website for full functionality.

### 3. Picture Modes

Select from various picture modes to optimize your viewing experience. These modes can be accessed via the On-Screen Control:

- **Custom:** Allows user-defined settings for brightness, contrast, and color.
- **Reader1/Reader2:** Reduces blue light emission for comfortable reading and reduced eye strain.
- **Photo:** Optimized color and brightness settings for viewing photographs.
- **Cinema:** Enhances visual settings for an immersive movie-watching experience.
- **Color Weakness:** Adjusts color settings to assist users with color vision deficiency.
- **Game:** Optimizes settings for gaming, including features like Black Stabilizer for improved visibility in dark scenes.

### 4. Display Features

- **Borderless Design:** Enjoy an immersive viewing experience with the 4-side slim bezel, minimizing distractions.



Image: The LG 24MP88HV-S monitor screen with arrows pointing to all four sides, illustrating its "4-side-slim Bezel" and "Narrow Bezel" design for an expansive view.

- **IPS Panel:** Provides wide viewing angles (178 degrees horizontally and vertically) and consistent color reproduction from various positions.
- **Flicker Safe:** Reduces screen flicker to minimize eye strain during prolonged use.
- **MAXXAUDIO Stereo Speakers:** Integrated 10 Watt stereo speakers (2x 5W) deliver clear and rich audio without the need for external speakers.

## MAINTENANCE

### Cleaning the Monitor

Always unplug the monitor from the power outlet before cleaning. Use a soft, lint-free cloth lightly dampened with water or a mild, non-abrasive cleaner specifically designed for electronic screens. Do not spray cleaner

directly onto the screen or into any openings.

## General Care

- Avoid placing heavy objects on the monitor or its cables.
- Keep the monitor away from direct sunlight, heat sources, and excessive dust.
- Do not block ventilation openings on the monitor.

## TROUBLESHOOTING

---

If you encounter issues with your monitor, refer to the following common problems and solutions:

### No Power

- Ensure the power cord is securely connected to the monitor and the power outlet.
- Check if the power outlet is functioning correctly by plugging in another device.
- Verify the power adapter is properly connected to both the monitor and the power cord.

### No Signal / Blank Screen

- Check if the video cable (HDMI/VGA) is securely connected to both the monitor and the computer.
- Ensure the correct input source is selected on the monitor using the On-Screen Control.
- Restart your computer.
- Try connecting the monitor to a different video output port on your computer or a different computer to isolate the issue.

### Image Issues (Distorted, Flickering, Incorrect Colors)

- Adjust the resolution and refresh rate settings on your computer to match the monitor's optimal settings (1920 x 1080 at 60 Hz).
- Check for loose video cable connections.
- Try a different video cable to rule out cable defects.
- Reset the monitor to factory default settings via the On-Screen Control.

### No Sound from Speakers

- Ensure the volume on the monitor and your computer is not muted and is turned up.
- If using HDMI, ensure your computer's audio output is set to the monitor.
- If using the Audio-In port, ensure the audio cable is connected and the source device is playing audio.
- Check the audio settings in the On-Screen Control menu.

## SPECIFICATIONS

---

Feature	Detail
Brand	LG
Model Name	24MP88HV
Screen Size	24 Inches (60.45 cm)

Feature	Detail
Resolution	Full HD 1920 x 1080
Display Type	IPS
Aspect Ratio	16:9
Refresh Rate	60 Hz
Response Time	5 Milliseconds
Brightness (Typical)	250 cd/m <sup>2</sup>
Contrast Ratio	1000:1
Viewing Angle	178 Degrees (Horizontal/Vertical)
Connectivity	2x HDMI, 1x VGA, 1x Audio-In, 1x Audio-Out, 1x Headphone Port
Speakers	2x 10 Watt Stereo Speakers (MAXXAUDIO)
Power Input	100-240Vac, 50/60Hz
Normal On (EPA)	16W
Mounting Type	Wall Mount (VESA compatible)

## WARRANTY INFORMATION

---

For detailed warranty information, please refer to the warranty card included with your product or visit the official LG website. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

---

If you encounter any issues not covered in this manual, or require further assistance, please contact LG customer support. You can find contact information and additional resources on the official LG website or in the support section of your product documentation.

**LG Official Website:** [www.lg.com](http://www.lg.com)