

[Manuals.plus](#) /

› [Home Centre](#) /

› Home Centre Korobka-Arezzo Blue Printed Stainless Steel Lunch Box Set - User Manual

Home Centre KOROBKA-AREZZO-3

Home Centre Korobka-Arezzo Blue Printed Stainless Steel Lunch Box Set - User Manual

Model: KOROBKA-AREZZO-3

PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your Home Centre Korobka-Arezzo Blue Printed Stainless Steel Lunch Box Set. Please read it thoroughly before first use and retain it for future reference. The Home Centre Korobka-Arezzo lunch box set is designed for convenient and fresh food transport. It features a durable, low-maintenance, and corrosion-resistant stainless steel interior with vacuum insulation for improved heat retention. The exterior is made of polypropylene with a blue printed design. Its compact design helps save space, making it ideal for school or office use.



Image: The Home Centre Korobka-Arezzo Blue Printed Stainless Steel Lunch Box Set, showing all three tiers stacked with the lid on top.

PACKAGE CONTENTS

Your Home Centre Korobka-Arezzo Lunch Box Set includes the following components:

- Three Tier Lunch Box (Stainless Steel containers with polypropylene exterior)
- One Lid with Snap-Clip On closure



Image: The Home Centre Korobka-Arezzo Lunch Box Set with its three tiers separated, showing the individual containers and the lid.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Initial Cleaning:** Before first use, wash all parts of the lunch box set with warm, soapy water. Rinse thoroughly and dry completely.
3. **Assembly:**
 - Place the desired food items into each of the three stainless steel containers.
 - Stack the containers one on top of the other.
 - Secure the lid firmly on the top container, ensuring the snap-clip mechanism is engaged.



Image: The Home Centre Korobka-Arezzo Lunch Box Set fully assembled, showing the integrated handle on the lid for easy carrying.

OPERATING INSTRUCTIONS

The Korobka-Arezzo lunch box is designed for carrying various food items, including chapati, pizza, and other take-out meals. Its vacuum insulated interiors help maintain food temperature.

- **Filling:** Fill containers with food, leaving a small space at the top to prevent spills and allow for lid closure.
- **Sealing:** Ensure the lid is properly aligned and snapped into place to maintain insulation and prevent leaks.
- **Transport:** The compact design allows for easy storage in bags. Use the integrated handle for convenient carrying.

MAINTENANCE AND CARE

Proper care will extend the life of your lunch box set.

- **Cleaning:**

- **Hand Wash Only:** It is recommended to hand wash all components with mild dish soap and warm water.
 - **Dishwasher Safe:** While the product is listed as dishwasher safe, hand washing is preferred to preserve the exterior print and overall longevity.
 - Do not use abrasive cleaners, scrubbers, or bleach, as these can damage the finish.
 - Rinse thoroughly after washing to remove all soap residue.
 - Dry all parts completely before storing to prevent water spots or odors.
- **Storage:** Store the lunch box set in a clean, dry place when not in use.
 - **Avoid Extreme Temperatures:** Do not place the lunch box in a microwave, oven, or freezer.



Image: A close-up view of the lid's interior, showing the sealing mechanism, and the rim of one of the stainless steel containers, highlighting the material and construction.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lid does not seal properly.	Food overfilled; lid misaligned; sealing gasket dirty or damaged.	Do not overfill containers. Ensure lid is correctly aligned before closing. Clean or inspect the sealing gasket for damage.
Food does not stay warm/cold.	Lid not sealed correctly; extreme external temperatures; insufficient pre-heating/cooling of containers.	Ensure lid is tightly sealed. For best results, pre-heat containers with hot water or pre-cool with cold water for 5-10 minutes before adding food.
Exterior print fading/peeling.	Harsh detergents; abrasive cleaning; dishwasher use (despite being listed as safe, hand wash is recommended for print longevity).	Use mild dish soap and hand wash only. Avoid abrasive sponges.

SPECIFICATIONS

Feature	Detail
Model Number	KOROBKA-AREZZO-3
Brand	Home Centre
Material	Stainless Steel (interior), Polypropylene (exterior)
Capacity	Total 1200 Milliliters (630ml + 300ml + 300ml)
Dimensions (LxWxH)	11 x 11 x 24 Centimeters
Item Weight	300 Grams
Color	Blue
Special Feature	Insulated
Closure Type	Snap-Clip On
BPA Free	Yes
Product Care	Hand Wash Only (Dishwasher Safe listed, but hand wash recommended)



Image: The Home Centre Korobka-Arezzo Lunch Box Set with visual indicators for its height (24 cm) and diameter (11 cm).

WARRANTY AND SUPPORT

Specific warranty information for the Home Centre Korobka-Arezzo Blue Printed Stainless Steel Lunch Box Set is not provided in the product details. For warranty claims or technical support, please contact Home Centre customer service directly.

You may find contact information on the official Home Centre website or through your purchase receipt.

Manufacturer: Home Centre, Lifestyle Int Pvt Ltd.77 Degree Town Centre.Building No.3. West Wing.Off HAL Airport Road. Yamlur.Bangalore-560037

© 2024 Home Centre. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.