

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beko](#) /
- › [Beko MC 5056 I ExpertChef Multi-Purpose Cooker User Manual](#)

Beko MC 5056 I ExpertChef

Beko MC 5056 I ExpertChef Multi-Purpose Cooker User Manual

Model: MC 5056 I ExpertChef

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Beko MC 5056 I ExpertChef Multi-Purpose Cooker. Failure to follow these safety guidelines may result in injury or damage to the appliance.

- **Hot Steam Warning:** During rapid steam release, the steam is extremely hot. Do not approach or touch the steam outlet in any way.
- **Valve Safety:** Do not touch the steam release valve during operation or while steam is being released.
- **Lid Safety:** Never attempt to open the lid until all steam inside the appliance has been completely released and the pressure indicator has dropped.
- Always ensure the appliance is placed on a stable, level, and heat-resistant surface.
- Do not immerse the main unit in water or any other liquid.
- Keep the appliance out of reach of children.

PRODUCT OVERVIEW

The Beko MC 5056 I ExpertChef is a versatile multi-purpose cooker designed to simplify your cooking process. It features a programmable interface and a generous 5.5-liter capacity, suitable for various cooking needs.



Image: The Beko MC 5056 I ExpertChef Multi-Purpose Cooker with its lid securely in place, showcasing its sleek design and control panel.

Key Features:

- **Capacity:** 5.5 Liters
- **Power:** 1100 Watts
- **Control Method:** Touch Panel with Push Buttons
- **Operating Mode:** Automatic, Programmable
- **Material:** Metal construction
- **Color:** Black

COMPONENTS

Your multi-purpose cooker consists of several main parts:

- **Main Unit:** The outer housing containing the heating element and control panel.
- **Inner Pot:** The removable non-stick cooking pot where food is placed.
- **Lid:** The removable lid with a sealing gasket and steam release valve.



Image: The Beko MC 5056 I ExpertChef Multi-Purpose Cooker with its lid removed, clearly showing the inner cooking pot and the main unit.

BEFORE FIRST USE

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wash the inner pot and lid thoroughly with warm, soapy water. Rinse and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the cooker on a stable, level, heat-resistant, and dry surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the appliance.

OPERATION

This section provides general guidance for operating your multi-purpose cooker. Refer to specific recipes or program guides for detailed cooking instructions.

1. **Prepare Ingredients:** Place your desired ingredients and liquids into the inner pot. Do not fill above the maximum fill line.
2. **Insert Inner Pot:** Place the inner pot into the main unit, ensuring it is seated correctly.
3. **Secure Lid:** Place the lid on the cooker and rotate it clockwise until it locks into position. Ensure the steam release valve is set to the correct position (e.g., 'Sealing' for pressure cooking).
4. **Select Program:** Plug in the cooker. Use the touch control panel and push buttons to select your desired cooking program (e.g., Rice, Soup, Meat, Steam, Sauté). Adjust cooking time and pressure level if applicable.
5. **Start Cooking:** Press the 'Start' button. The cooker will begin to preheat and then cook according to the selected program.
6. **Pressure Release:** Once cooking is complete, the cooker will typically switch to a 'Keep Warm' mode. To release pressure, you can either allow it to release naturally (Natural Release) or manually turn the steam release valve to the 'Venting' position (Quick Release). Always exercise extreme caution during quick release due to hot steam.
7. **Open Lid:** After all pressure has been released and the float valve has dropped, carefully open the lid by rotating it counter-clockwise and lifting it away from your face.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your cooker.

- **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Inner Pot and Lid:** Remove the inner pot and lid. Wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storage. The sealing gasket can be removed for cleaning.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Never immerse the main unit in water.
- **Storage:** Store the cooker in a dry place, ensuring all parts are clean and dry.

TROUBLESHOOTING

If you encounter issues with your Beko MC 5056 I ExpertChef, refer to the following common solutions:

- **Cooker Not Turning On:** Ensure the power cord is securely plugged into both the cooker and a working electrical outlet.
- **Steam Leaking from Lid:** Check if the lid is properly sealed and locked. Ensure the sealing gasket is correctly installed and free from food debris or damage.
- **Food Not Cooking Properly:** Verify that the correct cooking program and time have been selected. Ensure sufficient liquid is added for pressure cooking.
- **Error Code E13:** This error code is often associated with a lid-related issue. Check the lid's sealing mechanism and ensure it is clean and undamaged. If the problem persists, contact customer support.
- **Pressure Not Building:** Ensure the steam release valve is set to the 'Sealing' position. Check the sealing gasket for proper placement and damage.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact Beko Customer Support.

TECHNICAL SPECIFICATIONS

Specification	Detail
Brand	Beko
Model	MC 5056 I ExpertChef
Capacity	5.5 Liters
Electric Power	1100 Watts
Material	Metal
Color	Black
Control Method	Touch
Operating Mode	Automatic
Control Type	Push Button

CUSTOMER SUPPORT AND WARRANTY

For technical assistance, warranty information, or service inquiries, please contact Beko customer support. Refer to your purchase documentation for specific warranty terms and conditions applicable to your region.

You can typically find contact information for Beko customer service on the official Beko website or within the packaging materials that came with your product.