

manuals.plus /

› [CHEREKI](#) /

› [CHEREKI Digital LED Alarm Clock with Temperature Display, Dual Alarms, Snooze, and 10 Melodies - Model 8808 Instruction Manual](#)

CHEREKI 8808

CHEREKI Digital LED Alarm Clock - Model 8808 Instruction Manual

Your guide to setting up and operating your new alarm clock.

1. INTRODUCTION

Thank you for choosing the CHEREKI Digital LED Alarm Clock, Model 8808. This device combines a clear LED time display with temperature monitoring, dual alarms, snooze functionality, and a selection of melodies. This manual provides detailed instructions to help you maximize your product experience.



Figure 1: Front view of the CHEREKI Digital LED Alarm Clock displaying time and temperature.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the clock's features and controls.



Figure 2: Overview of the alarm clock's main functions.



Figure 3: Rear view of the alarm clock, highlighting control buttons and ports.

3. SETUP

3.1 Power Supply

The alarm clock offers two power modes:

1. **USB Powered Mode:** Connect the included USB cable to a 5V/1A or 5V/2A adapter (not included) or a USB port. In this mode, the LED display remains continuously on.
2. **Battery Powered Mode:** The clock has a built-in rechargeable battery. When fully charged and disconnected from USB, the LED display will automatically turn off after 6 seconds to conserve power. To activate the display in battery mode, use the voice control function or press any button.

3.2 Initial Setup / Reset

If the display shows scrambled code or errors, use a thin pin to press the RESET button located on the back of the unit. This will restore the clock to its normal operating state.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

To set the current time:

1. Press and hold the 'TIME SET' button on the back of the clock. The hour digits will begin to flash.
2. Use the 'UP' and 'DOWN' buttons to adjust the hour.
3. Press 'TIME SET' again to move to the minute setting. Use 'UP' and 'DOWN' to adjust the minutes.
4. Press 'TIME SET' one more time to confirm and exit time setting mode.

Video 1: Demonstrates how to set the time on the alarm clock.

4.2 Setting Alarms

The clock features two independent alarms (Alarm 1 and Alarm 2).

1. To set Alarm 1, press and hold the 'ALARM SET' button. The Alarm 1 hour digits will flash.
2. Use the 'UP' and 'DOWN' buttons to adjust the alarm hour.
3. Press 'ALARM SET' again to move to the Alarm 1 minute setting. Adjust minutes using 'UP' and 'DOWN'.
4. Press 'ALARM SET' to confirm Alarm 1. Repeat steps for Alarm 2 if desired.
5. To activate or deactivate an alarm, use the dedicated 'ALARM1 ON/OFF' and 'ALARM2 ON/OFF' switches on the back of the clock.

Video 2: Illustrates the process of setting both Alarm 1 and Alarm 2.

Dual Alarms with 5-Minute Snooze Time



Figure 4: Example of dual alarm settings for different wake-up times.

4.3 Adjusting Alarm Volume and Melodies

The clock offers 3 volume levels and 10 different alarm melodies.

1. While in alarm setting mode (after setting hours/minutes), press the 'VOLUME' button to cycle through the 3 volume levels (L01, L02, L03).
2. To change the melody, press the 'DOWN' button while the alarm is ringing or during alarm setup to cycle through the 10 available sounds.

Video 3: Guide on adjusting the alarm volume levels.



Figure 5: Visual representation of the 10 available alarm melodies and volume settings.

4.4 Snooze Function and Stopping Alarms

When an alarm sounds:

1. To activate the 5-minute snooze, press the 'SNOOZE/LIGHT' button on the top of the clock. The alarm will pause and sound again after 5 minutes.
2. To stop the alarm completely, press any button on the clock **except** the 'SNOOZE/LIGHT' button.

Video 4: Instructions on how to use the snooze function and stop an active alarm.

4.5 Brightness Adjustment

The clock offers both manual and automatic brightness adjustment.

Manual Brightness Adjustment:

Press the 'SNOOZE/LIGHT' button on the top of the clock to cycle through 4 levels of brightness (25%, 50%, 75%, 100%).

Video 5: Demonstrates how to manually adjust the display brightness.

4 Levels of Brightness Adjustable

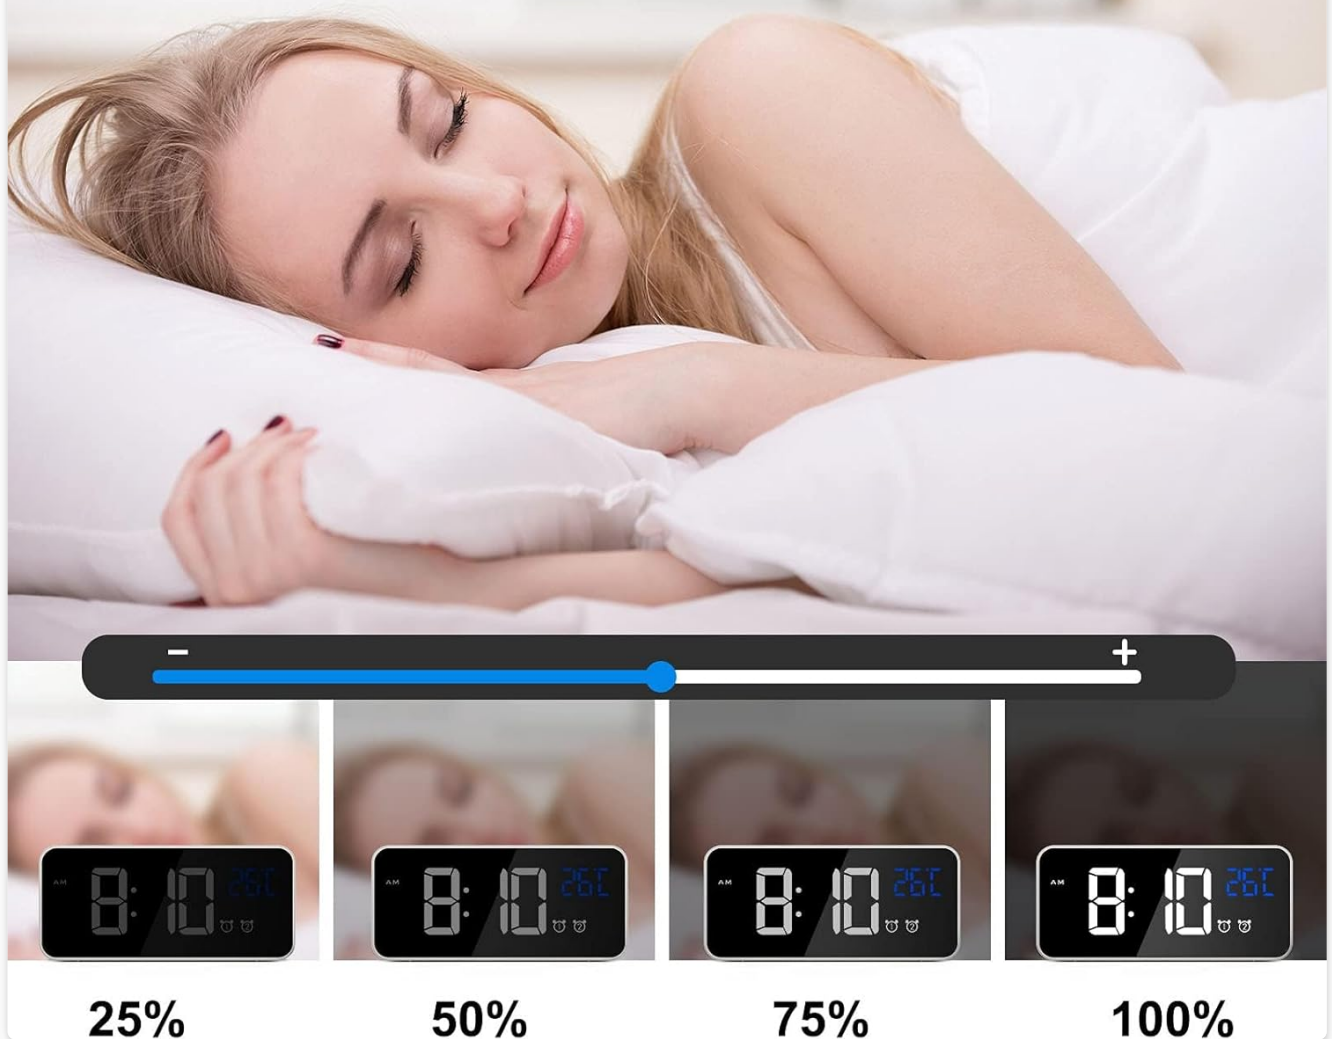


Figure 6: Comparison of the four adjustable brightness levels.

Automatic Brightness Adjustment:

When powered via USB, the clock automatically adjusts brightness based on the time of day:

- 7:00 AM - 7:00 PM: High brightness.
- 7:00 PM - 12:00 AM: Medium brightness.
- 12:00 AM - 7:00 AM: Low brightness.

Video 6: Explanation of the automatic brightness adjustment feature.

4.6 Voice Activated Display (Battery Mode)

In battery mode, the display will turn off after 6 seconds. To reactivate it, make a sound louder than 90 dB (e.g., a clap, tap on the table, or voice). Alternatively, press any button to turn the display on.



Figure 7: How the sound-activated display works in battery mode versus continuous display when plugged in.

4.7 Temperature Display

The clock displays the ambient temperature. To switch between Celsius (°C) and Fahrenheit (°F), press the 'DOWN' button once.

4.8 12/24 Hour Format

To switch between 12-hour and 24-hour time formats, press the 'UP' button once.

4.9 Memory Function

The clock retains time and alarm settings even when the battery is depleted or the unit is turned off, thanks to its internal memory function. No need to reset after a power interruption.

Memory Function

No need to reset the clock when the battery is restored
or the clock is turned on again

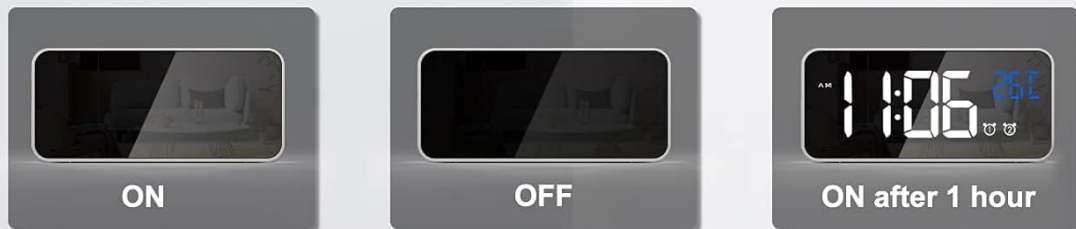


Figure 8: The clock's memory function ensures settings are saved.

5. MAINTENANCE

- Clean the clock with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Keep the clock away from heat sources, high humidity, and direct sunlight.
- If not in use for an extended period, turn off the power switch to preserve battery life.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank in battery mode.	Power-saving feature activated.	Make a sound (e.g., clap) or press any button to activate the display. Connect to USB for continuous display.

Problem	Possible Cause	Solution
Display shows scrambled code or error.	Internal error.	Press the 'RESET' button on the back of the clock using a thin pin.
Alarm not sounding.	Alarm is deactivated or volume is too low.	Check the 'ALARM ON/OFF' switch for the respective alarm. Adjust alarm volume as described in section 4.3.
Clock not charging or holding charge.	Faulty cable/adaptor or battery issue.	Ensure the USB cable and adapter are working correctly. If issues persist, contact customer support.

7. SPECIFICATIONS

- **Brand:** CHEREEKI
- **Model Number:** 8808
- **Color:** Silver
- **Material:** Plastic
- **Dimensions (L x W x H):** 14.5 x 3.81 x 5.08 cm (5.71 x 1.5 x 2 inches)
- **Item Weight:** 158 grams (0.35 lbs)
- **Power Source:** Battery Powered (1 Lithium-polymer battery included) / USB Powered
- **Display Type:** Digital LED
- **Special Features:** Temperature Display, Dual Alarms, Charging Port, Snooze, Voice Activation, Adjustable Brightness, 10 Melodies.

8. WARRANTY AND SUPPORT

For any questions regarding your CHEREEKI Digital LED Alarm Clock, please do not hesitate to contact our customer service. We are committed to providing attentive after-sales service.



© 2023 CHEREEKI. All rights reserved.

