

KOOC KSC200P

KOOC Small Slow Cooker User Manual

Model: KSC200P | Brand: KOOC

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your KOOC Slow Cooker. Failure to follow these safety guidelines may result in fire, electric shock, serious injury, or property damage.

- Always operate the slow cooker on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or oven mitts.
- To protect against electrical shock, do not immerse the cord, plug, or base unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

2. PRODUCT OVERVIEW

The KOOC 2-Quart Small Slow Cooker is designed for convenience and efficiency, perfect for individuals or small families. It features a durable stainless steel exterior and a removable ceramic pot for easy cooking and cleaning.

2.1 Key Components

- **Main Unit:** Houses the heating element and control knob.
- **Removable Ceramic Pot:** The cooking vessel, made from no-toxin, heat-resistant ceramic.

- **Transparent Glass Lid:** Allows you to monitor cooking progress without lifting the lid.
- **Control Knob:** For selecting temperature settings (Off, Low, High, Warm).
- **Indicator Light:** Illuminates when the unit is powered on and operating.
- **Heat-Resistant Handles:** For safe handling of the unit.

2.2 Features

- **2-Quart Capacity:** Ideal for 2 to 4 people, perfect for small meals, dips, or side dishes.
- **Three Temperature Settings:** Cook on Low or High, then switch to Warm to keep food ready to serve.
- **Upgraded Ceramic Pot:** No-toxin, heat-resistant ceramic coating ensures food safety and durability.
- **Easy Clean-up:** Removable ceramic pot is dishwasher safe. Includes 5 free slow cooker liners for added convenience.
- **Nutrient Loss Reduction:** Low-power operation helps maintain food nutrients.



Figure 2.1: The KOOC 2-Quart Slow Cooker, available in multiple colors, shown with included liners.

2-Quart Capacity Best for Singles & Couples

2 QT
Ceramic Vessel

=



2 Servings
of meat stew



2 Servings
of soup



5 Servings
of sauce

Figure 2.2: Detail of the control knob with Off, Low, High, and Warm settings.

2.3 Official Product Video

Your browser does not support the video tag.

Video 2.1: An official overview of the KOOC Small Slow Cooker, highlighting its features and ease of use.

3. SETUP

3.1 Before First Use

1. Unpack the slow cooker and all its components. Remove any packaging materials, stickers, or labels.
2. Wash the removable ceramic pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely. The ceramic pot is dishwasher safe.
3. Wipe the exterior of the base unit with a soft, damp cloth. Do not immerse the base unit in water.
4. Ensure the unit is completely dry before plugging it in.

3.2 Assembly and Placement

1. Place the base unit on a flat, stable, and heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
2. Carefully place the clean ceramic pot into the base unit.

3. If using a slow cooker liner, place it inside the ceramic pot before adding ingredients.

Bonus Liners Save Your Hassle of Clean

STEP 1

Put the liner and then the material in the slow cooker. Don't stir it up with something sharp.



STEP 2

Let the cooker work for you. We use BPA-free and FDA compliant material you can completely rely on.



STEP 3

Simply remove the liner from your slow cooker and completely liberate your hands after meals.



Figure 3.1: Instructions for using the included slow cooker liners to simplify cleanup.

4. OPERATING INSTRUCTIONS

4.1 Cooking with Your Slow Cooker

1. Prepare your ingredients and place them into the ceramic pot. Do not overfill; ensure there is at least 1 inch of space from the top rim.
2. Place the glass lid securely on the ceramic pot.
3. Plug the power cord into a standard 120V AC electrical outlet.
4. Turn the control knob to your desired setting:
 - **LOW:** For slow, gentle cooking over a longer period (e.g., 6-8 hours). Ideal for tenderizing meats.
 - **HIGH:** For faster cooking (e.g., 4-6 hours). Suitable for most recipes.
 - **WARM:** To keep cooked food at a serving temperature. Do not use the WARM setting for cooking.
5. The indicator light will illuminate when a setting is selected, indicating the unit is powered on.
6. Once cooking is complete, turn the control knob to the "OFF" position and unplug the slow cooker from the outlet.

4.2 Cooking Tips

- Avoid lifting the lid frequently during cooking, as this releases heat and extends cooking time.
- For best results, ensure the ceramic pot is at least half full.
- Root vegetables (like carrots and potatoes) cook slower than meat. Cut them into smaller, uniform pieces and place them at the bottom of the pot.
- Dairy products (like cheese or milk) should be added during the last 30 minutes of cooking to prevent curdling.

5. MAINTENANCE AND CLEANING

5.1 Cleaning Instructions

Always unplug the slow cooker and allow it to cool completely before cleaning.

- **Ceramic Pot and Glass Lid:** These parts are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry completely. For stubborn food residue, soak the pot in warm water before cleaning.
- **Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish. Never immerse the base unit in water or any other liquid.
- **Slow Cooker Liners:** If used, simply remove the liner with food residue and discard. This significantly reduces cleanup time for the ceramic pot.

Low Heating Maintains The Nutrition

Slow cooker

Slow Stewing by Low Temperature

Delicious and healthy

Operate with Low Power

Cook Safely without
keeping eyes on

Classic Knob

Simple operation

Prepare in Advance

Cooking and working
simultaneously



V.S.
Healthier

V.S.
Safer

V.S.
Easier

V.S.
Longer

Pressure cooker

Boiling by High Temperature

Nutrition Lost

Operate with High Pressure

Potential risk of explosion

Multiple Settings

Complex process

Fast Cooking

No waiting



Figure 5.1: The removable ceramic pot is dishwasher safe for convenient cleaning.

5.2 Storage

Ensure all parts are clean and dry before storing. Store the slow cooker in a cool, dry place. You can store the lid inverted on the ceramic pot to save space.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Slow cooker not turning on.	Not plugged in; power outlet issue; control knob not set.	Ensure unit is securely plugged into a working outlet. Turn the control knob to LOW, HIGH, or WARM.
Food not cooking or cooking too slowly.	Lid not sealed properly; insufficient liquid; incorrect setting.	Ensure lid is seated firmly. Add more liquid if necessary. Verify correct temperature setting (LOW or HIGH). Avoid lifting the lid frequently.
Food is burning or overcooking.	Too little liquid; incorrect setting; cooking for too long.	Ensure adequate liquid for the recipe. Adjust setting from HIGH to LOW if cooking too fast. Reduce cooking time.
Ceramic pot has cracks or damage.	Impact damage; thermal shock.	Discontinue use immediately. Contact customer support for a replacement. Avoid extreme temperature changes.

7. SPECIFICATIONS

Feature	Detail
Brand	KOOC
Model Number	KSC200P
Capacity	2 Quarts
Color	Pink
Material	Stainless Steel (exterior), Ceramic (pot)
Product Dimensions	1"D x 1"W x 1"H
Wattage	50 watts
Voltage	120V
Control Method	Knob (Mechanical)
Number of Settings	3 (Low, High, Warm)
Dishwasher Safe	Yes (Ceramic Pot & Lid)
Item Weight	5.19 pounds
UPC	782932825714

8. WARRANTY AND SUPPORT

KOOC stands behind the quality of its products. Your KOOC Slow Cooker comes with a **1-Year Service Warranty** from the date of purchase.

For any questions, concerns, or warranty claims, please contact KOOC customer support:

- **Email:** support@mykooc.com

- **Online Support:** Visit the official KOOC website for FAQs and additional resources.

Please have your model number (KSC200P) and proof of purchase ready when contacting support.