

Navaris 52416.17

Navaris Electric Plate Warmer (Model 52416.17) - Instruction Manual

Brand: Navaris

For optimal use and safety, please read this manual thoroughly.

1. INTRODUCTION

The Navaris Electric Plate Warmer is designed to heat up to 10 dinner plates simultaneously, ensuring your meals stay warm longer. This thin, folding blanket heater reaches temperatures of up to 165 degrees Fahrenheit (74 degrees Celsius) in approximately 10 minutes, enhancing your dining experience. Its compact design allows for easy storage when not in use.



Image: The Navaris Electric Plate Warmer in dark blue, folded on a kitchen counter with a white plate resting on it, ready for use.

2. SAFETY INSTRUCTIONS

Please read and follow these safety instructions carefully to prevent injury or damage to the product.

- Always unplug the plate warmer from the electrical outlet when not in use, before cleaning, or if a malfunction occurs.
- Do not immerse the plate warmer in water or any other liquid.
- Keep the plate warmer away from children and pets.
- Do not use the plate warmer if the cord or plug is damaged. Contact customer support for assistance.
- Ensure the plate warmer is placed on a stable, heat-resistant surface during operation.
- Use pot holders or dish towels when handling hot plates, as they can become very hot.
- Do not use the plate warmer for purposes other than warming dinner plates.
- Do not cover the plate warmer with additional materials while it is operating, as this may cause overheating.
- This item is not microwave or dishwasher safe.

3. PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- 1 x Navaris Electric Plate Warmer

4. SETUP

Before first use, ensure the plate warmer is clean and free from any packaging materials.

1. Unfold the plate warmer and place it on a flat, dry, and heat-resistant surface in your kitchen or dining area.
2. Ensure the power cord is easily accessible to an electrical outlet.



Image: The Navaris Electric Plate Warmer positioned on a kitchen counter, ready for use, with a stove in the background.

5. OPERATING INSTRUCTIONS

Follow these steps to warm your dinner plates:

1. Place up to 10 clean, dry dinner plates into the individual pockets of the plate warmer. The warmer accommodates plates up to 12.5 inches (32 cm) in diameter. Each pocket is designed for 2 ceramic dinner plates.
2. Ensure the plates are evenly distributed within the pockets.
3. Plug the power cord into a standard electrical outlet. The warmer will begin to heat immediately as there is no on/off switch.
4. Allow approximately 10 minutes for the plates to reach the optimal temperature of 165 degrees Fahrenheit (74 degrees Celsius).
5. Once the desired warmth is achieved, unplug the plate warmer from the outlet.
6. Carefully remove the warm plates using pot holders or oven mitts to avoid burns.



SAVE ENERGY

The plates in the reheater
are heated to 74 ° C
in just 10 minute

Image: A close-up view showing multiple white dinner plates neatly stacked within the heating pockets of the dark blue plate warmer.



Image: A top-down perspective of the dark blue plate warmer, illustrating its folded structure with white plates placed inside its compartments.

Instructional Video

Your browser does not support the video tag.

Video: This video demonstrates the process of placing plates into the Navaris Electric Plate Warmer and its quick heating capability.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your plate warmer.

1. Always unplug the plate warmer and allow it to cool completely before cleaning.
2. The fabric cover is removable for cleaning. Gently detach the cover from the heating element.
3. Hand wash the fabric cover only. Do not machine wash, bleach, tumble dry, iron, or dry clean.
4. Wipe the heating element with a dry or slightly damp cloth. Do not use abrasive cleaners or immerse the heating element in water.
5. Ensure all parts are completely dry before reassembling and storing.

7. STORAGE

The Navaris Electric Plate Warmer features a thin, folding design for convenient storage.

- After cleaning and ensuring the unit is completely dry, fold the plate warmer neatly.
- Store it in a cool, dry place, such as a cupboard or drawer, away from direct sunlight and moisture.

CABLE LENGTH:
5.74 ft



Image: A diagram illustrating the compact dimensions of the folded plate warmer, including its length, width, thickness, and cable length.

8. TROUBLESHOOTING

If you encounter any issues with your Navaris Electric Plate Warmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Plate warmer is not heating.	Not plugged in correctly; Power outlet malfunction; Damaged cord/unit.	Ensure the plug is fully inserted into a working outlet. Test the outlet with another appliance. If the cord or unit is damaged, discontinue use and contact customer support.
Plates are not warm enough.	Insufficient heating time; Too many plates; Plates too thick/large.	Allow the warmer to heat for the full 10 minutes. Ensure no more than 10 plates are used, and they fit within the 12.5-inch diameter limit.

Problem	Possible Cause	Solution
Unit feels excessively hot.	Overheating due to prolonged use or obstruction.	Unplug immediately and allow to cool. Ensure no additional materials are covering the warmer during operation. Do not leave unattended for extended periods.

9. SPECIFICATIONS

Feature	Detail
Brand	Navaris
Model Number	52416.17
Color	Dark Blue
Material	Fabric (Removable Cover)
Plate Capacity	Up to 10 dinner plates
Maximum Plate Diameter	12.5 inches (32 cm)
Maximum Temperature	165°F (74°C)
Heating Time	Approx. 10 minutes
Special Features	Compact storage, Removable cover for hand washing
Product Care	Hand Wash Only (cover)

10. WARRANTY AND SUPPORT

Navaris products are designed for quality and reliability. For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Navaris store.

You can find more information and contact options at the [Navaris Store on Amazon](#).

© 2023 Navaris. All rights reserved.

This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question