

[Manuals.plus](#) /

› [Navaris](#) /

› Navaris Electric Plate Warmer Instruction Manual for Model 52416.01

Navaris 52416.01

Navaris Electric Plate Warmer Instruction Manual

MODEL: 52416.01

Product Overview

The Navaris Electric Plate Warmer is designed to heat up to 10 dinner plates simultaneously, ensuring your meals stay warm longer. This device heats plates up to 74 °C (165 °F) in approximately 10 minutes, offering a convenient and energy-efficient alternative to oven warming. Its compact design allows for easy storage, and the removable fabric cover simplifies cleaning.



The Navaris Electric Plate Warmer, shown here in its compact, folded state on a kitchen counter, ready for use or storage.

Important Safety Instructions

- Read all instructions before use.
- Do not immerse the electrical unit in water or other liquids.
- This appliance is for household use only.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the cord away from heated surfaces.
- Do not use outdoors.
- **Caution: Hot Surface!** Always use oven mitts or a kitchen towel when handling heated plates.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Keep out of reach of children.

Package Contents

- 1x Navaris Electric Plate Warmer (Model 52416.01)

Setup

1. Unpack the electric plate warmer and ensure all components are present and undamaged.
2. Place the plate warmer on a flat, stable, and heat-resistant surface, away from flammable materials.
3. Ensure the power cord is easily accessible to an electrical outlet.

Operating Instructions

The Navaris Electric Plate Warmer is designed for simple operation:

1. **Prepare Plates:** Insert up to 10 dinner plates into the fabric pockets. The warmer accommodates plates up to 32 cm (12.6 inches) in diameter. Each pocket can hold two ceramic plates.
2. **Connect Power:** Plug the power cord into a standard 120V AC electrical outlet. The device will begin heating immediately.
3. **Heating Time:** Allow approximately 10 minutes for the plates to reach their maximum temperature of up to 74 °C (165 °F). Heating times may vary based on plate size, initial temperature, and thickness.
4. **Serve:** Once heated, carefully remove the plates using oven mitts or a thick kitchen towel.
5. **Disconnect Power:** After use, unplug the plate warmer from the electrical outlet.



SAVE ENERGY

The plates in the reheater
are heated to 74 °C
in just 10 minute

Plates inserted into the warming pockets of the Navaris Electric Plate Warmer. The device efficiently heats plates to 74 °C in approximately 10 minutes.



A closer look at how plates are positioned within the warming pockets for optimal heat distribution.

Maintenance and Cleaning

Proper maintenance ensures the longevity of your plate warmer:

1. **Unplug:** Always ensure the plate warmer is unplugged and completely cooled before cleaning.
2. **Remove Cover:** The fabric cover is removable for cleaning.

3. **Hand Wash Only:** Hand wash the fabric cover with mild soap and water. Do not machine wash or tumble dry.
4. **Drying:** Allow the fabric cover to air dry completely before reattaching it to the heating element.
5. **Storage:** The plate warmer can be folded for compact storage when not in use. Store in a dry place.

Warning: Do not immerse the electrical heating element in water. Do not use abrasive cleaners or scouring pads on any part of the appliance.

Troubleshooting

If you encounter issues with your Navaris Electric Plate Warmer, please refer to the following common solutions:

- **Appliance not heating:**
 - Ensure the power cord is securely plugged into a functional electrical outlet.
 - Check if the outlet is receiving power by testing it with another appliance.
- **Plates not warm enough:**
 - Allow the full 10 minutes for heating. Thicker or larger plates may require slightly longer.
 - Ensure the plates are properly inserted into the pockets.

If the problem persists, please contact customer support.

Specifications

Feature	Detail
Model Number	52416.01
Power	200 W
Voltage	120 V AC
Cable Length	1.75 m (5.74 ft)
Material	80% Polyester, 20% Cotton
Max Plate Diameter	32 cm (12.6 inches)
Max Temperature	74 °C (165 °F)
Dimensions (L x W x H)	34 x 33.2 x 5.2 cm (folded)
Weight	850 Grams
Care Instructions	Hand wash fabric cover only

CABLE LENGTH:
5.74 ft



Detailed dimensions of the folded plate warmer: 11.8 inches width, 13.4 inches length, 1.18 inches height, and a cable length of 5.74 feet.

Disposal Information

Do not dispose of this appliance with general household waste. Please dispose of it at an authorized recycling facility for electrical and electronic equipment. Contact your local authority for information on available collection points.

Warranty and Support

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Navaris customer service through their official website.

© 2023 Navaris. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question