

[manuals.plus](#) /

› [Deerma](#) /

› [Deerma DX700S Vacuum Cleaner Instruction Manual](#)

Deerma DX700S

Deerma DX700S Vacuum Cleaner Instruction Manual

Model: DX700S

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Deerma DX700S Vacuum Cleaner. Please read these instructions carefully before operating the appliance and retain them for future reference.



Image 1.1: The Deerma DX700S Vacuum Cleaner shown in its full stick configuration and as a handheld unit.

2. PRODUCT OVERVIEW AND COMPONENTS

The Deerma DX700S is a versatile 2-in-1 vacuum cleaner designed for both upright and handheld use. It features a powerful motor and a multi-stage filtration system.

Included Components:

- Main Vacuum Unit (motor and dust cup)
- Extension Tube (for stick mode)
- Floor Brush
- Crevice Nozzle
- Small Brush Attachment
- Power Cord

High Suction Power



Image 2.1: Key features of the DX700S, including its convertible design and filtration system.

3. SETUP AND ASSEMBLY

The Deerma DX700S can be assembled into two primary configurations: a stick vacuum for floor cleaning or a handheld vacuum for upholstery and tight spaces.

3.1 Assembling as a Stick Vacuum:

1. Attach the Floor Brush to the bottom of the Extension Tube. Ensure it clicks securely into place.
2. Connect the other end of the Extension Tube to the main Vacuum Unit. Press firmly until it locks.
3. Ensure all connections are secure before use.

3.2 Assembling as a Handheld Vacuum:

1. Detach the Extension Tube from the main Vacuum Unit if it is already assembled.
2. Attach your desired accessory (Crevice Nozzle or Small Brush Attachment) directly to the main Vacuum

Unit. Ensure it clicks securely.

Lightweight Design



Clean High, Low and Everywhere in Between



Image 3.1: The vacuum cleaner configured for both stick and handheld use.

4. OPERATION

The Deerma DX700S is a corded electric vacuum cleaner. Always ensure it is plugged into a suitable power outlet before operation.

4.1 Powering On/Off:

- Plug the power cord into a 220V electrical outlet.
- Locate the power button (push button/touch control) on the main Vacuum Unit.
- Press the power button to turn the vacuum cleaner ON.
- Press the power button again to turn the vacuum cleaner OFF.

4.2 Using Different Configurations:

- **Stick Mode:** Ideal for cleaning hard floors and carpets. The floor brush is designed for efficient debris collection.
- **Handheld Mode:** Use with the crevice nozzle for narrow gaps, corners, and edges. Use with the small brush attachment for upholstery, curtains, and delicate surfaces.



Image 4.1: Operating the DX700S in stick mode for floor cleaning.



Image 4.2: Operating the DX700S in handheld mode for cleaning upholstery.

4.3 Maneuverability:

The vacuum cleaner features a flexible floor brush that allows for 180-degree rotation, enabling easy cleaning around furniture and in tight spaces.

Now Reach Every Corner of Your Home with 180° Rotation



Image 4.3: The vacuum's design allows for easy navigation and cleaning of various areas.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your Deerma DX700S Vacuum Cleaner.

5.1 Emptying the Dust Cup:

1. Ensure the vacuum cleaner is turned OFF and unplugged from the power outlet.
2. Locate the dust cup release button on the main Vacuum Unit.
3. Press the button to detach the dust cup.
4. Empty the contents of the dust cup into a waste bin.
5. Reattach the dust cup to the main unit, ensuring it clicks securely.

5.2 Cleaning the Filters:

The DX700S features a three-stage filtration system. The waste container and mesh filter can be rinsed with running water.

1. After emptying the dust cup, remove the internal filters.
2. Rinse the mesh filter and the interior of the dust cup under running water.
3. Allow all components to air dry completely before reassembling. Do not use the vacuum with wet filters.
4. Reinsert the dry filters and reattach the dust cup.



Image 5.1: Internal view illustrating the vacuum's airflow and filtration components.

6. TROUBLESHOOTING

If you encounter issues with your Deerma DX700S, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet fault; Power button not pressed correctly	Check power cord connection; Test outlet with another device; Press power button firmly
Low suction power	Dust cup full; Filters clogged; Obstruction in nozzle/tube	Empty dust cup; Clean/dry filters; Remove any obstructions
Unusual noise during operation	Obstruction in brush roll or air path; Loose component	Inspect and clear brush roll/air path; Ensure all components are securely attached

7. SPECIFICATIONS

Technical details for the Deerma DX700S Vacuum Cleaner:

Feature	Detail
Brand	Deerma
Model Name	DX700S
Special Feature	Lightweight, 2-in-1 Handheld/Stick
Filter Type	Cloth (Three-stage filtration)
Power Source	Corded Electric
Wattage	600 Watts
Suction Power	15000 Pa
Capacity (Dust Cup)	800 Milliliters
Voltage	220 Volts
Product Dimensions	120L x 21W x 18H Centimeters
Item Weight	1.6 kg (1600 Grams)
Noise Level	75 Decibels
Recommended Use	Indoor, Hard Floor, Upholstery

Product dimensions



Image 7.1: Product dimensions of the Deerma DX700S.

8. WARRANTY AND SUPPORT

For product support, warranty claims, or further assistance, please contact the manufacturer or importer directly.

Manufacturer:

Guangdong Deerma Technology Co., Ltd.

Importer (India):

ALLIN IMPEX SERVICES PRIVATE LIMITED

B-75, Sector-6, Noida, UP-201301

Mobile: 9313132789


Email: sales@allinexporters.com


Battery Life Information:

The stated battery life for this product is 2 years. Please refer to your purchase documentation for specific warranty terms and conditions.

© 2024 Deerma. All rights reserved.

Related Documents - DX700S

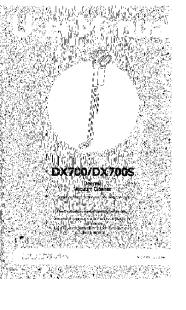	<p>Deerma Vacuum Cleaner DX700/DX700S User Manual and Safety Guide Comprehensive user manual and safety guide for the Deerma DX700/DX700S vacuum cleaner, covering assembly, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p>Deerma DX700/DX700S Vacuum Cleaner User Manual User manual for the Deerma DX700/DX700S vacuum cleaner, providing important safety instructions, assembly guides, usage instructions, and maintenance tips.</p>
	<p>Deerma DX700/DX700S Vacuum Cleaner User Manual Comprehensive user manual for the Deerma DX700/DX700S Vacuum Cleaner, covering safety instructions, assembly, usage, cleaning, maintenance, and troubleshooting.</p>
	<p>Deerma DX700/DX700S Vertical Vacuum Cleaner User Manual and Guide Comprehensive user manual for the Deerma DX700 and DX700S vertical vacuum cleaner, covering setup, operation, maintenance, troubleshooting, and safety guidelines.</p>
	<p>Deerma VC20 Plus Handheld Cordless Vacuum Cleaner User Manual Comprehensive user manual for the Deerma VC20 Plus handheld cordless vacuum cleaner. Includes instructions on operation, safety precautions, cleaning, maintenance, troubleshooting, and technical specifications.</p>

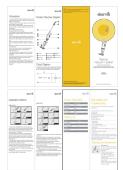

[Deerma Vacuum Cleaner DX118C User Manual](#)

User manual for the Deerma Vacuum Cleaner DX118C, providing instructions on product structure, application methods, product parameters, packing list, troubleshooting, and cleaning/maintenance.