

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sunnydaze](#) /

› [Sunnydaze 10x13 Soft Top Patio Gazebo Instruction Manual](#)

Sunnydaze CRE-168

Sunnydaze 10x13 Soft Top Patio Gazebo Instruction Manual

Model: CRE-168

[Safety Information](#)

[Package
Contents](#)

[Assembly
Instructions](#)

[Operating
Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Sunnydaze 10x13 Soft Top Patio Gazebo. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: Fully assembled Sunnydaze 10x13 Soft Top Patio Gazebo in tan.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Always assemble the gazebo with at least two people.
- Ensure all connections are secure before use.
- Do not use the gazebo in strong winds, heavy rain, or snow. Disassemble or secure the canopy during adverse weather conditions to prevent damage.
- Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- Do not hang heavy objects from the frame.
- Supervise children around the gazebo.
- Periodically check all nuts and bolts for tightness.
- This gazebo is designed for temporary shade and shelter. It is not intended as a permanent structure.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- 4 x Legs
- 4 x Feet

- 8 x Beams
- 13 x Trusses
- 4 x Sidewalls
- 4 x Screens (Mosquito Netting)
- 2 x Peak Hubs
- 1 x Main Canopy
- 1 x Upper Canopy
- 4 x Long Net Poles
- 4 x Short Net Poles
- 1 x Hardware Kit (includes nuts, bolts, wrenches, etc.)

ASSEMBLY INSTRUCTIONS

Assembly requires two people. Please follow these steps carefully. Refer to the diagrams for visual guidance.

Step 1: Assemble the Base Frame

1. Lay out the 4 legs and 4 feet on a flat, level surface.
2. Attach the feet to the bottom of each leg using the provided hardware.
3. Connect the 8 beams to the top of the legs to form the rectangular base structure. Ensure all bolts are finger-tight at this stage.



Image: Detailed view of the steel frame structure.

Step 2: Install the Roof Trusses and Peak Hubs

1. Attach the 13 trusses to the beams and connect them to the 2 peak hubs to form the roof structure.
2. Ensure all connections are secure.

Step 3: Attach the Canopies

1. Carefully place the main canopy over the assembled roof frame. Ensure it is centered and all corners are aligned.
2. Secure the main canopy to the frame using the integrated fasteners.
3. Install the upper canopy onto the smaller top frame, ensuring it is properly seated for ventilation.



Image: Canopy fabric secured to the frame.

Step 4: Install Sidewalls and Screens

1. Attach the long and short net poles to the frame as indicated in the diagram.
2. Hang the 4 screens (mosquito netting) from the designated tracks or hooks on the frame.
3. Hang the 4 sidewalls (privacy curtains) over the screens. The double zippers allow independent operation of screens and sidewalls.
4. Use the fabric hook-and-loop fasteners to secure the sidewalls to the legs or tie them back when not in use.

- 1** Two levels of privacy - mesh screen and privacy walls
- 2** Strong, steel frame and heavy-duty, polyester fabric
- 3** Attached hook-and-loop fasteners glide the side walls open and closed



Image: Features of the gazebo including mesh screens and privacy walls.



Image: Detail of privacy wall with fabric hook-and-loop fastener.



Sunnydaze
DECOR

1-YEAR WARRANTY



U.S. BASED SELLER

Image: Visual comparison of screens versus privacy walls.

Step 5: Final Tightening

Once all components are in place, go back and fully tighten all nuts and bolts using the provided tools. Do not overtighten.

OPERATING INSTRUCTIONS

Using the Mosquito Netting

The mesh screens are designed to provide ventilation while keeping insects out. They can be zipped closed for full enclosure or tied back to allow open access.

Using the Privacy Curtains

The privacy curtains offer additional shade and privacy. They can be pulled closed over the mesh screens and secured with zippers, or tied back to the gazebo legs using the integrated fabric fasteners when not needed.

Securing the Gazebo

For added stability, especially in moderate weather, consider using stakes or weights (not included) to secure the gazebo feet to the ground.

MAINTENANCE

Canopy Care

- Clean the polyester canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners.
- Allow the canopy to air dry completely before folding and storing to prevent mildew.
- Remove the canopy during strong winds or heavy precipitation to prolong its lifespan.

Frame Care

- Wipe the steel frame with a damp cloth to remove dirt and debris.
- Inspect the frame periodically for any signs of rust or damage. Touch up any scratches with rust-inhibiting paint if necessary.
- Ensure all bolts and connections remain tight.


Seasonal Storage

For prolonged periods of non-use or during winter months, it is recommended to disassemble the gazebo and store all components in a dry, protected area to prevent damage and extend product life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Canopy does not fit or is too tight.	Incorrect assembly of frame; canopy not stretched evenly; fabric shrinkage.	Ensure frame is assembled correctly and square. Try loosening frame connections slightly, fitting the canopy, then re-tightening. Allow fabric to stretch over time.
Water pooling on canopy.	Canopy not taut enough; improper installation of upper canopy; heavy rainfall.	Ensure canopy is stretched tightly over the frame. Verify upper canopy is correctly positioned for drainage. Remove canopy during heavy rain.
Gazebo feels unstable.	Loose connections; not properly anchored.	Check and tighten all bolts and connections. Use ground stakes or weights to secure the gazebo legs.
Zippers on sidewalls/screens stick or break.	Dirt or debris in zipper teeth; excessive force.	Clean zipper teeth with a small brush. Apply a zipper lubricant. Operate zippers gently.

SPECIFICATIONS

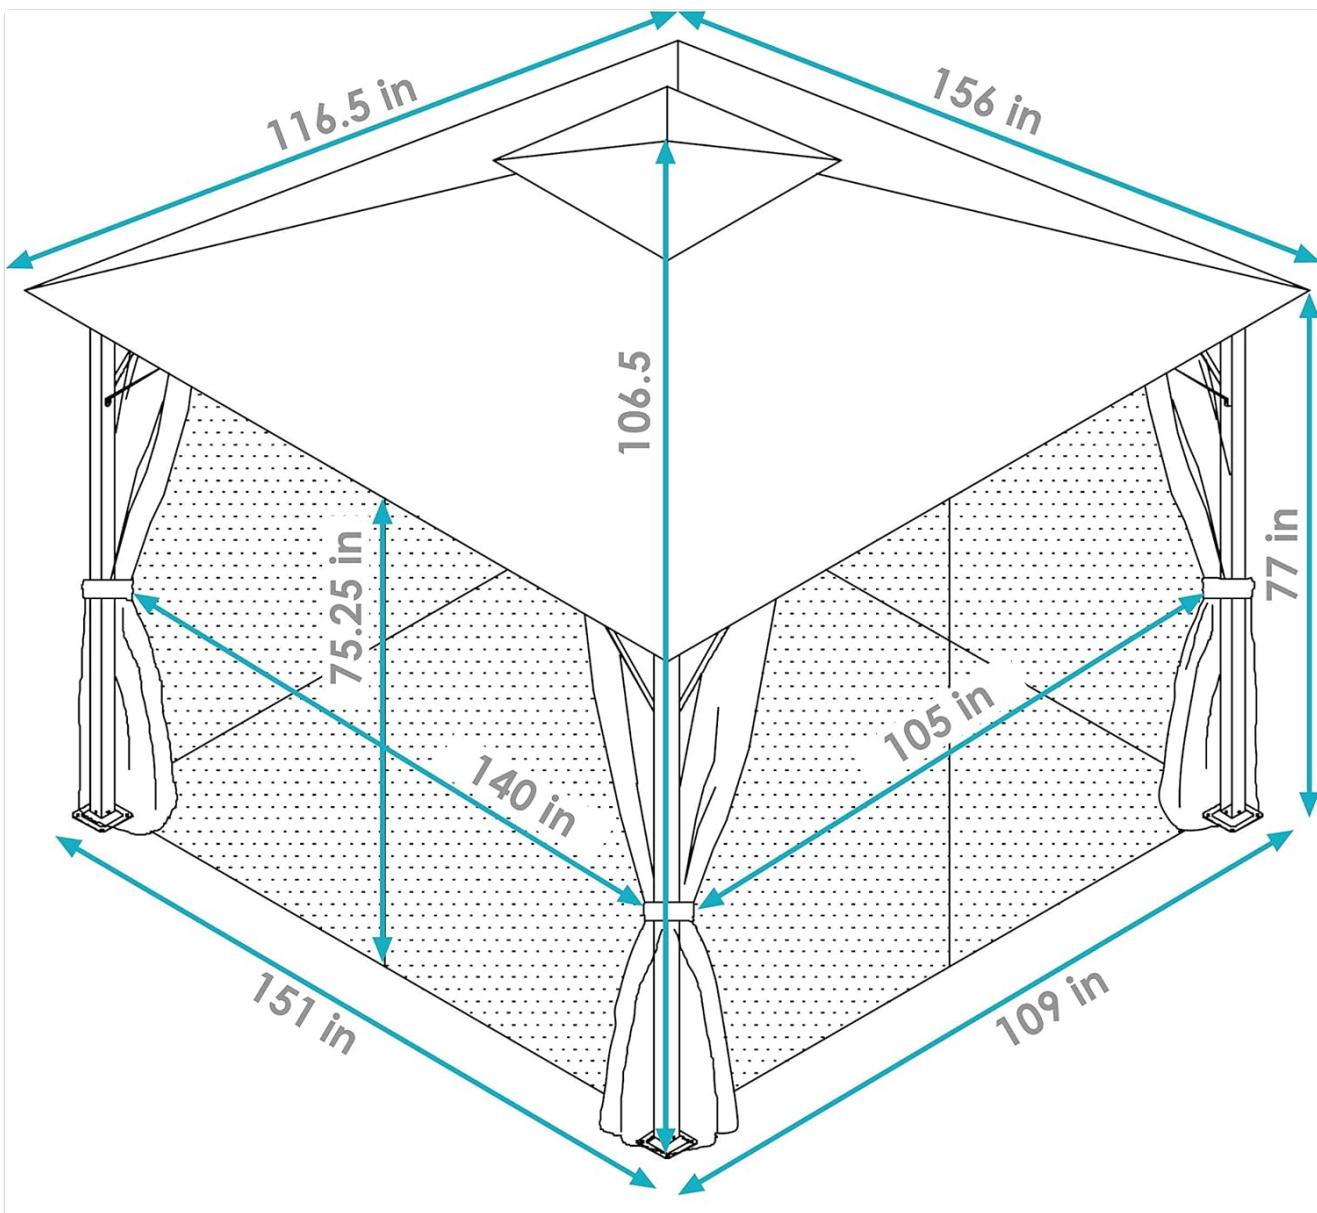

Shaded Area: 126.2 sq. ft.

Image: Dimensional diagram of the gazebo.

Feature	Detail
Brand	Sunnydaze
Model Number	CRE-168
Product Dimensions (Overall/Roof)	156" L x 116.5" W x 106.5" H
Frame Dimensions (Base)	140" W x 105" D
Head Clearance	75.25" (103.5" at frame peak)
Shaded Area	Up to 126.2 square feet
Item Weight	106 Pounds
Frame Material	Alloy Steel (60mm)
Canopy Material	100 GSM Polyester

Feature	Detail
Color	Tan
Water Resistance Level	Not Water Resistant
UV Protection	UPF 30
Assembly Required	Yes (Two people recommended)

WARRANTY & SUPPORT

Manufacturer's Warranty

Sunnydaze Decor backs its products with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

Customer Support

For questions, missing parts, or warranty claims, please contact Sunnydaze Decor customer service. Refer to your purchase documentation or the official Sunnydaze Decor website for current contact information.

Online Resources: You may find additional support and product information on the [Sunnydaze Decor Brand Store](#).