

BOMAZ Universal Remote Control

Universal Replacement Remote Control User Manual

Model: Universal Remote Control

1. INTRODUCTION

This manual provides instructions for the BOMAZ Universal Replacement Remote Control, designed for use with various Element Smart LED TV models. This remote offers a straightforward solution for controlling your compatible television without complex setup procedures.

Compatible Element Smart LED TV Models:

- E4SFT5517
- E2SW5018
- E4SW5518
- ELST3216H
- ELSJ4016
- ELST5016S
- ELSJ5017
- ELSW3917BF
- E4STA5017
- E4SFT5017

2. PRODUCT FEATURES

- Universal compatibility with specified Element Smart LED TV models.
- No setup or programming required; functions directly out of the box.
- Equipped with dedicated quick-access buttons for Netflix, YouTube, VUDU, and Pandora.
- Features soft-touch buttons for comfortable use.
- Fast response time, less than 0.2 seconds.
- Durable construction, supporting over 150,000 clicks.
- Operable distance of more than 8 meters.
- Constructed from ABS material.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Figure 3.1: Battery compartment with two AAA battery slots.

3.2 Initial Use

This universal replacement remote control is designed to work out of the box with compatible Element Smart LED TVs. No programming or pairing is required. Once batteries are installed, point the remote towards your television and begin operation.



Figure 3.2: Remote control in use, demonstrating no setup is needed.

4. OPERATING INSTRUCTIONS

The remote control utilizes infrared (IR) technology. Ensure a clear line of sight between the remote's emitter and the TV's IR receiver for optimal performance.



Figure 4.1: Remote control using infrared technology.

4.1 Button Functions Overview



Figure 4.2: Front view of the remote control.

Button	Function
Power ()	Turns the TV on or off.
Mute ()	Mutes or unmutes the TV audio.
Number Buttons (0-9)	Direct channel selection.
Netflix	Direct access to the Netflix application.
YouTube	Direct access to the YouTube application.

Button	Function
VUDU	Direct access to the VUDU application.
Pandora	Direct access to the Pandora application.
MENU	Opens the TV's main menu.
SOURCE	Selects input source (HDMI, AV, etc.).
Navigation Pad (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections.
RETURN	Goes back to the previous screen or menu.
EXIT	Exits the current menu or application.
VOL +/-	Adjusts the volume level.
CH ▲/▼	Changes channels up or down.
ASPECT	Adjusts the screen aspect ratio.
TV	Switches to TV mode.
Playback Controls (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next)	Controls media playback.
INFO	Displays program information.
FREEZE	Freezes the current screen.
CC	Activates or deactivates Closed Captions.
MTS	Selects Multi-channel Television Sound options.
V-CHIP	Accesses V-Chip parental controls.
P.MODE	Cycles through picture modes.
S.MODE	Cycles through sound modes.
CH.LIST	Displays the channel list.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

5.3 Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Verify there is a clear path between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range (typically up to 8 meters).
- **TV Power:** Confirm that the TV is powered on and not in standby mode.

6.2 Specific Buttons Not Working

- If only certain buttons are unresponsive, try replacing the batteries. Low battery power can sometimes affect specific functions before total failure.
- Ensure the remote is clean and there is no debris lodged under the buttons.

7. SPECIFICATIONS

Feature	Detail
Brand	BOMAZ
Compatible Devices	Element Smart LED Televisions
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Max Number of Supported Devices	1 (Television)
Batteries Required	2 AAA batteries (not included)
Item Weight	3.2 ounces
Package Dimensions	9.61 x 4.37 x 1.14 inches
Material	ABS
Operable Distance	More than 8 meters

8. WARRANTY AND SUPPORT

This product includes a warranty for return and replacement exchange service for 365 days from the date of purchase. For support or warranty claims, please refer to your purchase documentation or contact the retailer.

© 2024 BOMAZ. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question